


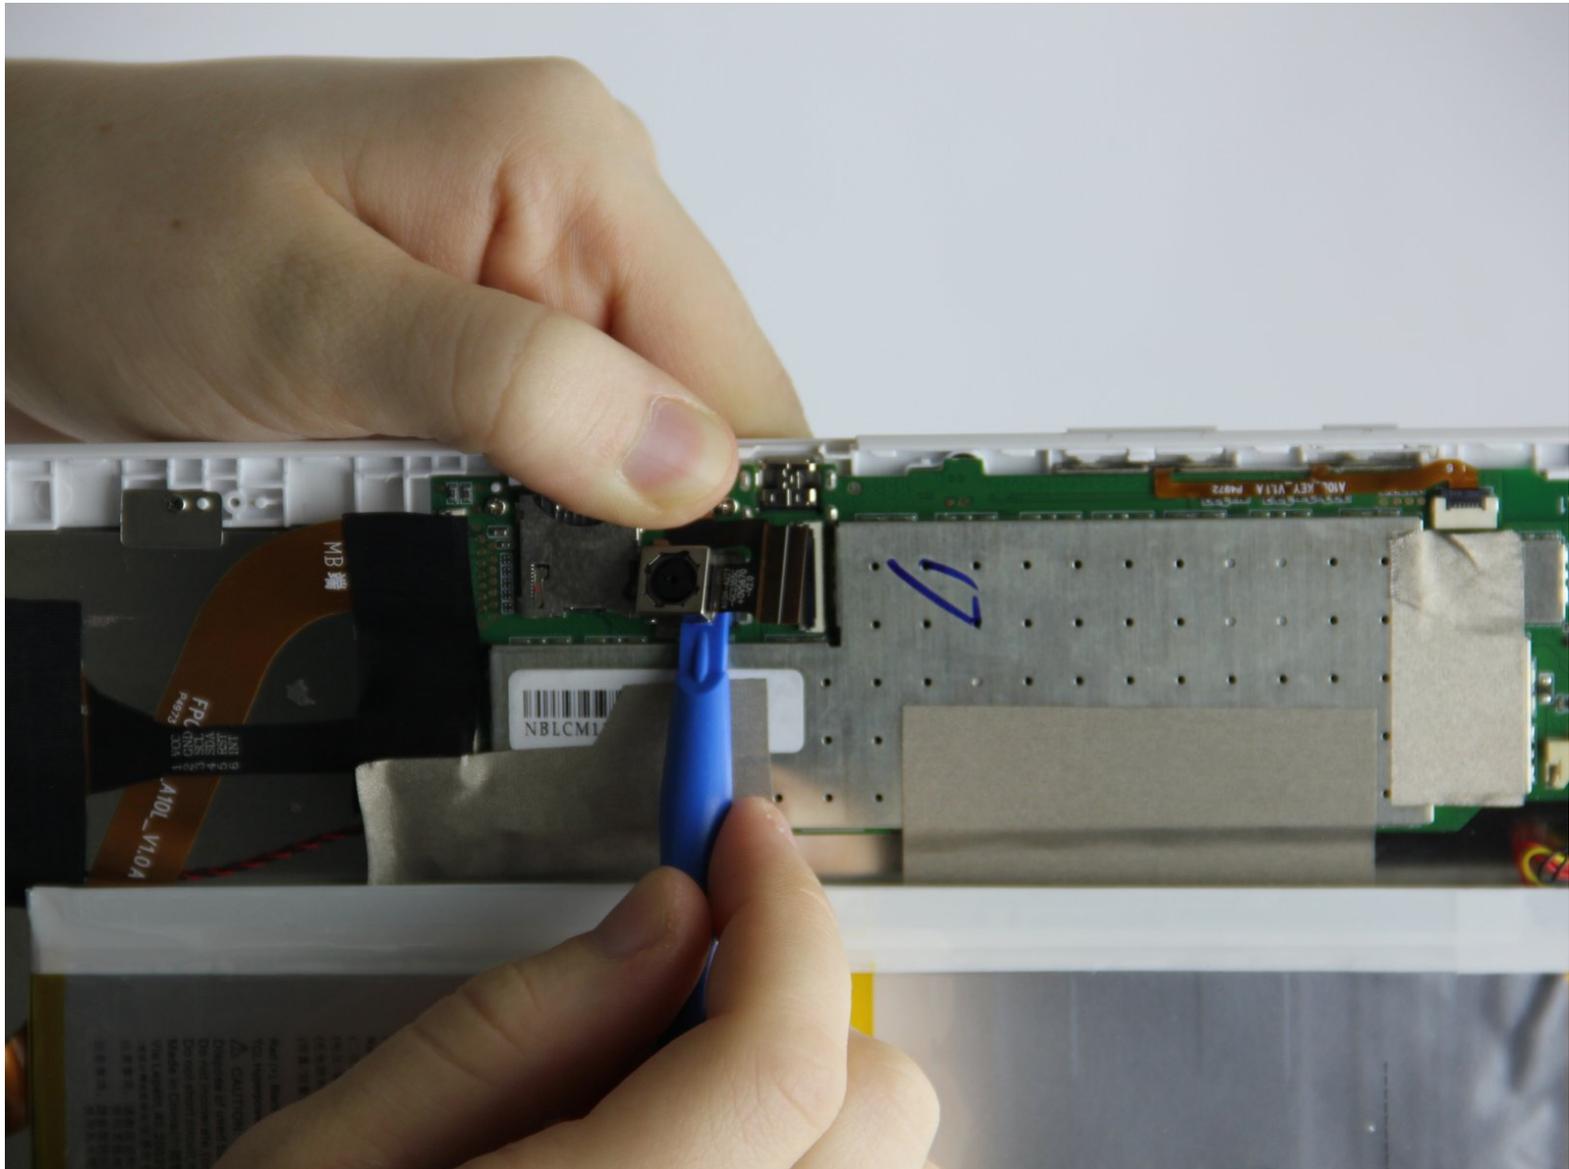

Acer Iconia One 10 B3-A30 Repair Camera Replacement

In this guide we'll show you how to remove both the front and back camera.

Written By: Austin Pickart




INTRODUCTION

If one or both of your cameras are faulty, they can be removed through the use of a plastic opening tool and a Phillips #00 screwdriver.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Camera

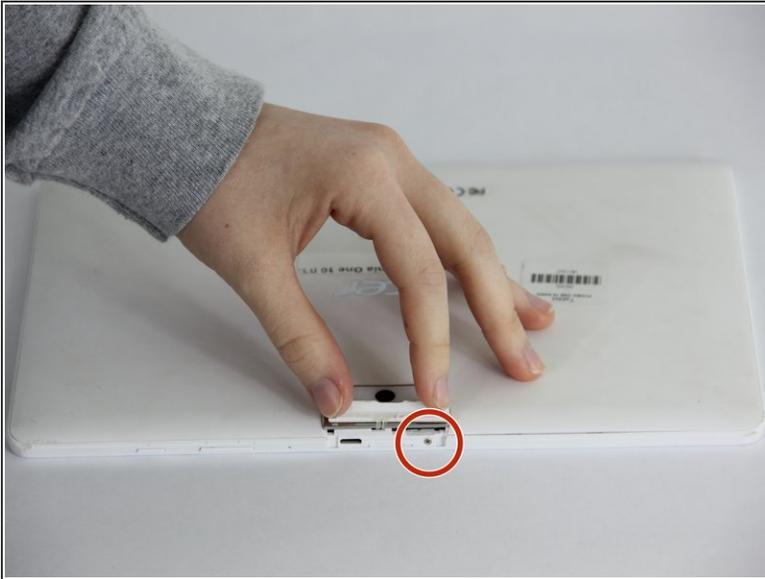

 Make sure the device is powered off.


- Pry open media port cover at the top of the tablet.
- Use the Phillips 00 screwdriver to remove the 1 mm screw.

Step 2




- Using the metal spudger, carefully pry open the back cover.

Step 3

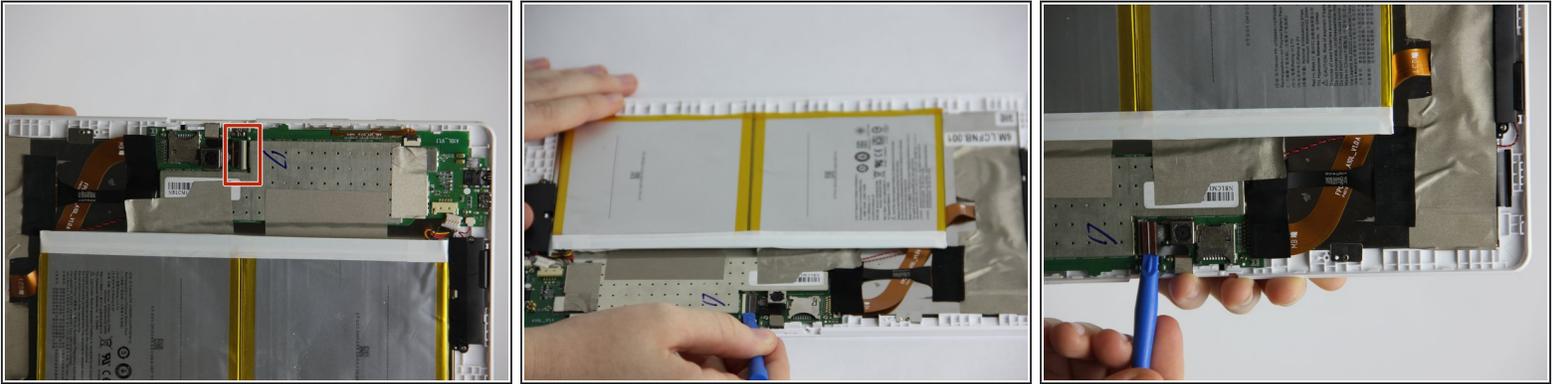

- Using the plastic opening tool gently place the tip of it under the connection and pry up. It will pop out.

Step 4

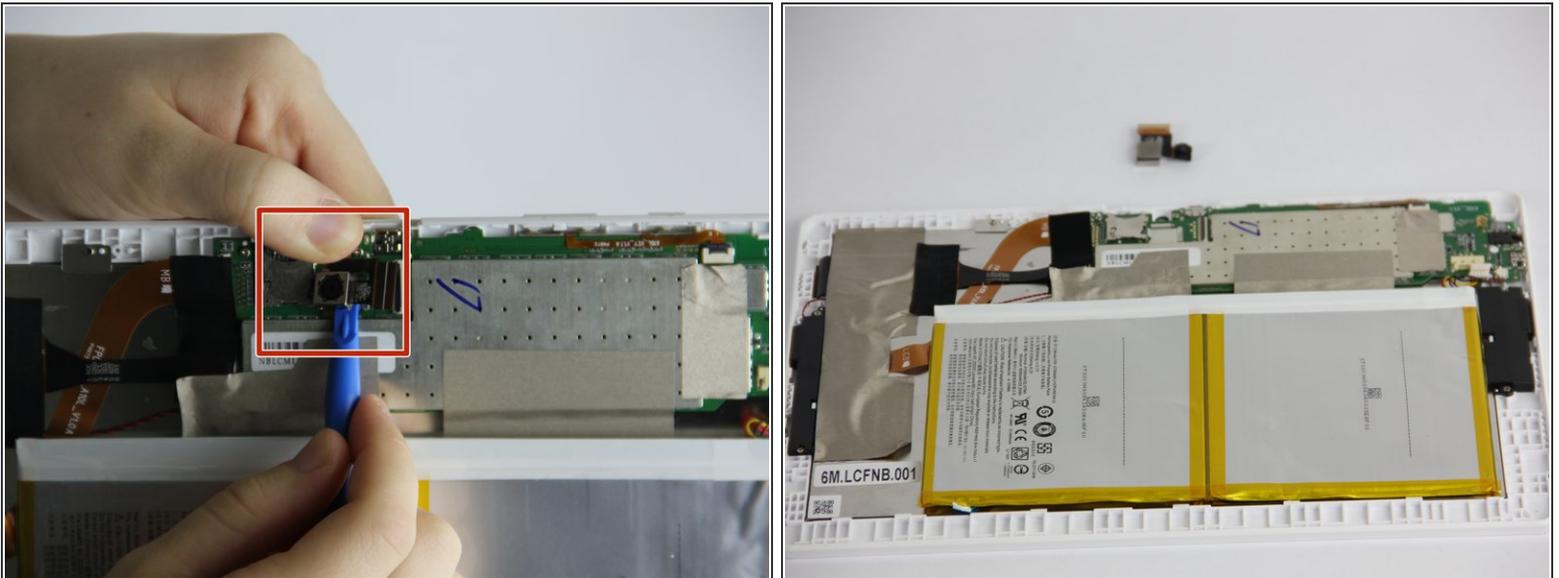

- Use the plastic opening tool to pry up the rear facing camera. Once removed the front facing camera will come out as well.

To reassemble your device, follow these instructions in reverse order.