

Garmin Nuvi 56LMT Display Screen Replacement

How to replace the display screen for the Garmin Nuvi 56lmt.

Written By: Dustin Saxon



INTRODUCTION

This guide will show you how to replace the display screen on your Garmin Nuvi 56lmt.

TOOLS:

- iFixit Opening Tools (1)
- T5 Torx Screwdriver (1)

Step 1 — Display Screen



- *i* Power down the device before proceeding.
- Locate the four 11.0 mm Torx screws and remove them with the T5 Torx screwdriver.

Step 2




• Find the crevice where the front and back of the device meet.

Step 3




- Run the plastic opening tool around the border of the device until it can be easily pried open by hand.
- Be careful to not damage the ribbon cable by completely pulling the back from the front.

Step 4

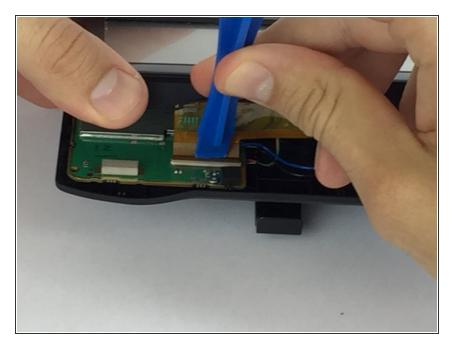

• Carefully use the spudger to flip open the ZIF connector.

Step 5

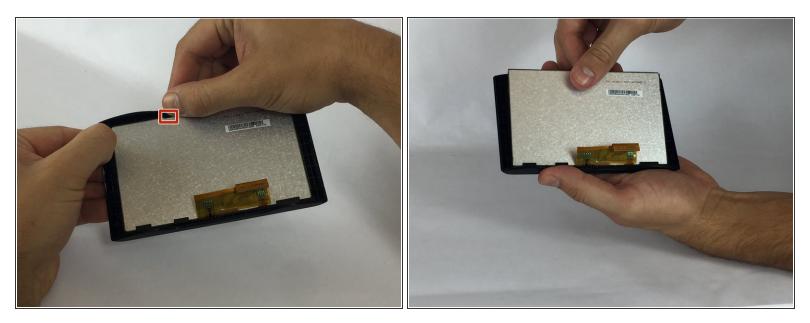

- With your fingers hold back each of the clips located around the border of the screens back.
- Pull screen up and slide out in the opposite direction of the ribbon to avoid snapping the fixed clips.

To reassemble your device, follow these instructions in reverse order.