



# ASUS Chromebook C300MA-DH01 Keyboard & Trackpad Assembly Replacement

This guide will demonstrate how to replace the keyboard and trackpad assembly on your ASUS Chromebook C300MA-DH01.

Written By: Gina Altimari



---

## INTRODUCTION

This guide will show you how to replace a broken or dysfunctional keyboard on your Chromebook. Before starting, remember to completely disconnect your device from any power sources and ensure your device is turned off. Always use caution when working with electronic components.



### TOOLS:

- [JIS #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Keyboard & Trackpad Assembly



- Flip the Chromebook over so the bottom of the device is facing up.

## Step 2




- Using the JIS-J0 Screwdriver, remove the following screws from the bottom:
- (5) Five 6mm screws
- (6) Six 8mm screws

### Step 3



- Gently wedge the spudger in between the bottom of the device and the keyboard, and carefully pry the cover open. Then, carefully lift up on keyboard.

### Step 4

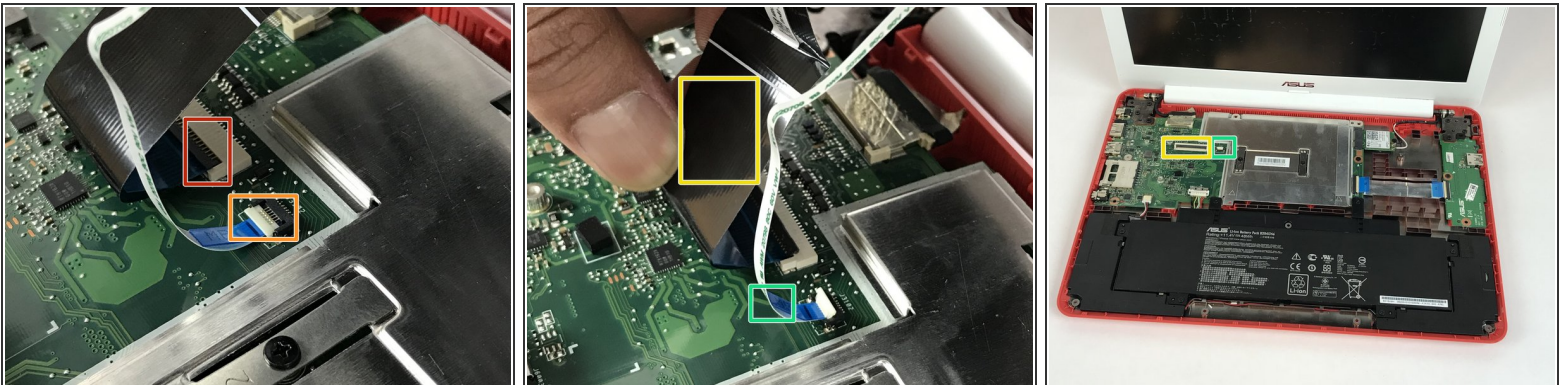

- i** Gently detach connecting cables.
  - Carefully flip up the large black tab.
  - Carefully flip up small white tab.
  - Remove the corresponding black cable.
  - Remove the corresponding white cable.
- i** The keyboard will be fully detached at this point.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:08:01 AM (MST).

