



Lenovo Thinkpad T410i Keyboard Replacement

How to replace the keyboard for the Lenovo Thinkpad T410i

Written By: Gabriel Cordova



INTRODUCTION

In this guide we show you how to successfully remove the old keyboard assembly for the Lenovo Thinkpad T410i when keys have become sticky, unresponsive, or have gone missing.

Guide Notes

- This is a hardware installation only, no firmware is required.
- The Lenovo Thinkpad T410i keyboard is flexible yet fragile, when uninstalling be sure to **remove all restraints before detaching the keyboard** as it may snap.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



PARTS:

- [Keyboard for Lenovo Thinkpad T410i](#) (1)


Step 1 — Keyboard



- Remove the battery.

❗ Unfortunately, the battery isn't pictured because our device did not come with a battery at the time of the creation of this guide.

Step 2

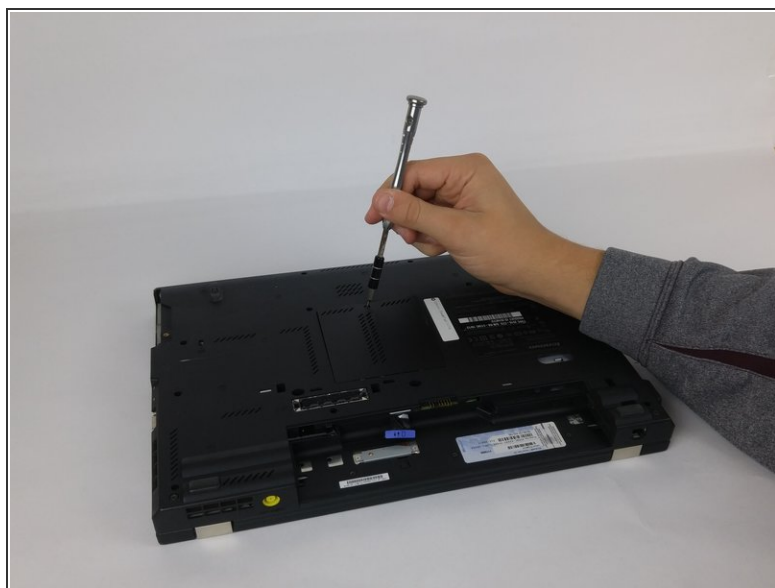



- Loosen (do not remove) the 14.0mm screw in the DIMM slot cover with a Phillips #2 screwdriver.

Step 3




- Pry loose the top left key-covers with a plastic opening tool.

Step 4

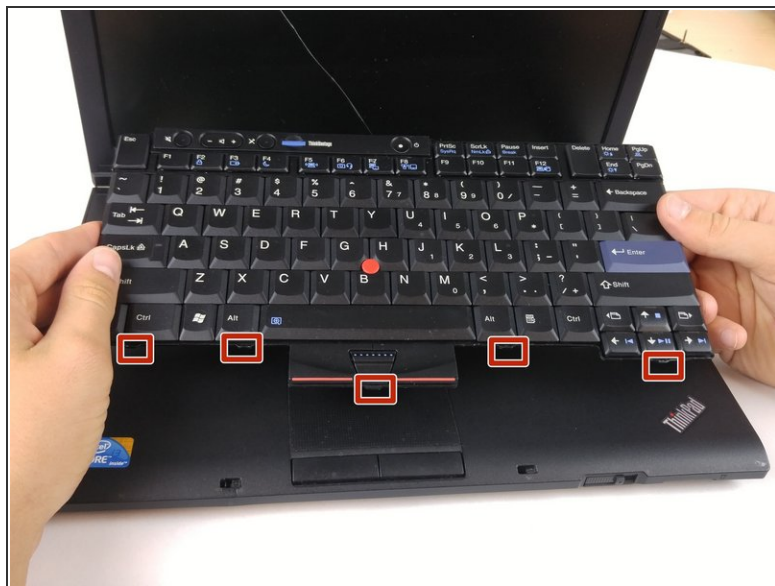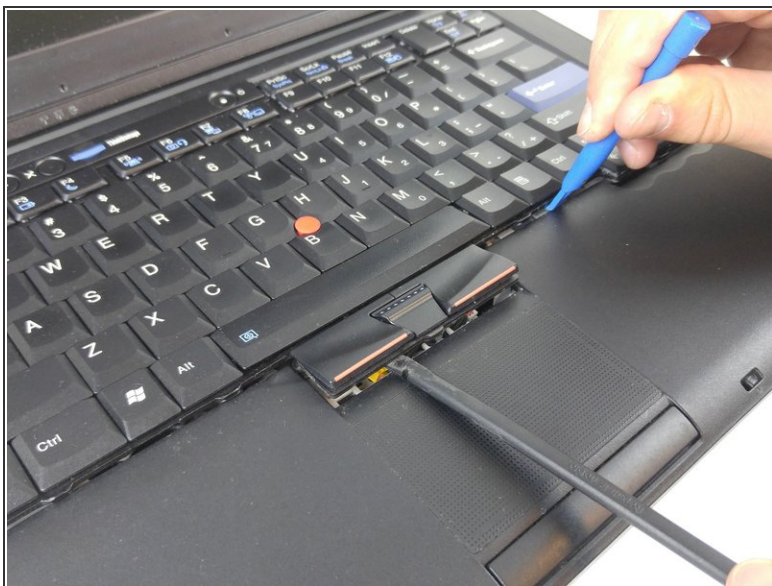

- Nudge the plastic tabs around the keyboard using the plastic opening tool while lifting it with a spudger.
- Ensure all 5 clips are loosened from the front of the keyboard before removing.

Step 5

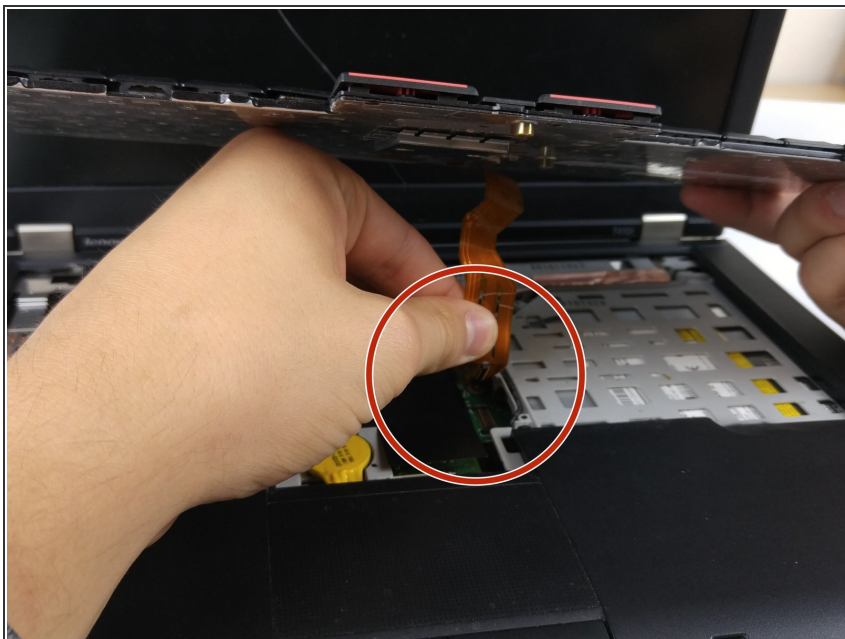

- Slowly raise keyboard away from the laptop. A short ribbon must be removed before keyboard is free.
- Remove the keyboard from the device.

To reassemble your device, follow these instructions in reverse order.