




Hoover Presto 2-in-1 Cordless Stick Rotating Brush Roll Replacement

Replacement guide on how to replace the rotating brush roll.

Written By: katia zubieta

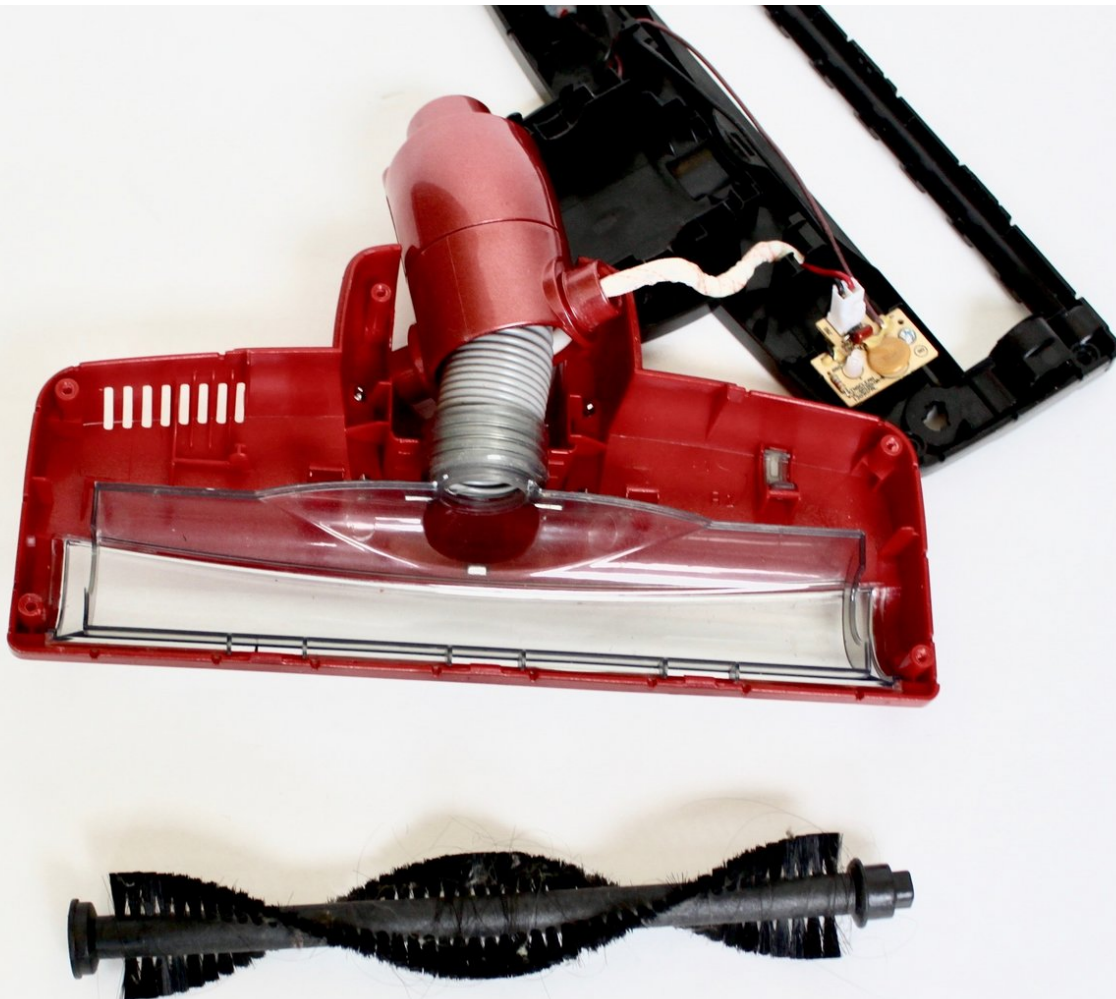

INTRODUCTION

Brush rolls are made to move at high speeds in order to pick up dirt from carpet and wood floors. Sometimes the brush roll can get clogged or break. Follow this guide for brush roll replacement.



TOOLS:




- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Rotating Brush Roll




- Press grey release button on stick vacuum to release vacuum head.

Step 2

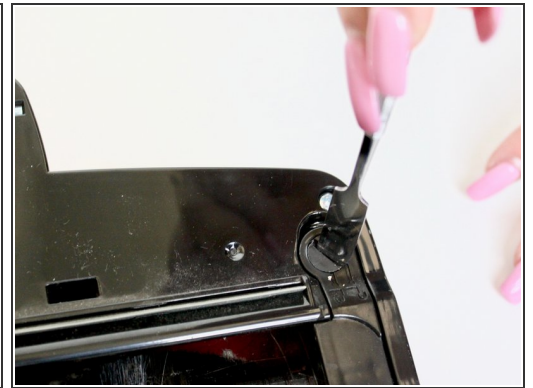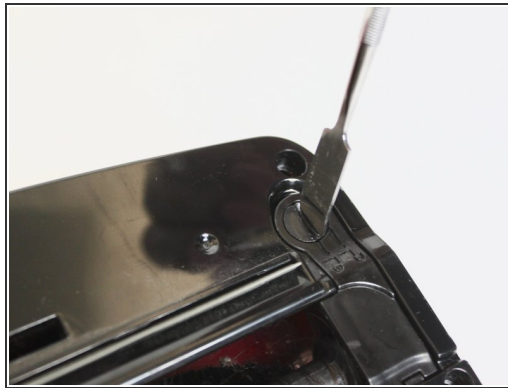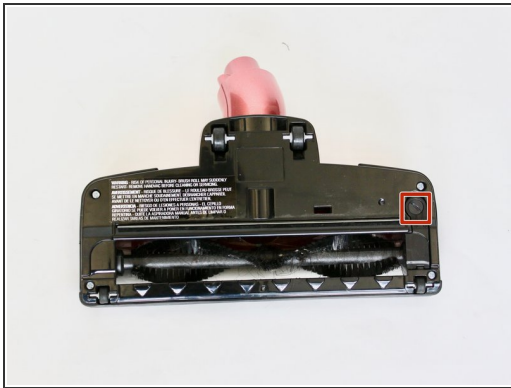


- Locate the circular black turn switch, which is in the upper right corner of the backside of the vacuum head
- Using a metal spudger, place the tool in the indent of the circular turn switch and turn it from the left to the right or from the "locked" symbol to the "unlocked" symbol

Step 3

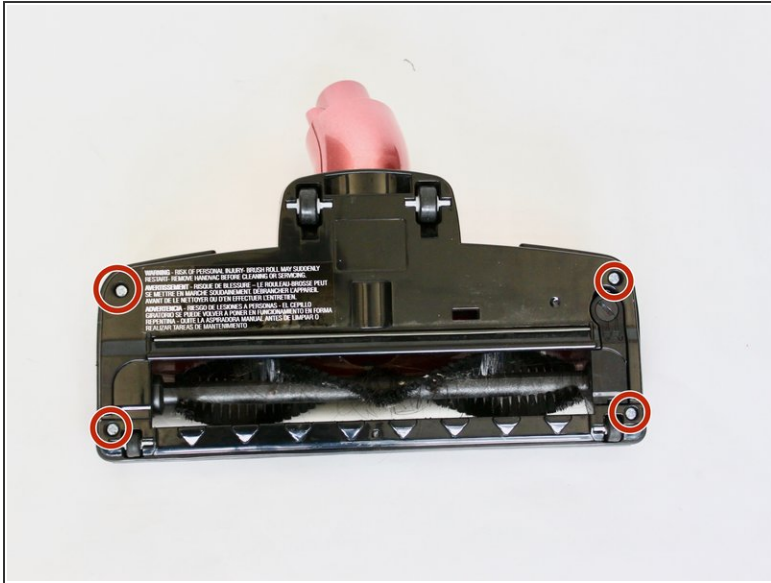

- Flip the vacuum head over so that the wheels and screws are facing you.
- Using a PH #1 screw driver, remove the four 15mm screws from each corner of the backside of the vacuum head.

Step 4

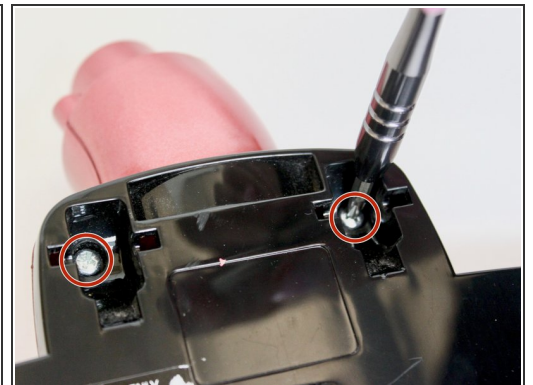

- Locate the two wheels in the upper half of the vacuum head and remove them by sticking the metal spudger tool underneath the wheel and pushing it towards you until it pops out.
- Remove the two 15mm screws located under the wheels with a PH #1 screw driver.

Step 5



- Using a firm grip, pull the two halves of the vacuum head away from each other until they are completely separated

Step 6



- Remove brush from inside the vacuum head.

To reassemble your device, follow these instructions in reverse order.