



# Dell Chromebook 13-7310 Screen Replacement

How to replace the screen in a Dell Chromebook 13-7310.

Written By: Kayla McDaniel



---

## INTRODUCTION

If the screen on your Dell Chromebook 13-7310 is cracked, pixelated, or fails to display material properly, use this replacement guide to replace it.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Fingers](#) (1)
-

## Step 1 — Screen



- To remove the screen, start by using the black nylon spudger to pry off the plastic hinge cover. This allows easy removal of the screen cover.
- Using the same spudger and your finger nails, gently pry the outer casing around the screen itself. Once it is 1/3 to 1/2 of the way removed, gently pull the rest free by hand.
- ⚠ There will be popping/snapping sounds when removing. This is normal, just be careful not to crack any plastic or the cover may not reinstall properly.
- Once the clips are undone, remove the cover and you are ready for the next step!

## Step 2




- Now that the cover is removed, use the #1 Philips screwdriver bit to remove the four, 3mm screws located at each corner of the screen.
- ⓘ To keep from losing the screws it is best to place them on a electronics rated magnetic work pad. If you do not have access to such a pad a plastic bottle cap works just fine.

## Step 3



- Now that the screws are removed, gently lay the screen face down on the keyboard. It is best to lay a cloth on the keyboard first to keep debris from entering the keyboard.
- After laying down the screen, carefully disconnect the ribbon cable located at the bottom middle of the display screen by pulling straight back towards the laptop cover.

 Be gentle, if the ribbon cable is damaged in the removal it will need to be replaced as well for the new display to work.

Congratulations! You have successfully removed the screen of your Dell Chromebook 13-7310. To reassemble your device, follow these instructions in reverse order.