



# Acer Chromebook CB3-131-C3KD Motherboard Replacement

Motherboard for Acer Chromebook CB3-131-C3KD.

Written By: Ashley Oxner



---

# INTRODUCTION

Use this guide to replace the motherboard for your device.



## TOOLS:

- [JIS #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-



## Step 1 — Battery



**i** Make sure you turn off the laptop before starting.

- Unscrew and remove the (11) eleven 4mm J0 head screws on the underside of the laptop using the JIS #0 screwdriver.

## Step 2

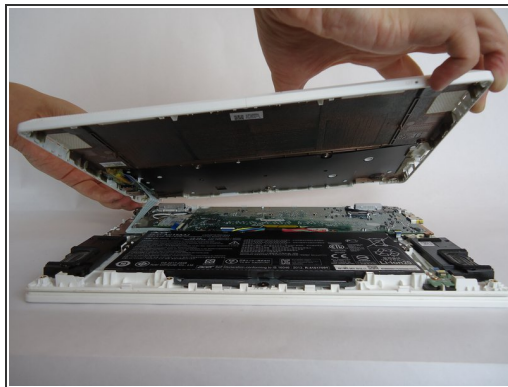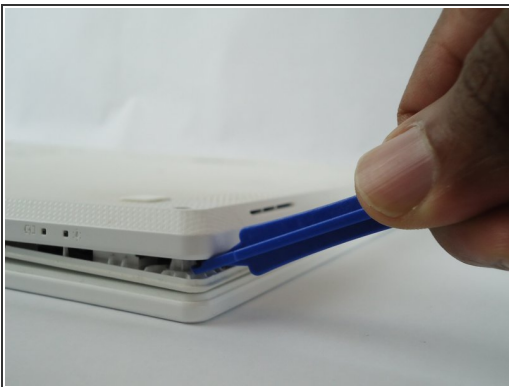


- Use the plastic opening tool to remove the back cover.

**!** Be careful not to damage the ribbon cable connecting the back cover to the laptop.




## Step 3

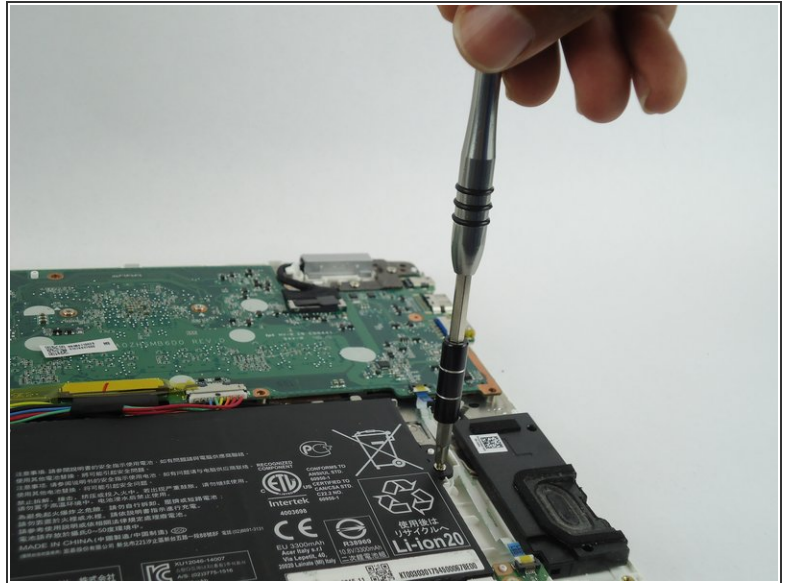

- Unscrew the (2) two 3mm J0 Phillips head screws that hold the battery in place.

## Step 4

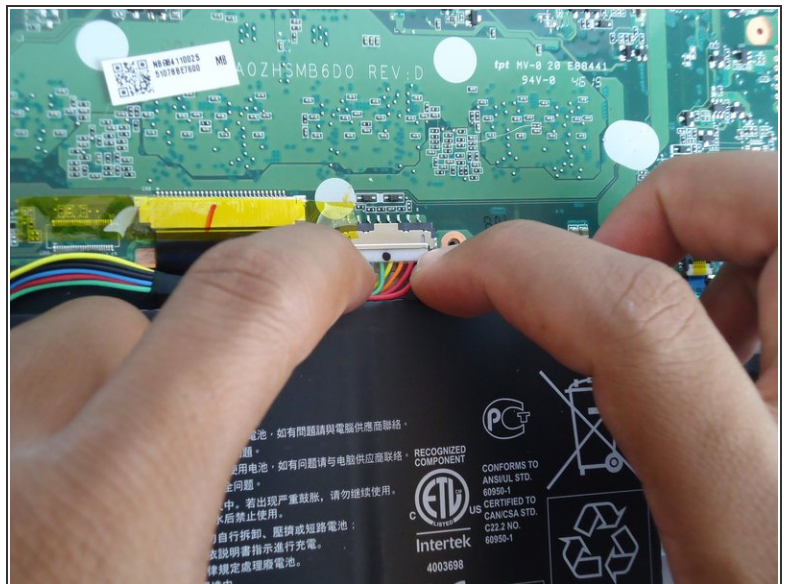

- Disconnect the battery from the motherboard.



Carefully disconnect the cable parallel to the board, not at an angle. Otherwise, you could damage the port.





## Step 5





- Carefully lift the battery from one side, and then lift it out of the laptop.

## Step 6 — Motherboard

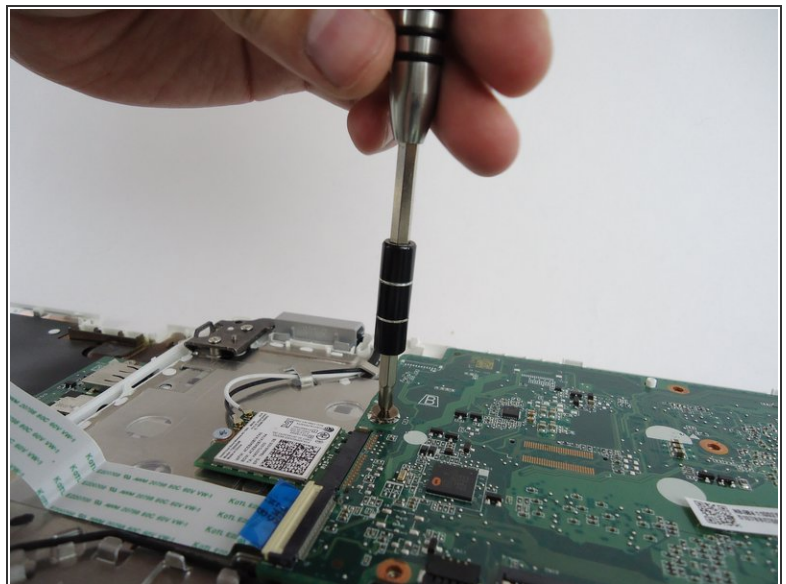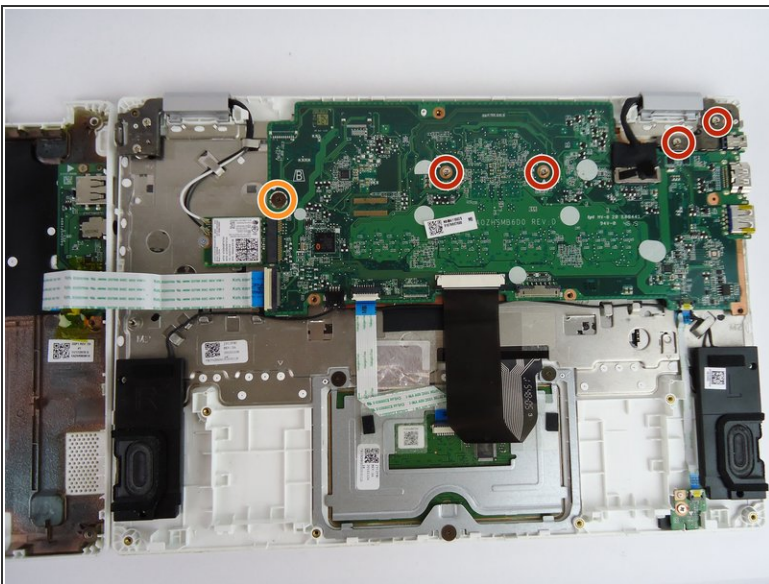




- Unscrew the (4) four J0 head 3.0 mm screws from the motherboard.
- Unscrew the (1) one 7.0 mm screw from the center of the motherboard.

## Step 7

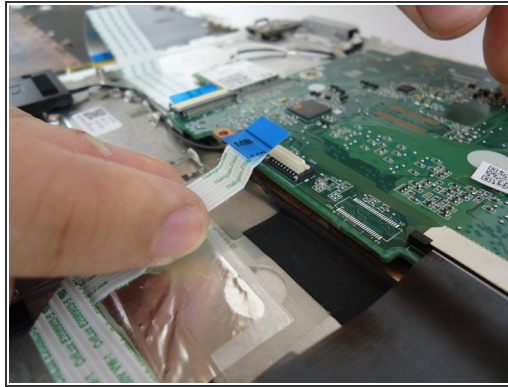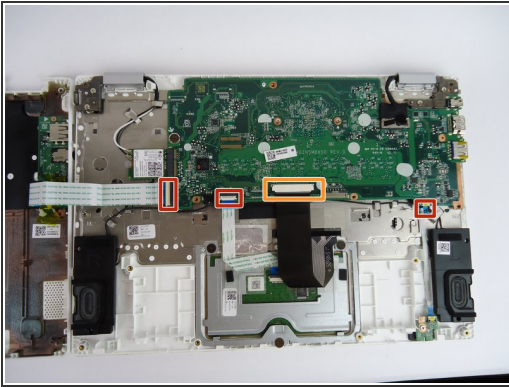

- Unlock the latches on the three white ribbon cables, then pull to detach them from the motherboard.
- Slide the hook forward and pull the black ribbon cable out.


## Step 8

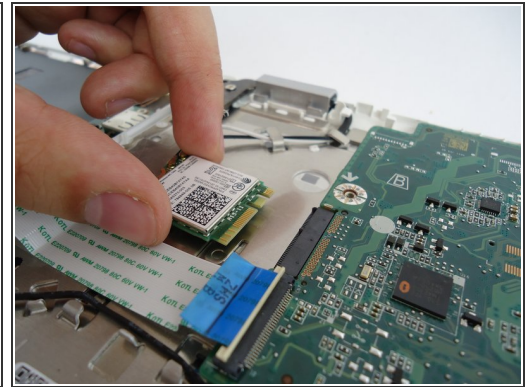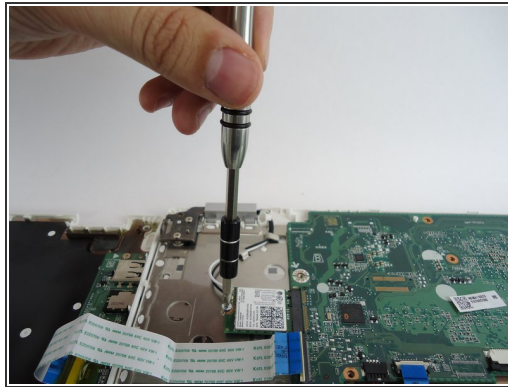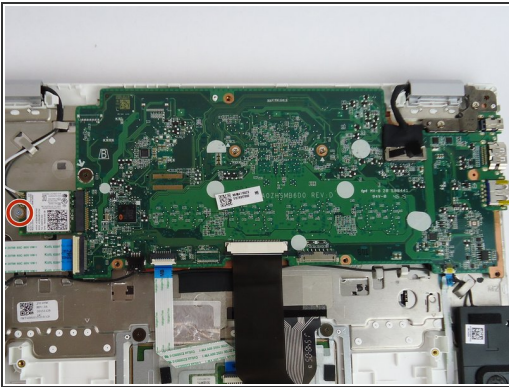

- Unscrew the 4.0 mm screw from the Wi-fi card using the JIS #0 screwdriver.
- Pull the Wi-fi card parallel to the Chromebook to remove.




## Step 9

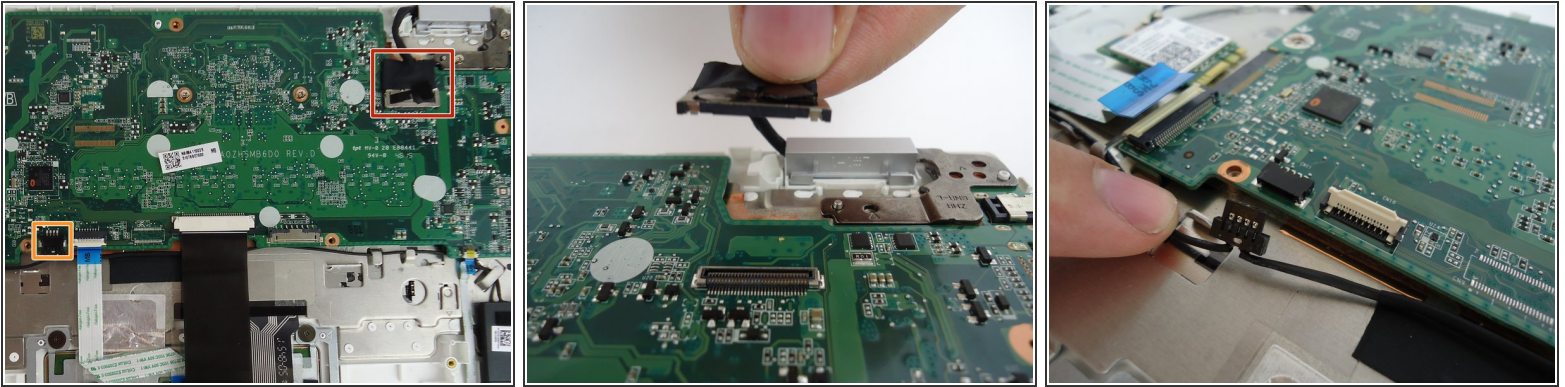

- To remove the regular cable near the hinge, pry from one side.
- To remove the regular cable at the top of the motherboard, pull it parallel to the board.

## Step 10

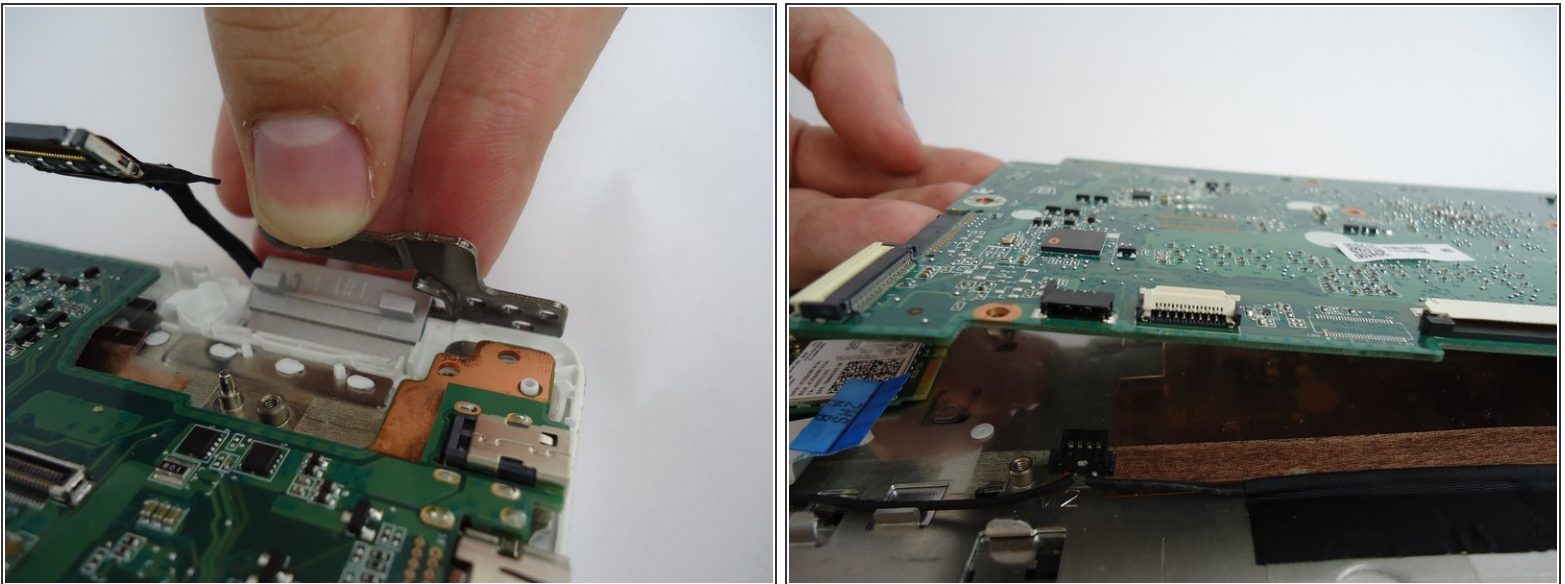

- Open the hinge by prying it backwards.
- ⚠ Be careful not to damage the ribbon cable connecting the back cover to the laptop.
- Remove the motherboard by lifting from the top.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-20 01:37:17 PM (MST).

