



ASUS X533SA-BHCLN10 Battery Replacement

Step-by-step guide for the replacement of the internal battery.

Written By: Edmund Lee



INTRODUCTION

In this guide we will be going through the process of replacing the battery. The process is not too hard and requires to first remove a number of screws. Follow the instructions carefully and diligently to be sure to not make any mistakes in the process. Changing the battery is a very simple task and with this guide you should easily replace it.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Li-Ion Battery Pack B21N1329](#) (1)
Battery

Step 1 — Battery





- Turn over the laptop on the back panel.
- Use the Phillips #0 screwdriver to unscrew all ten screws visible on the back panel. There should be a total of ten screws: (4) four 5.5mm screws and (6) six 10.5mm screws.

Step 2



- Turn over the laptop with the keyboard facing upwards.
- Using a small prying or opening tool, stick the prying tool under the edge of the laptop.

Step 3

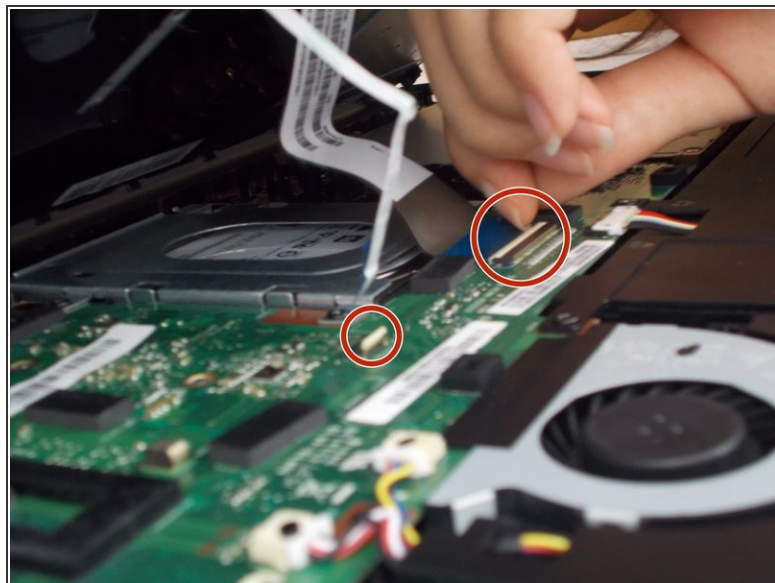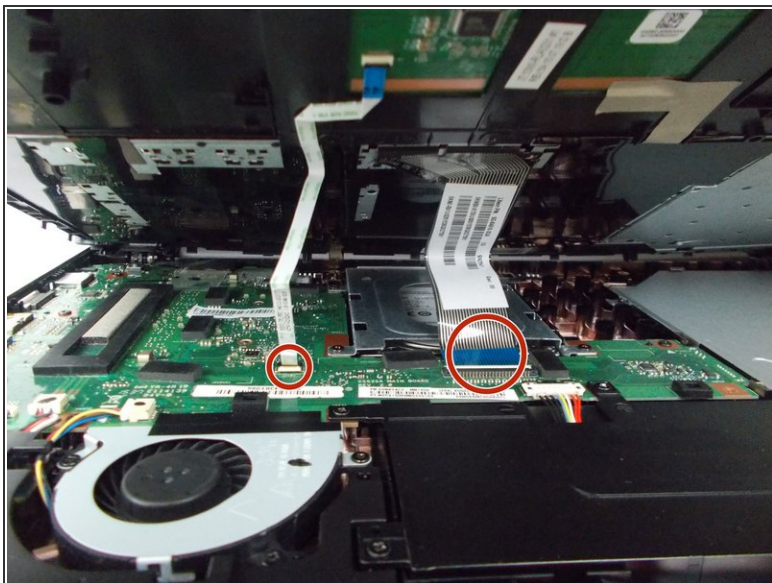

- After the laptop is completely pried open carefully remove the keyboard from the laptop.
- There are two small keyboard cables connecting the keyboard to the laptop. Carefully remove these by popping up the white clips holding them in place and slide the connector out.

To reassemble your device, follow these instructions in reverse order.