



# Replacement

This guide will show you how to open the casing...

Written By: Brooke Austin



# INTRODUCTION

This guide will show you how to open the casing on your Chromebook and remove your battery to replace it.


## TOOLS:

Phillips #00 Screwdriver (1)  
Tweezers (1)  
iFixit Opening Tool (1)  
Spudger (1)

## PARTS:

ASUS Chromebook C300MA Battery (1)

### Step 1 — Battery

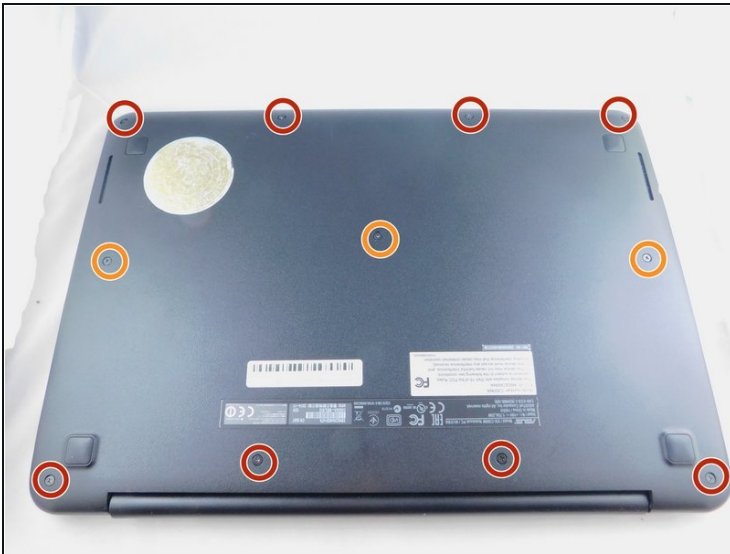


- Remove the eight 9.0mm Phillips #00 screws.
- Remove the three 6.0mm Phillips #00 screws.

## Step 2



- Separate the palm rest assembly from the bottom housing using the plastic opening tool.
- ① It is recommended that you start from a corner and run the plastic opening tool along the edge of the housing.
- ⚠ Lift the palm rest assembly slowly to prevent damaging the two cables that connect it to the motherboard.

## Step 3

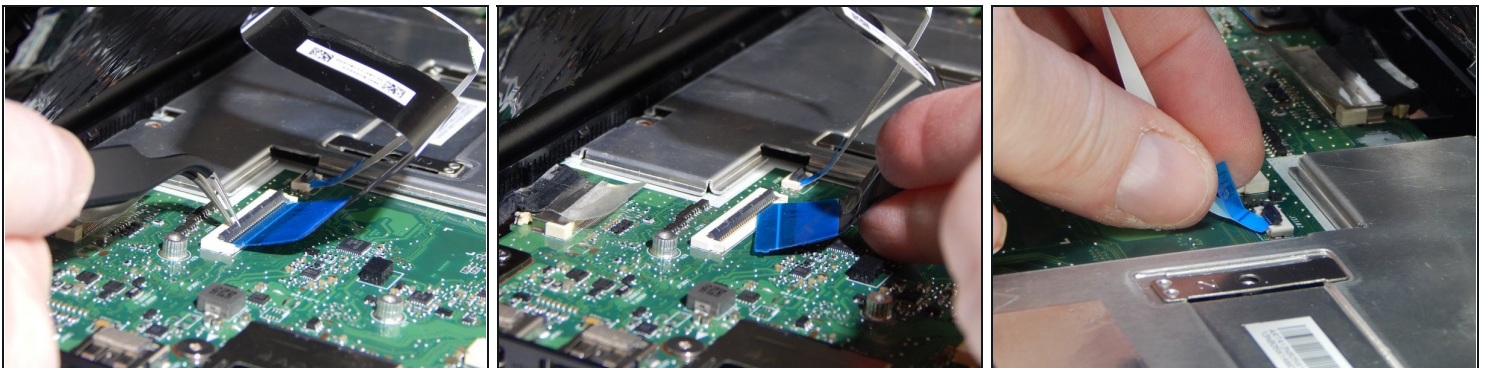

- Flip back the hinges on the connectors that secure the wide black cable and the narrow white cable using the tweezers.
- Disconnect the wide black cable from the motherboard by pulling the blue cable tab away from the connector.
- Disconnect the white ribbon cable from the motherboard by pulling the blue cable tab away from the connector.




## Step 4



- Remove the six 6.0mm Phillips #00 screws that secure the battery to the bottom housing.

## Step 5

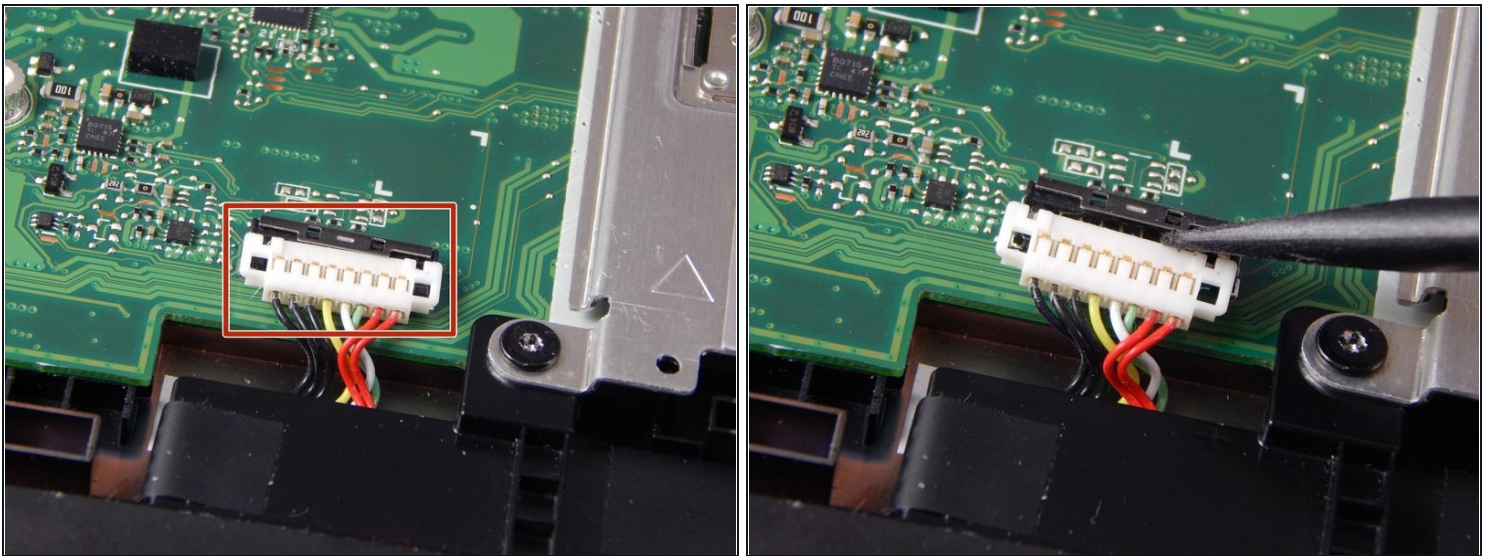

- Disconnect the bundled cable connector that attaches the battery to the motherboard using the small plastic spudger.

## Step 6



- Remove the battery from the bottom housing.

To reassemble your device, follow these instructions in reverse order.