



Acer Chromebook CB3-131-C3KD Keyboard Key Replacement

Explains and demonstrates how to carefully replace a key from the Acer Chromebook keyboard.

Written By: Johnathan



INTRODUCTION

Use this guide to replace a key from the keyboard of your device.



TOOLS:


- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Keyboard Key



- ⓘ Make sure you turn off the laptop before starting.
- Place the flat head screw driver under the key, but over the key clip retainer.

Step 2

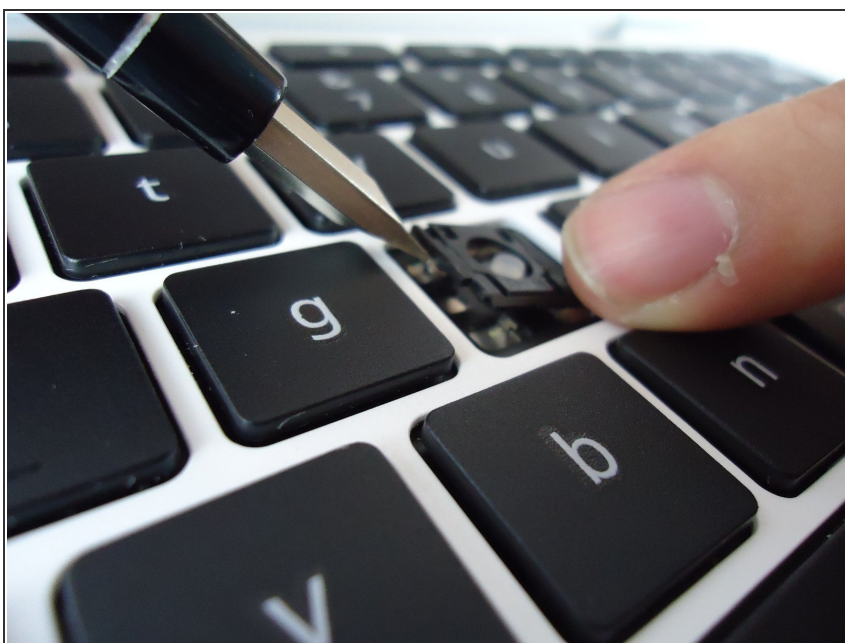

- Push down on one of the bottom corners of the key, so that the opposite diagonal corner rises and gives leeway.
- ⚠ Carefully place the flat head screw driver under the raised corner.
- Carefully pry up from underneath the raised corner to raise the metal clips away from the key base.

Step 3



- Pry up from the top left and right corners of the retainer subsequently.
- Remove clip retainer.

To reassemble your device, follow these instructions in reverse order.