



Shark Ultimate Professional Power Cord Replacement

This guide will aid in the replacement of the power cord part of the Shark Ultimate Professional clothes iron.

Written By: Drew Carff



INTRODUCTION

This guide provides aid for the replacement of the power cord for the Shark Ultimate Professional clothes iron.

If your Shark Ultimate Professional iron does not turn or the plate does not heat up then a new power cord might solve the problem. Additionally, if there is physical damage to the power cord, a new power cord will be needed to avoid a safety hazard.

Before dismantling the iron, ensure that the outlet is not the problem by checking the iron in an alternative outlet.

Note:

Before beginning this guide, ensure the device is both unplugged and cool; failure to do so may result in electrocution or burns.

Properly discard the power cord at a proper recycling center or dump.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Power Cord



- Use a Phillips #0 screwdriver to remove the two 11.5mm screws on the back of the iron.
- Remove the back cover piece.


⚠ Make sure iron is unplugged and cooled off.

Step 2



- Use a Phillips #0 screwdriver to remove the two 11.8mm screws holding the white clamp to the iron.
- Use the Phillips #0 screwdriver to remove the two 6.6mm screws holding the black wires to the body of the iron.
- ⓘ Removing the left black wire will also free the red wire, attached by the same screw.

Step 3

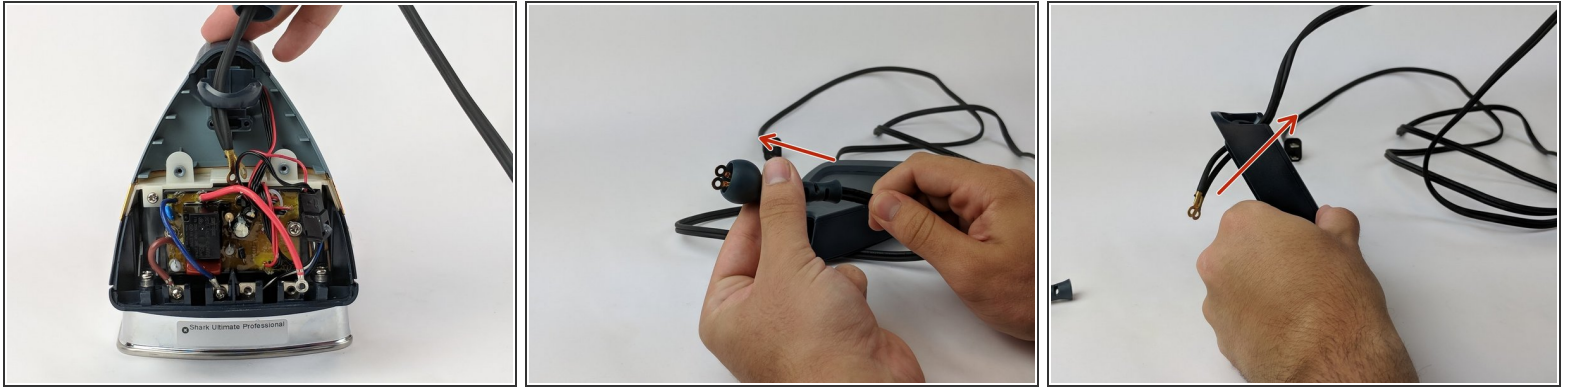

- Pull the split end of the power cord upward through the ball joint of the iron.
- Pull the rubber stopper through the split end of the wire.
- Pull the wire through the plastic cover.

To reassemble your device, follow these instructions in reverse order.