


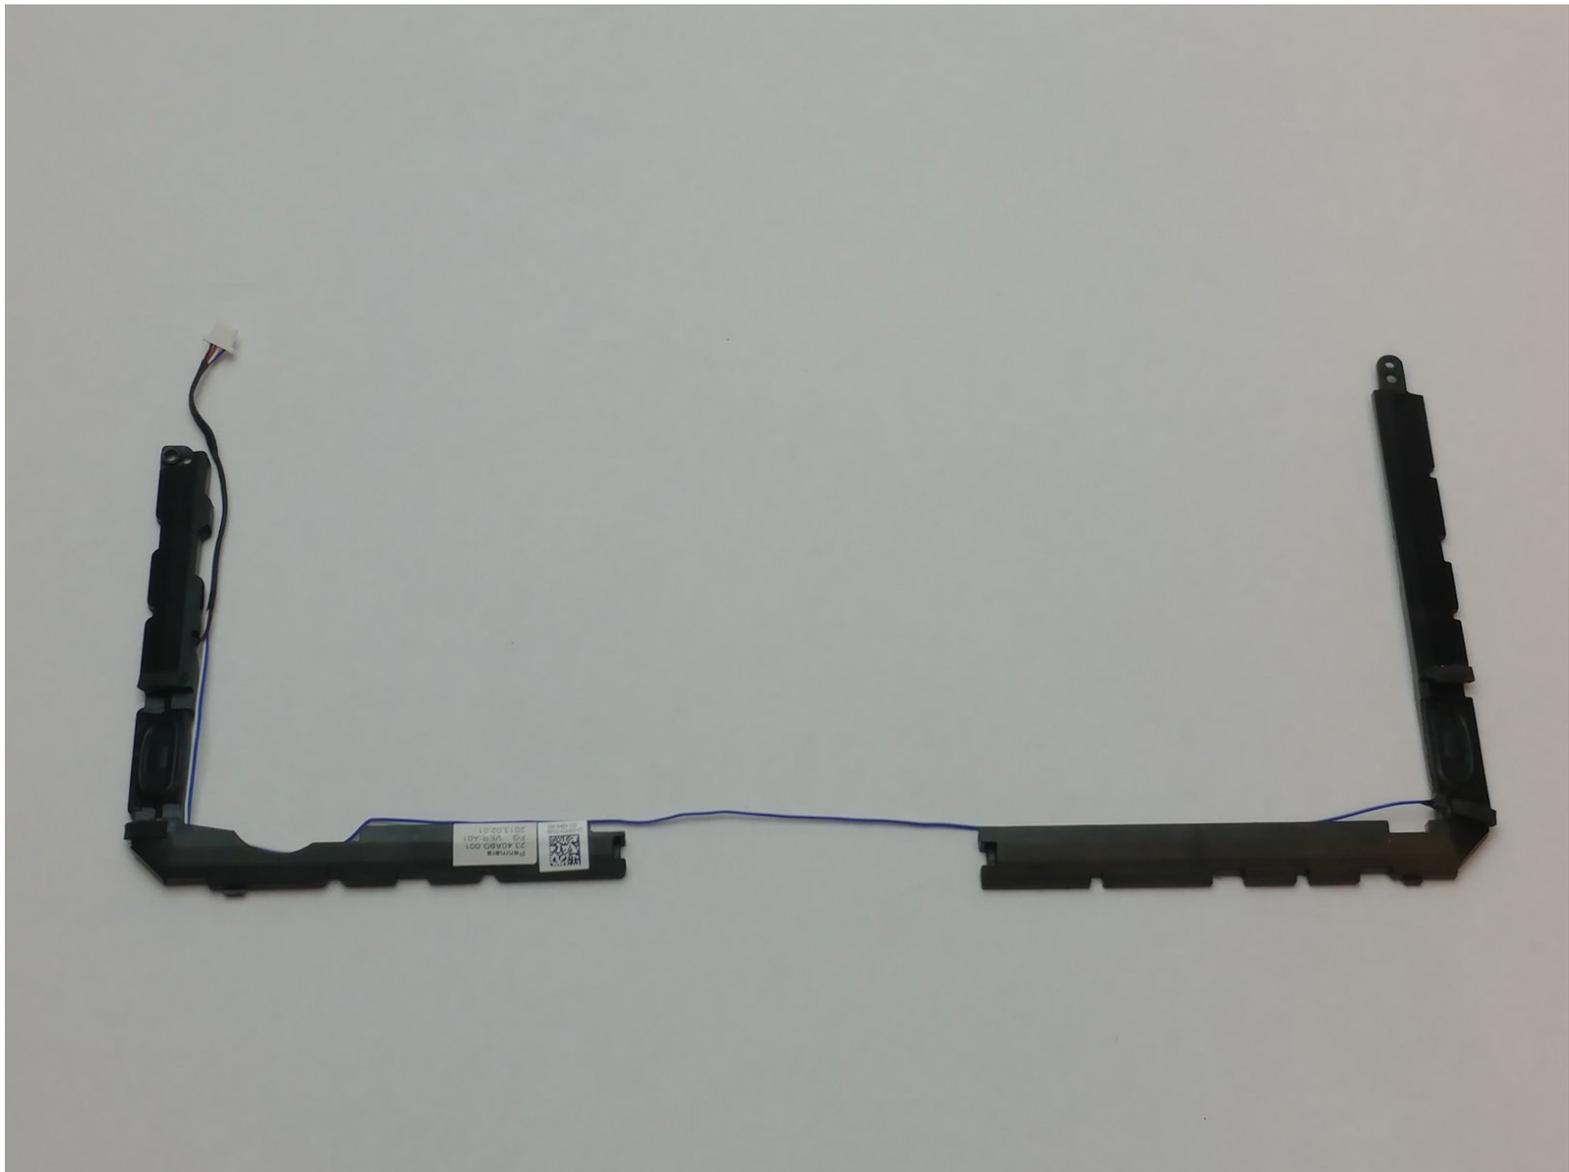

# Dell Latitude 10-ST2e Speaker Replacement

This guide will allow you to replace the faulty or damaged speakers in the Dell Latitude 10-ST2e.

Written By: Bradley Fritz



---

## INTRODUCTION

This guide will provide a step by step guide to remove the speaker from the tablet. This is necessary for a device which has broken or faulty speakers.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [JIS #00 Screwdriver](#) (1)
-

## Step 1 — Speaker





- Place tablet face-down on flat surface
- Using the blue opening tool to separate the back plastic cover from the device. Start in a corner, and work your way around the tablet.

## Step 2




- Using aJIS #00 screwdriver locate and remove the two 3.5mm screws by the plastic covers on left and right side of the tablet

## Step 3

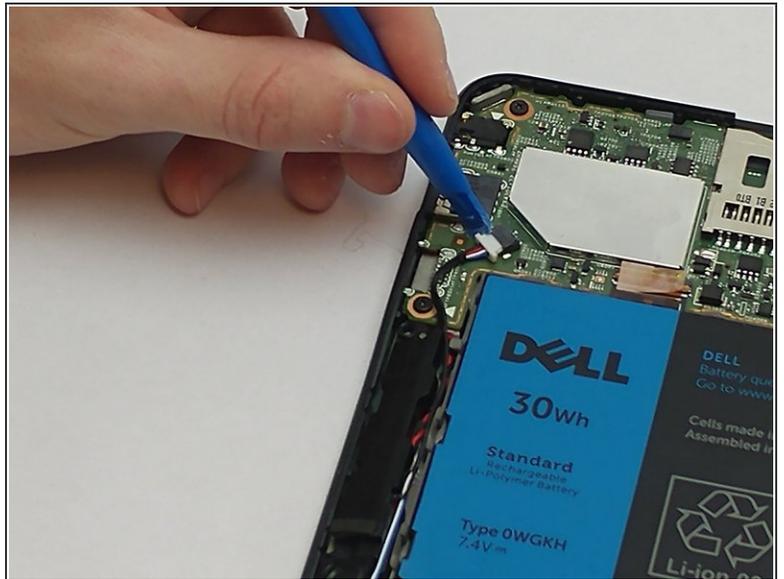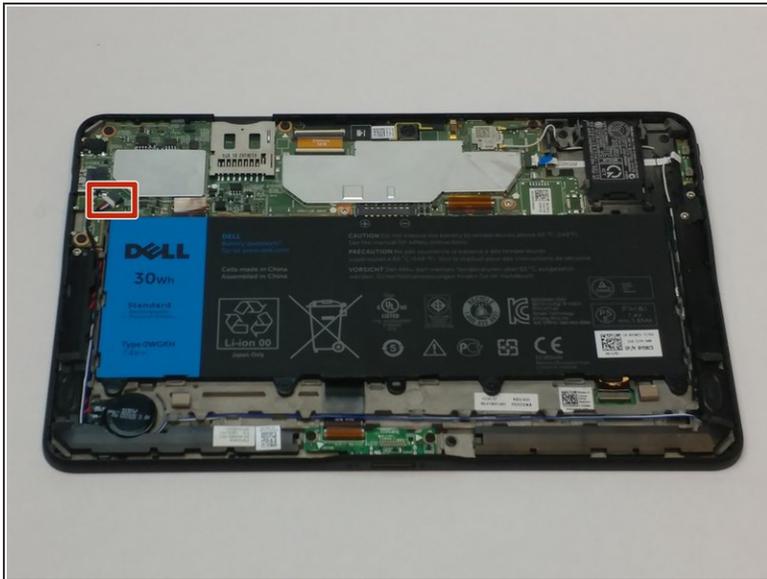


- Using the blue opening tool to gently remove the wire connecting the speaker to motherboard

## Step 4

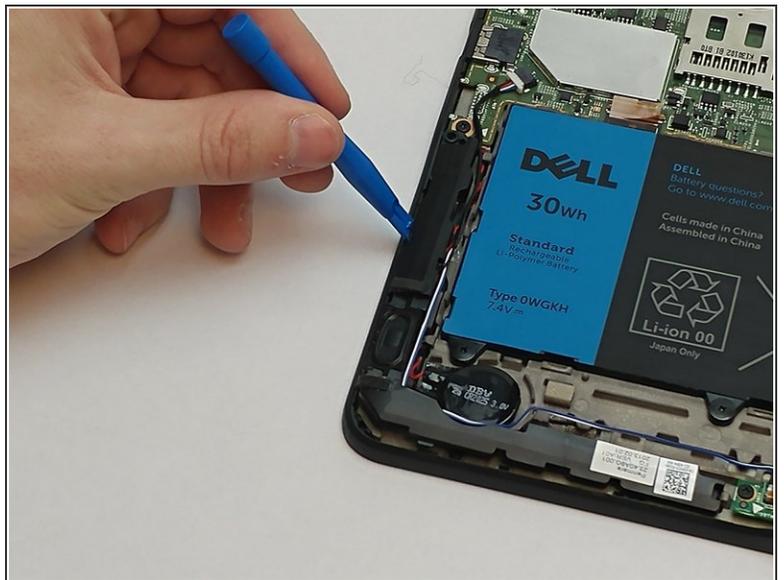


- Use the blue opening tool to lift up the speaker counterclockwise from the corner. As you lift up, the speaker will release from the casing. Repeat this process for the second speaker.

## Step 5

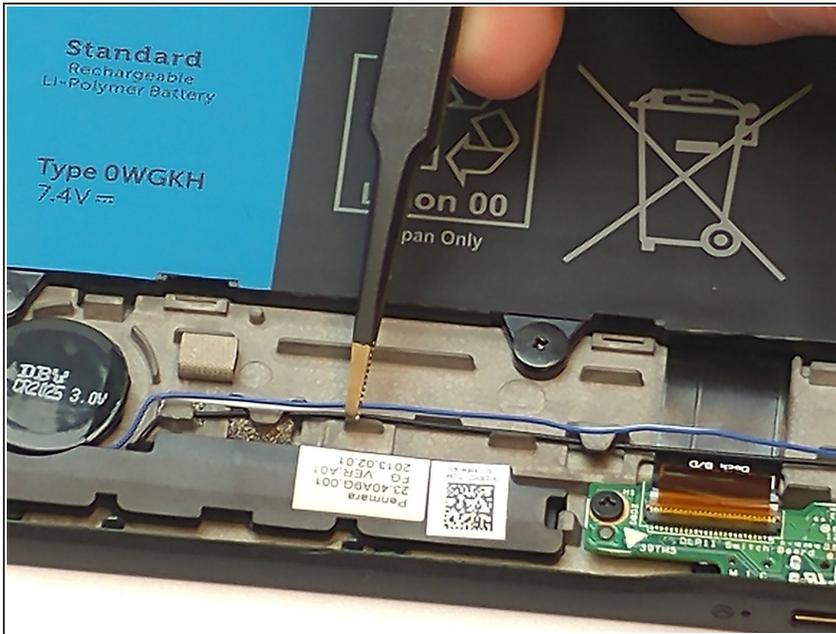

- Use tweezers to help lift the white and blue wires connecting both speakers.

## Step 6

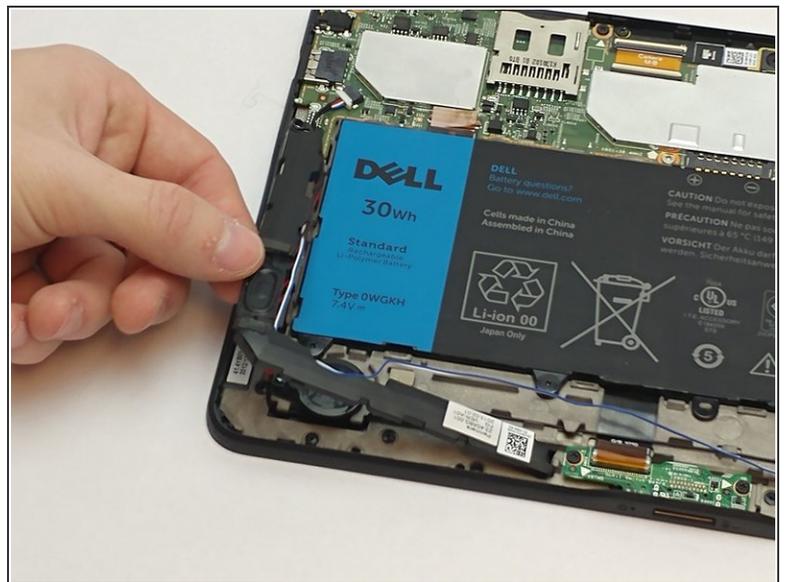

- Grab both speakers and gently lift up to remove them from the tablet.

To reassemble your device, follow these instructions in reverse order.