


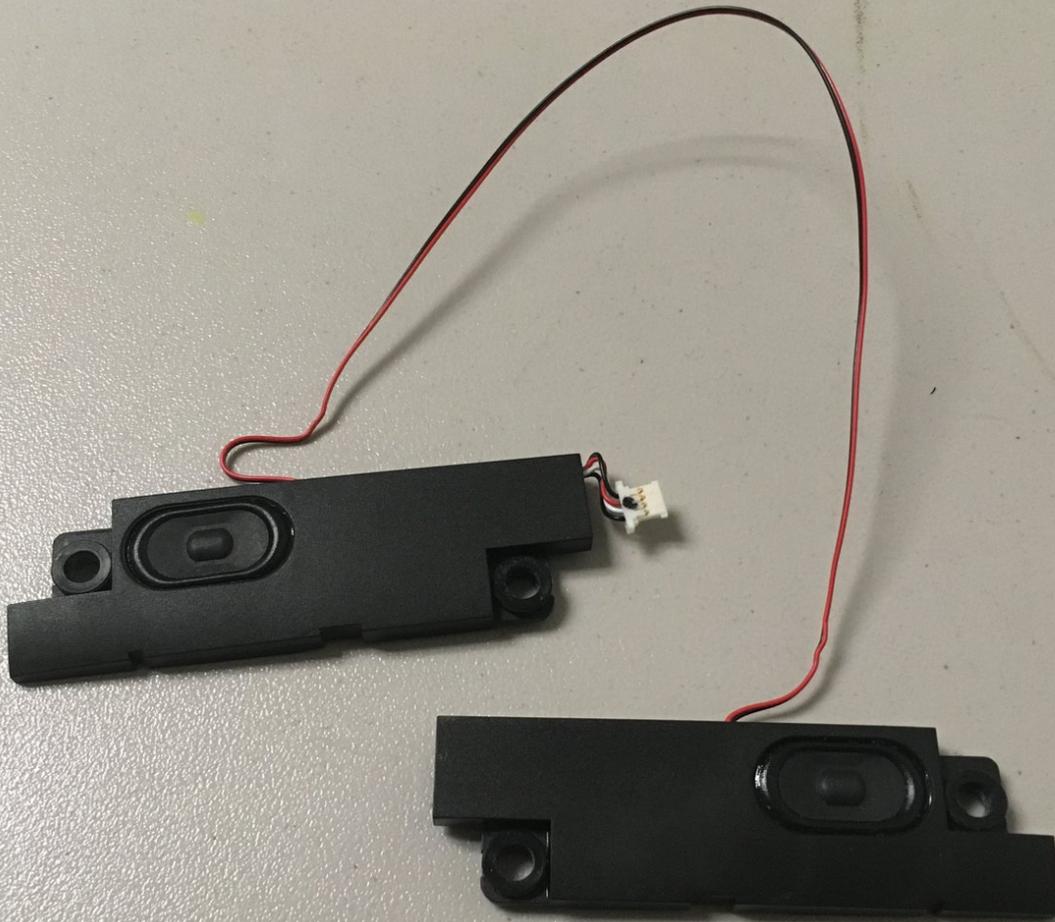

Lenovo Ideapad 110S-11IBR Speaker Replacement

Step by step guide to replacing the Lenovo Ideapad's speaker.

Written By: Andy Rangel




INTRODUCTION

This guide will instruct you on how to remove and replace the speakers of Lenovo Ideapad 110S-11IBR.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

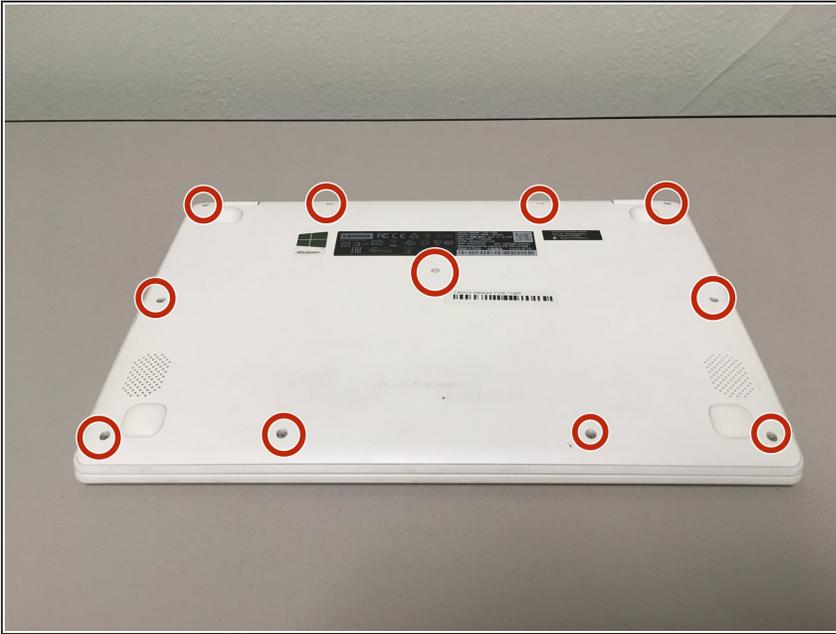


- ⚠ Ensure that your device is completely OFF before performing this procedure.
- Unscrew the eleven 4 mm Phillips #0 screws on the bottom of the device.

Step 2




- Separate the back lid from the laptop using a plastic opening tool.
- Lift the back lid off of the device.

Step 3

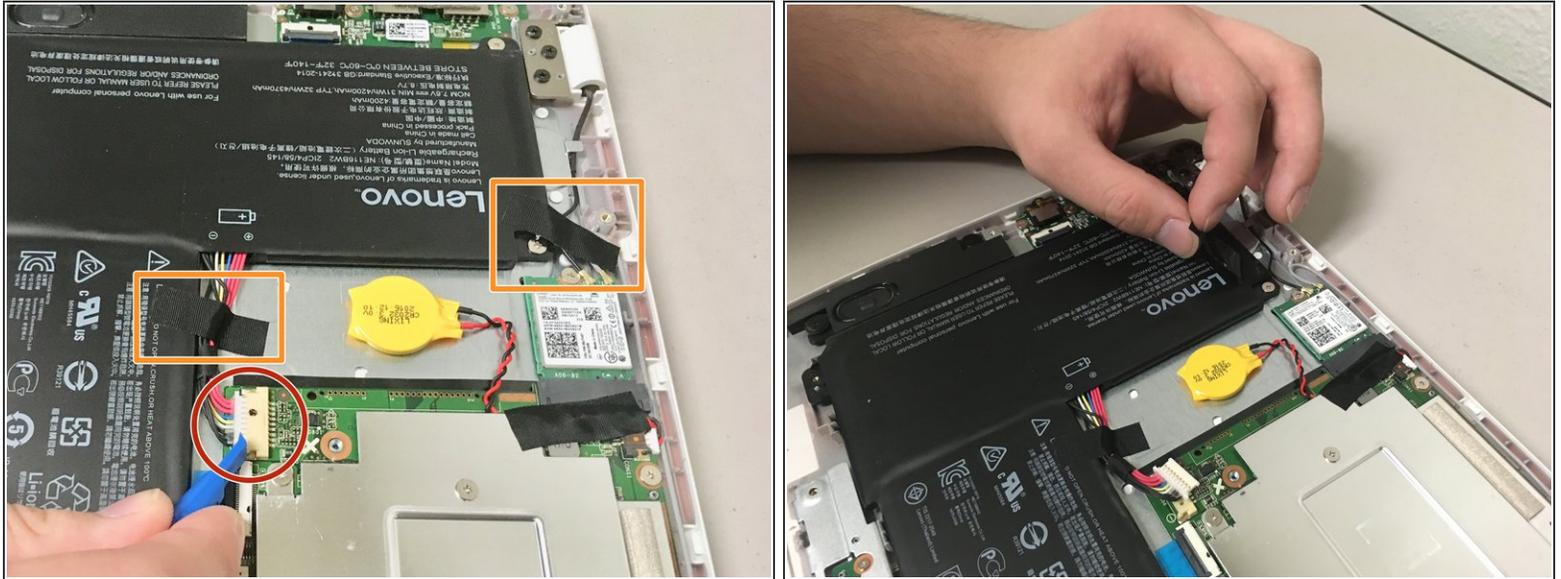



- Remove the battery connector from its socket by pulling the cable away from the hinge using your fingers or a plastic opening tool.
- ⚠ Do not pull on the socket itself or you risk damaging the motherboard.
- Remove the two pieces of tape that are holding the battery down.

Step 4

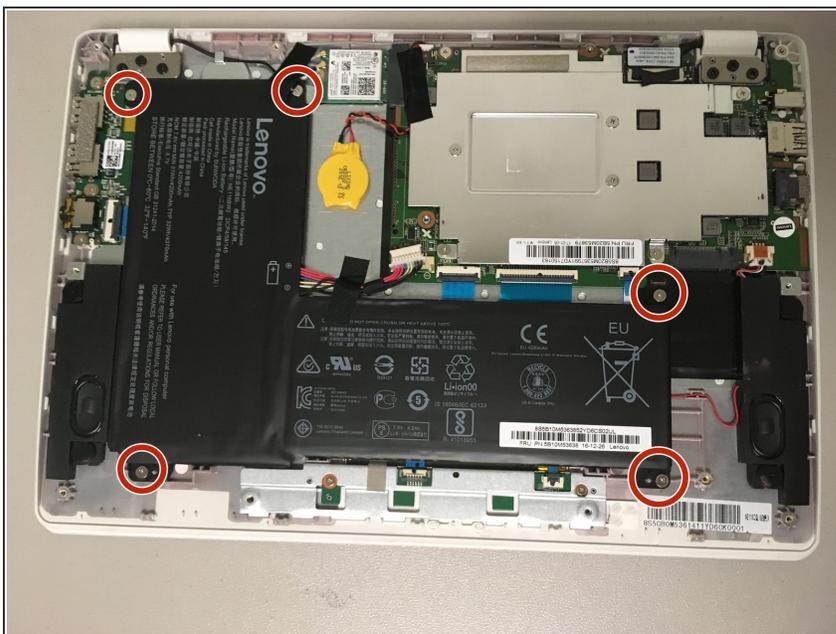


- Remove the five 4 mm Phillips screws securing the battery.

Step 5

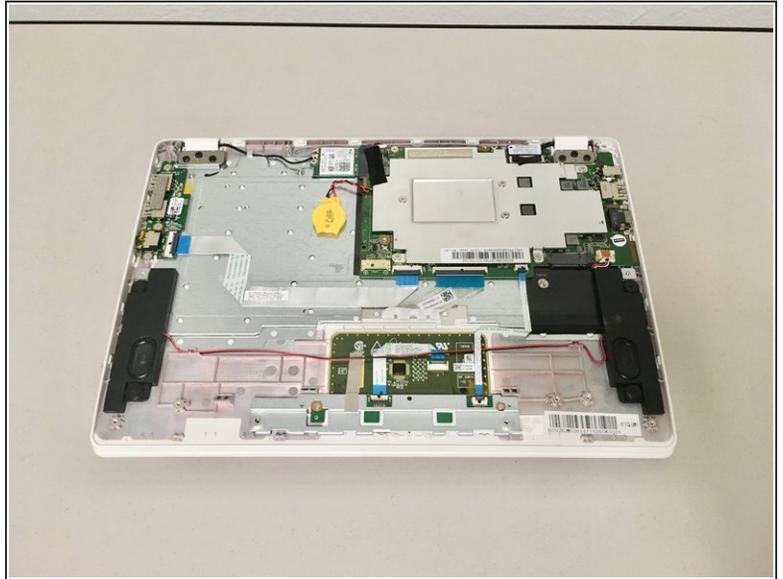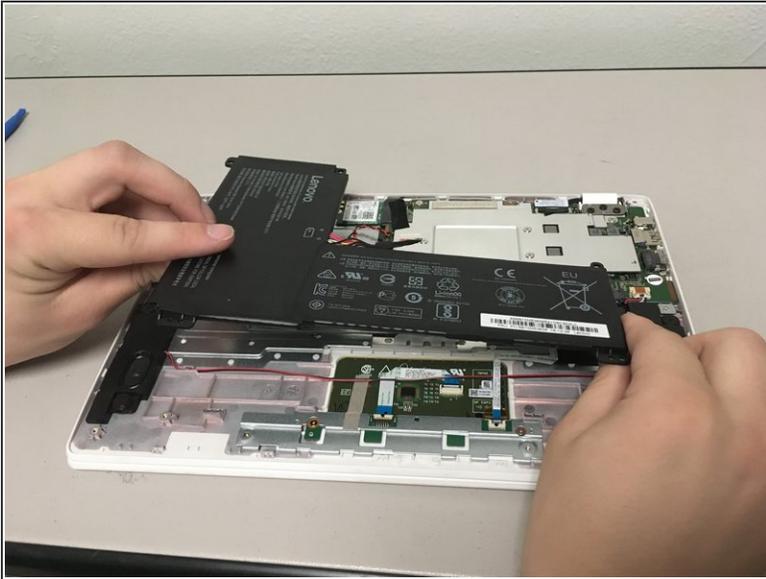



- Lift the battery up and out of the device.

Step 6 — Speaker

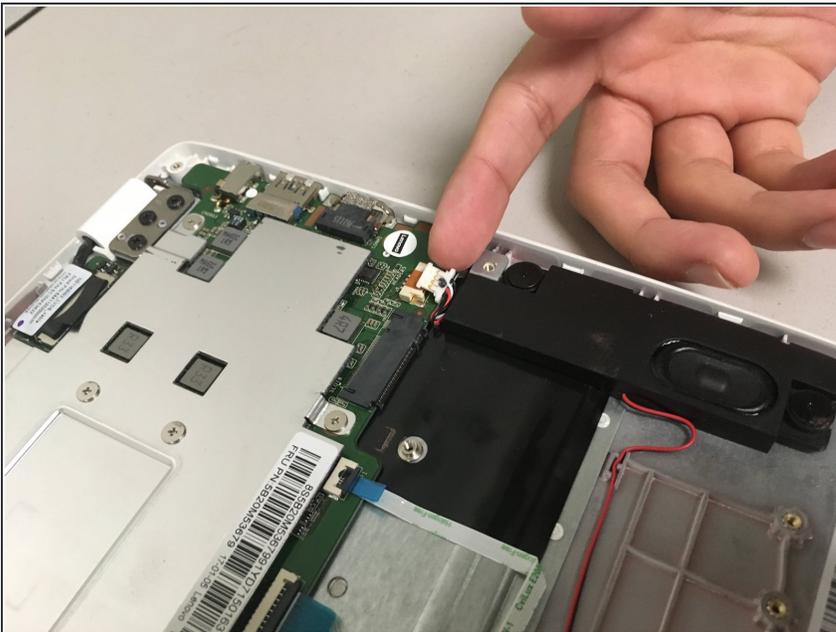


- Use your fingers to gently remove the speaker connector from its socket.

Step 7

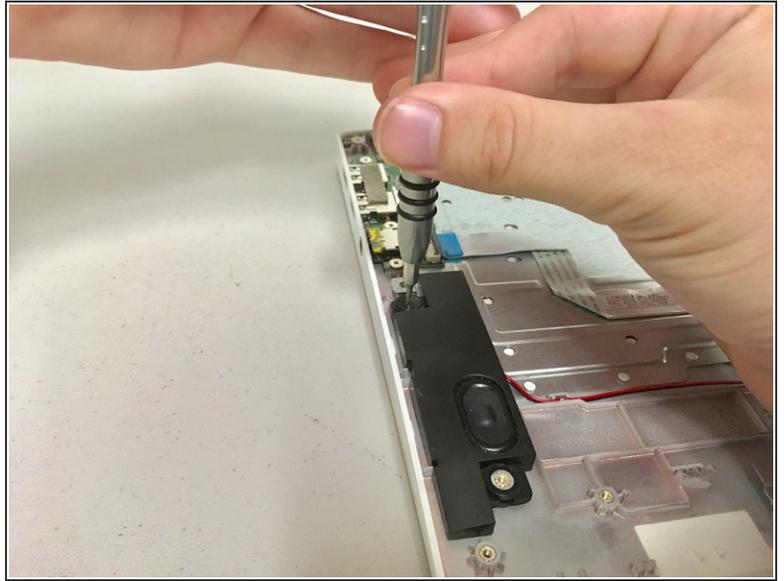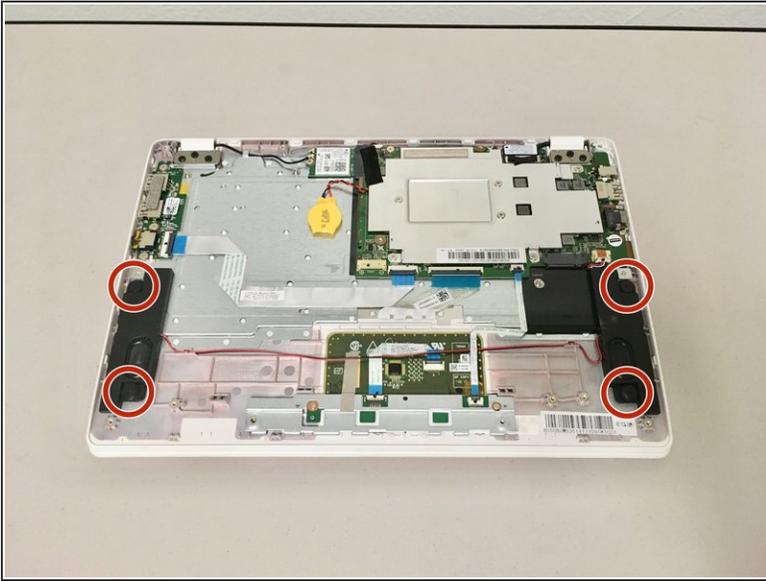


- Unscrew the four 4mm Phillips screws.

Step 8

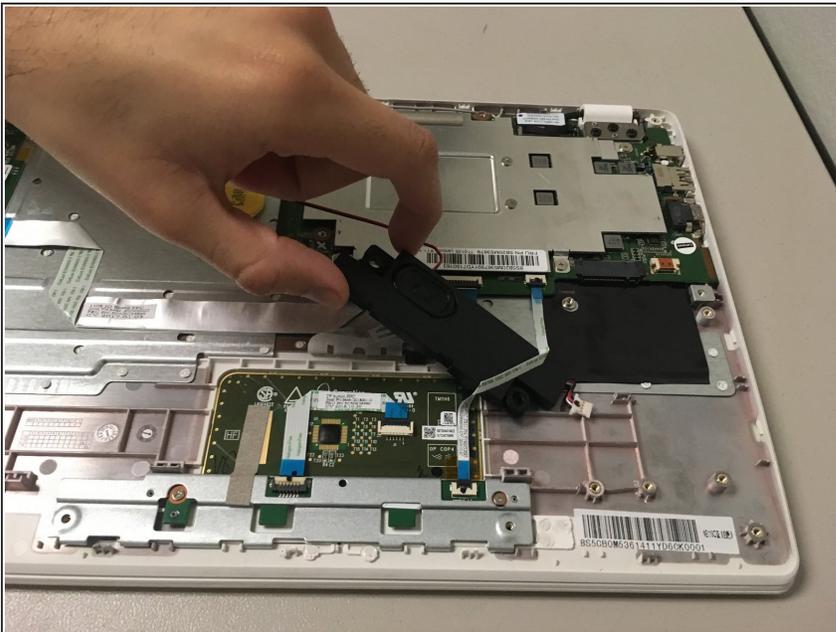

- Pull the right speaker carefully under the ribbon cable.

Step 9

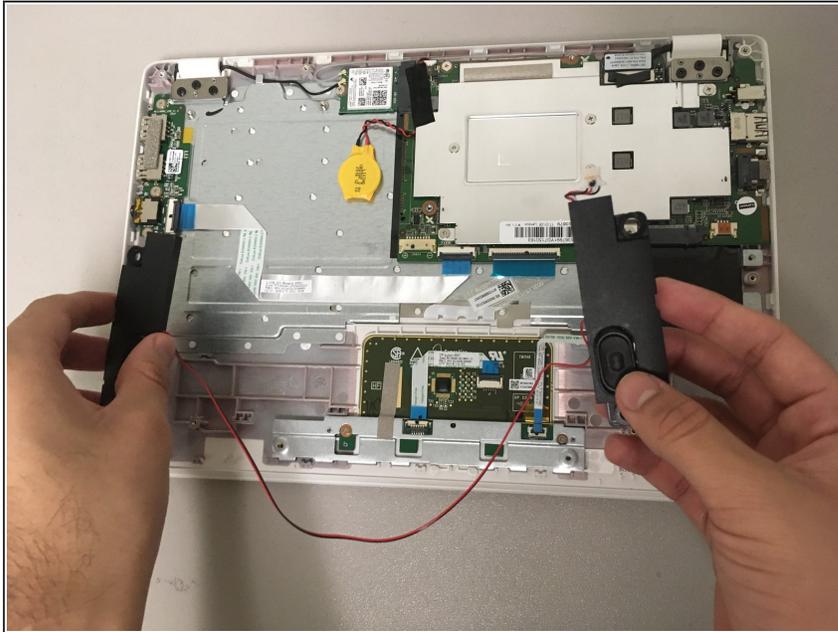

- Lift the the left speaker to finish.

To reassemble your device, follow these instructions in reverse order.