




ASUS Chromebook C300MA-DH01 Audio

Speakers Replacement

This guide will show you how to replace a broken or defective audio speaker system on the ASUS Chromebook C300MA-DH01

Written By: Gina Altimari

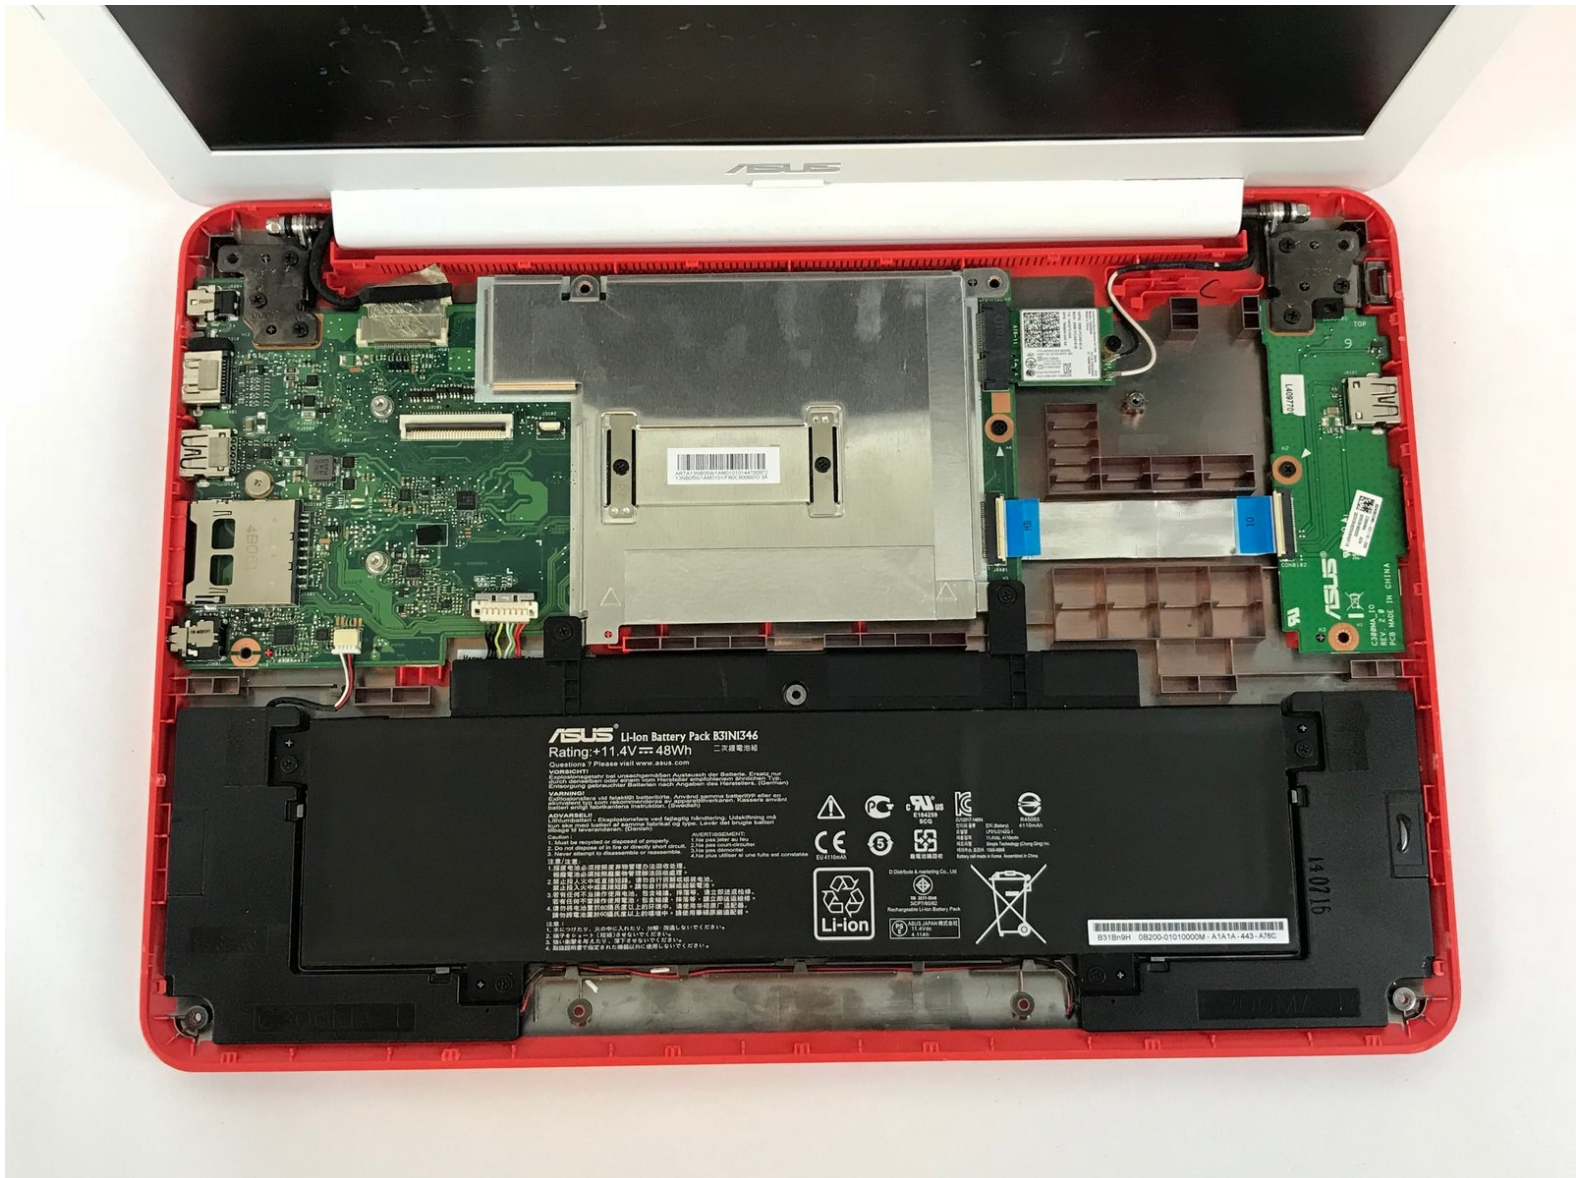

INTRODUCTION

Use this guide to remove the audio speakers in your device.

TOOLS:

- [Spudger](#) (1)
 - [JIS #0 Screwdriver](#) (1)
-

Step 1 — Audio Speakers



- Flip the Chromebook over so the bottom of the device is facing up.

Step 2




- Using the JIS-J0 Screwdriver, remove the following screws from the bottom:
- (5) Five 6mm screws
- (6) Six 8mm screws

Step 3




- Gently wedge the spudger in between the bottom of the device and the keyboard, and carefully pry the cover open. Then, carefully lift up on keyboard.

Step 4

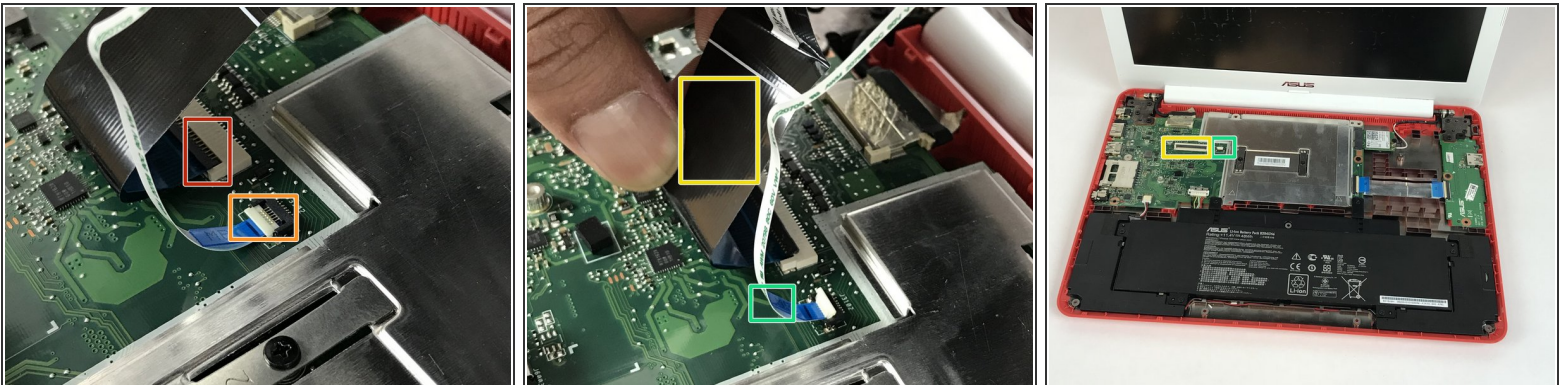


- ⓘ Gently detach connecting cables
 - Carefully flip up the large black tab.
 - Carefully flip up the small white tab.
 - Remove its corresponding black cable.
 - Remove the corresponding white cable.
- ⓘ The keyboard will be fully detached at this point.

Step 5

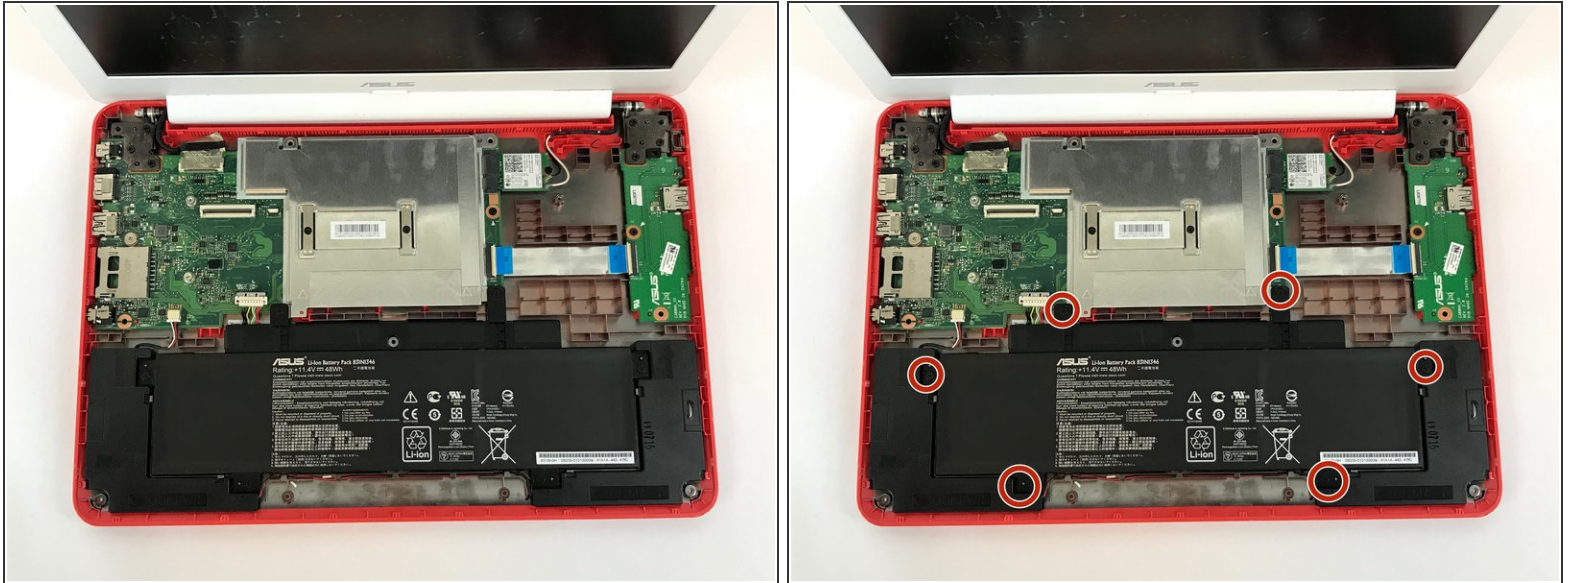


- Using the JIS-J0 screwdriver, unscrew and remove from the battery:
- (6) Six 6mm screws

Step 6

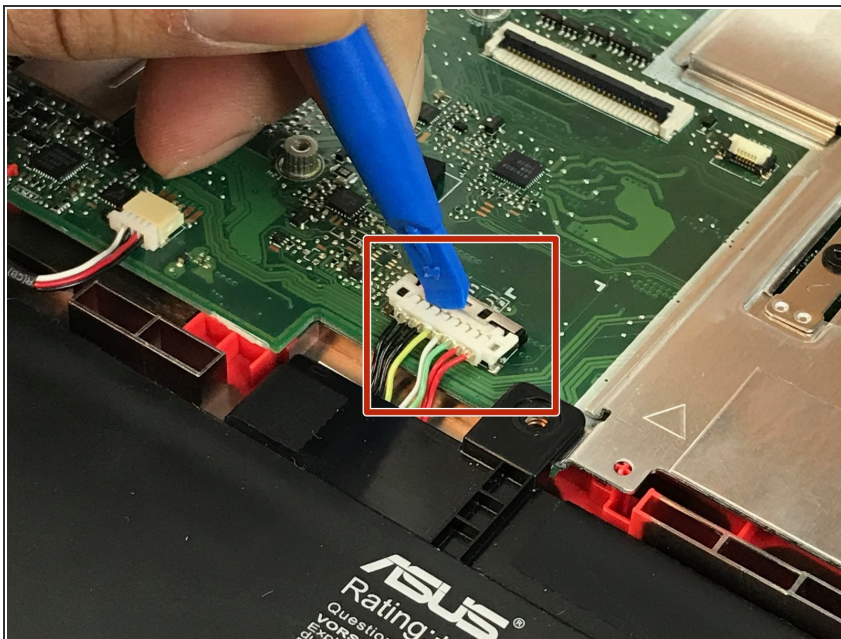

- Using the plastic opening tool, gently push the connector tab away from the battery to detach the cable.
- ❗ The battery will be fully detached at this point. Carefully lift it out of the device.

Step 7

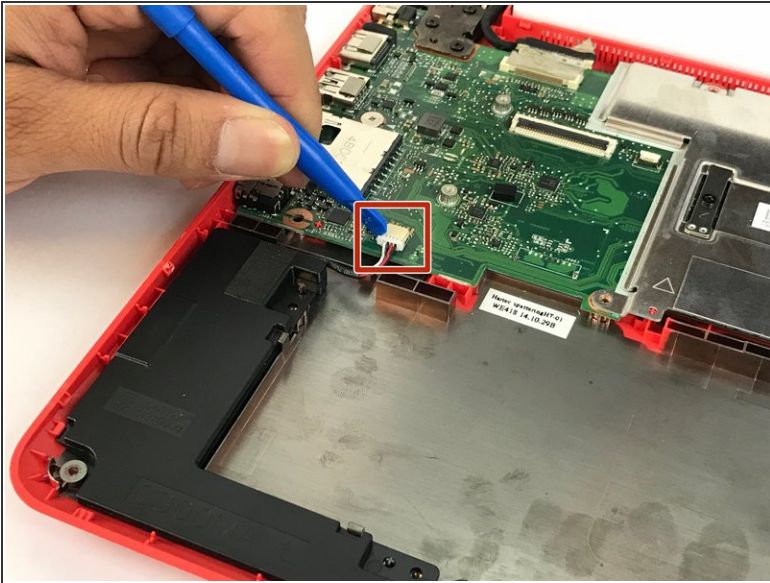

- Using the plastic opening tool, disconnect the audio connector by pushing the audio tab toward the speakers.
- With the audio cable detached, carefully lift the speakers out of the device.

To reassemble your device, follow these instructions in reverse order.