



ASUS Chromebook C300MA-DH01 Display Replacement

This guide will demonstrate how to replace a broken, cracked, or damaged display screen on the ASUS Chromebook C300MA-DH01.

Written By: Gina Altimari



INTRODUCTION


Use this guide to replace the display on your device.



TOOLS:

- [JIS #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Display

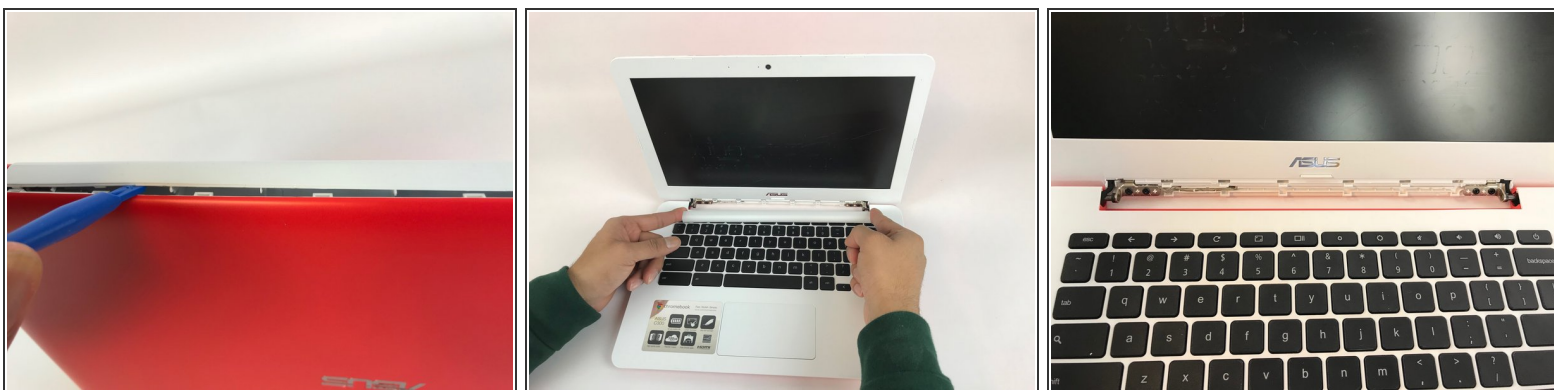

- Flip open the Chromebook as shown. Using the plastic opening tool, gently pry open the hinge cover of the display. Once it snaps off, remove the hinge cover.

Step 2




- Continue to use the plastic spudger to gently pry the front frame from the display. It will come off with a snap.

Step 3



- Using the JIS J000 Screwdriver, unscrew and remove the (4) four 3mm screws from the display.

Step 4

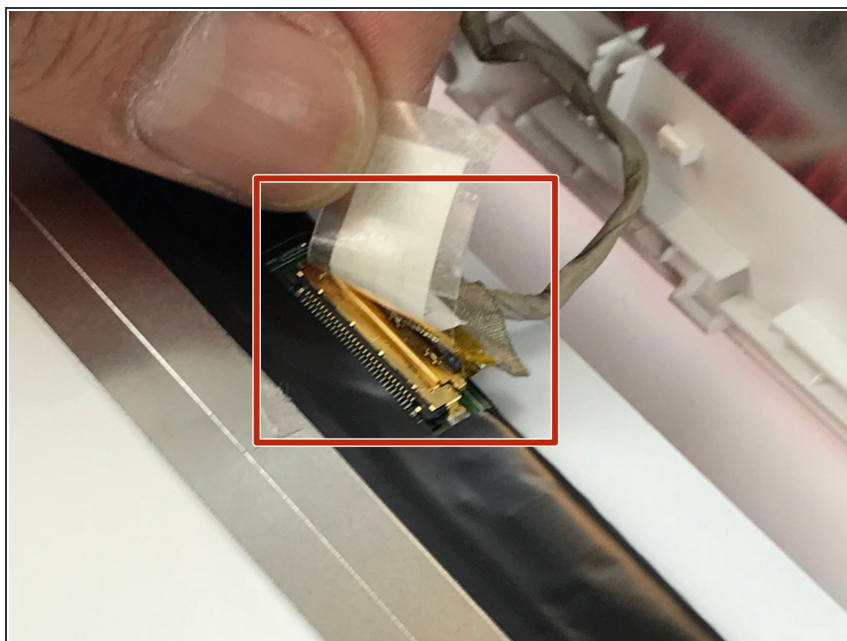

- Gently peel back the tape to remove the display.

To reassemble your device, follow these instructions in reverse order.