



# Thrustmaster T Flight Hotas 4 J1 Screws on Throttle Replacement

This guide will show how to remove the J1 screws from the throttle.

Written By: Crystal Nguyen



---

## INTRODUCTION

You must first remove all 5 screws in order to open the throttle in half.

---

### TOOLS:

- **JIS #1** (1)
-

## Step 1 — J1 Screws on Throttle



- ⓘ Be sure to disconnect the controller from the power source before disassembling.
- Remove the five 15 mm J1 JIS head screws from the front of the throttle.

To reassemble your device, follow these instructions in reverse order.