



# HP Spectre x2 12-a002dx Speaker Replacement

Many times the speaker(s) on your device can...

Written By: Talha Bin Amir



# INTRODUCTION

Many times the speaker(s) on your device can stop functioning properly due to several reasons. This guide shows how to replace the speaker(s) on this device.

---

## TOOLS:

Metal Spudger (1)

Spudger (1)

iFixit Opening Tool (1)

Heat Gun (1)

Tweezers (1)

Phillips #0 Screwdriver (1)

Phillips #000 Screwdriver (1)

---

## Step 1 — Screen



- Make sure the device is powered off and the kick stand is retracted.
- The HP Spectre should be placed on a flat surface with the keyboard detached.

## Step 2



- To remove the screen, there is an entire system of clips which need to be undone as well as 4 Phillips M1.5x2.7 screws.
- The screws should be removed using a Phillips #000 screwdriver. There is a sticker where the laptop attaches to the keyboard.
- Heat the sticker (if needed) and use fine point [tweezers](#) to grip the sticker and remove it.


## Step 3



- Use the plastic opening tools or insert a spudger to begin unclipping the system.
- Pry the screen off once all the clips have been unclipped.

⚠ The screen may shatter if not already shattered (beware of flying glass).

## Step 4

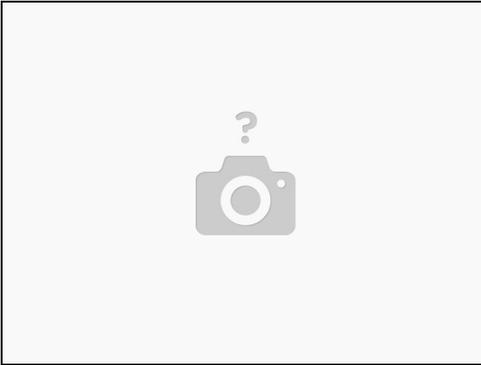

- This screen will break. There is double tape underneath the frame, which is not listed in here.

## Step 5





- Remove the connecting cable of the screen and battery. Use a spudger to reveal the adhesive strip and carefully peel it off.
  - Insert a spudger to the other end and release the ZIF connectors. Detach the cable.
- ⓘ While a metal spudger is pictured, use a black nylon spudger instead because it is ESD safe.

## Step 6 — Speaker




- The HP Spectre x2 has Two Speakers at the top of the laptop on either end.

## Step 7

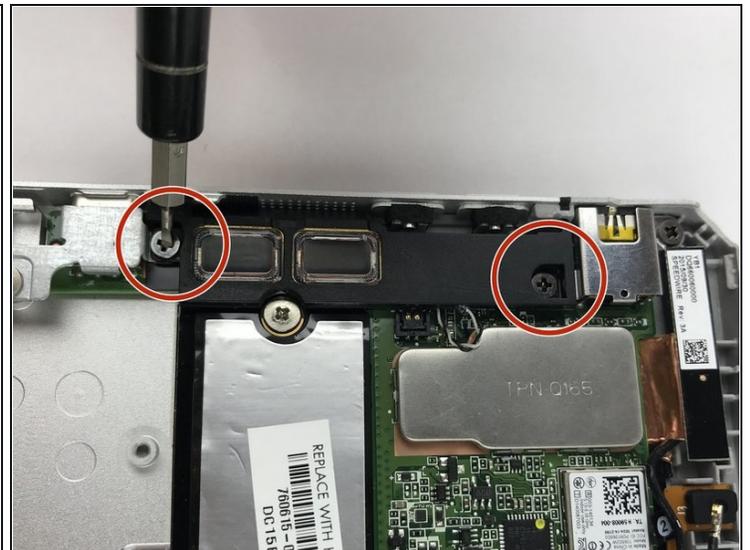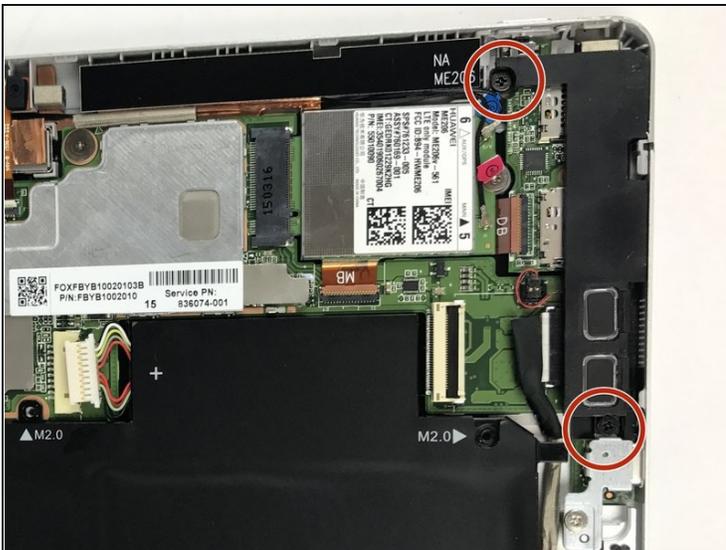

- Unscrew the speaker assemblies.
- Each speaker has two PM2.0×3.4 screws securing the speakers as shown. Use a Phillips #0 to unscrew all four screws

## Step 8

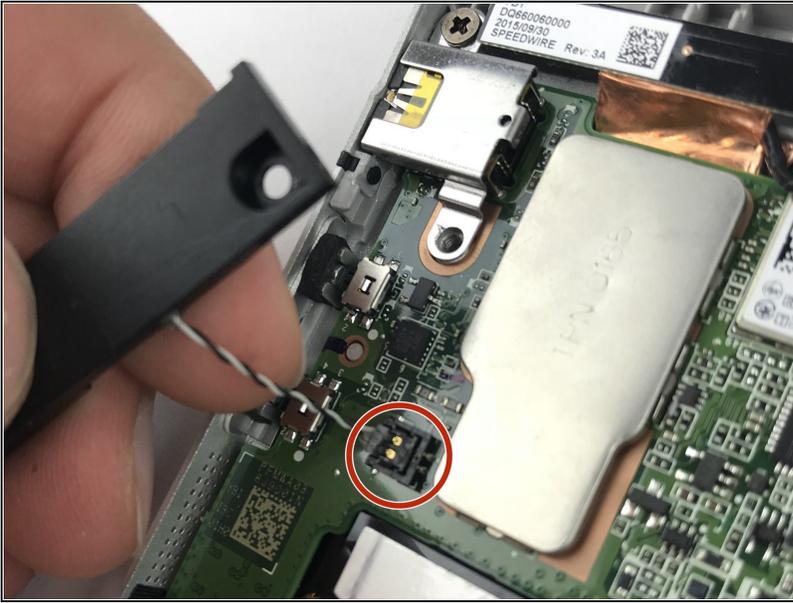

- Each speaker is connected to the motherboard by a cable.
- ⚠ Remove this cable by gently working the connector out of the socket on the motherboard. Be careful not to damage the socket on the motherboard.

## Step 9



- Both speakers should now freely come out of the laptop.

To reassemble your device, follow these instructions in reverse order.