




# Fujitsu Lifebook Stylistic Q584 Speakers Replacement

Remove the inner speakers from the Fujitsu Lifebook Stylistic Q584

Written By: Connor Stanton

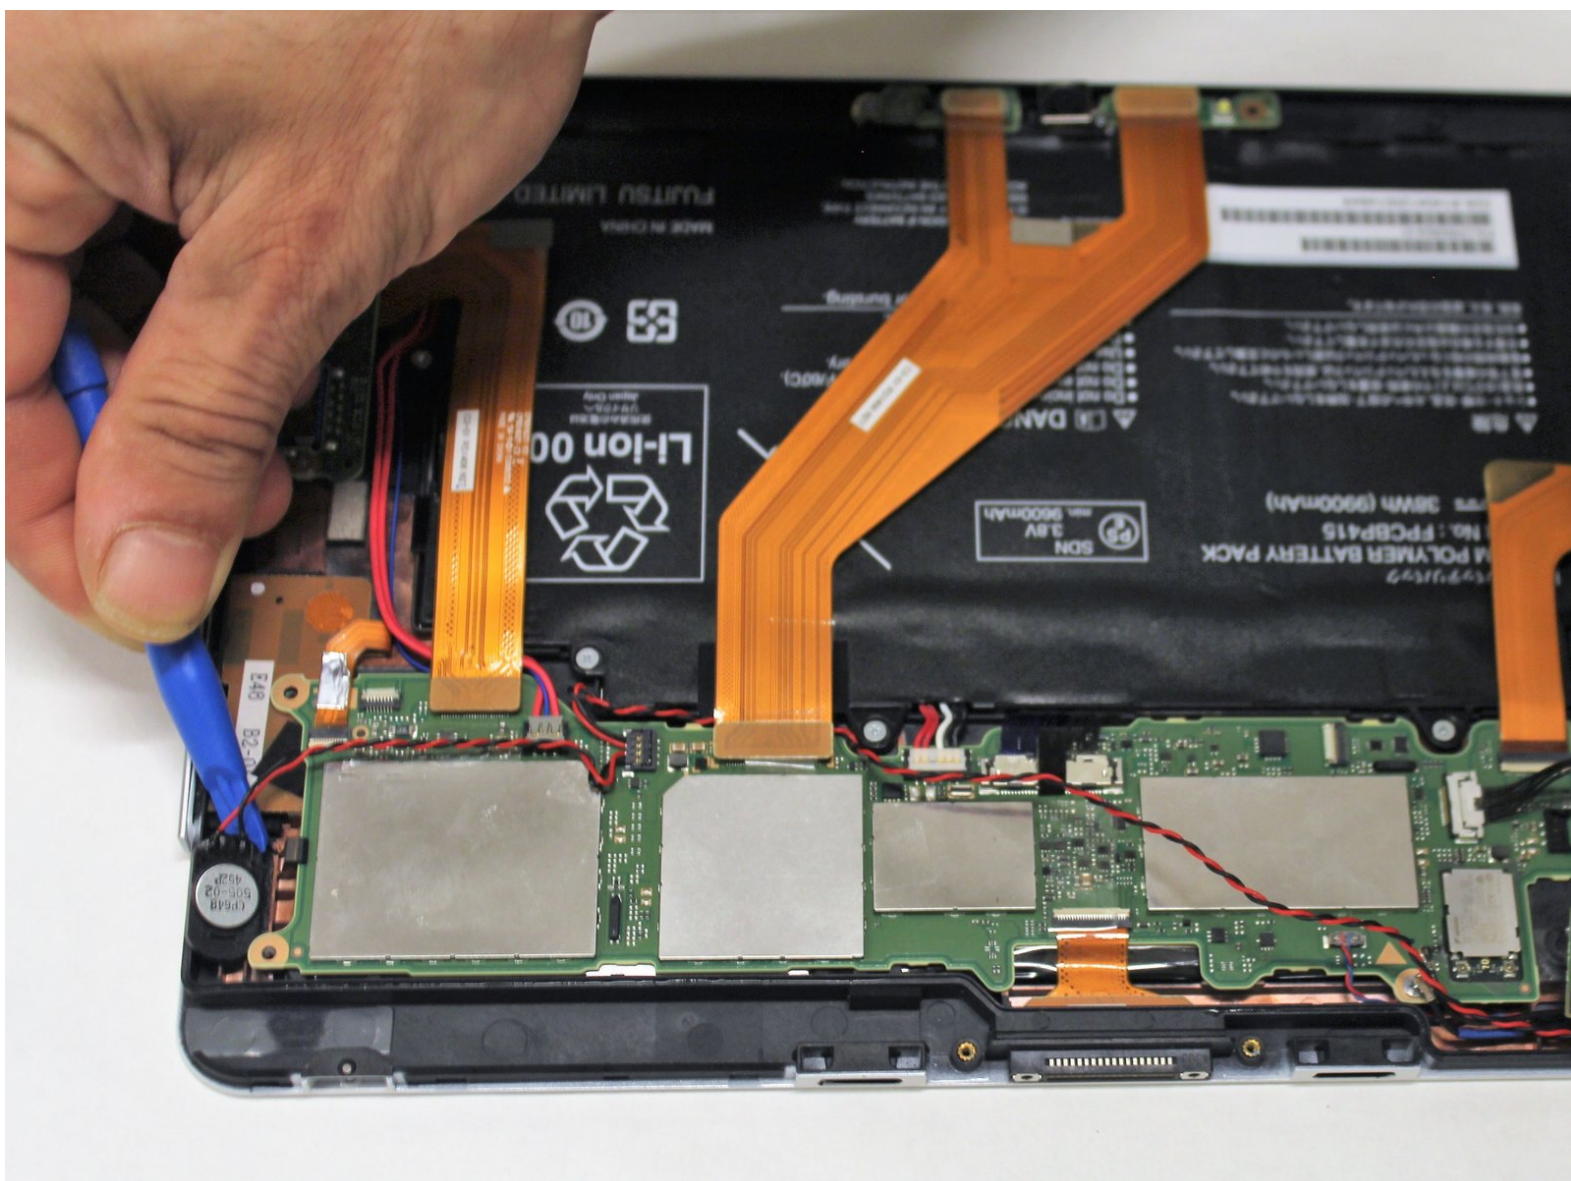

# INTRODUCTION


If your speakers are damaged or not working this guide will show you step-by-step instructions on how to replace your speakers

---

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Back Case

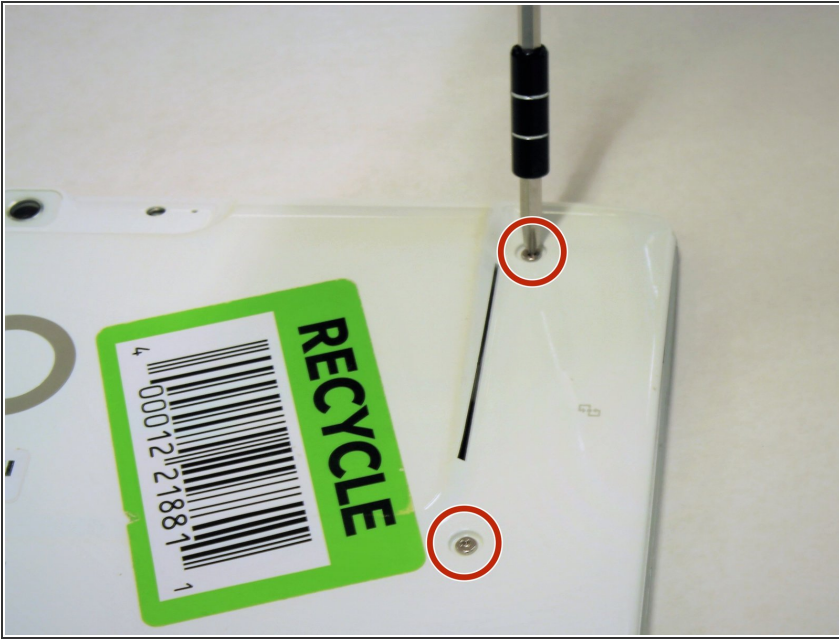

- Remove the white sticker covering the screws *(if applicable)*.
- Use the PH1 screwdriver to remove the four 2 mm screws from the the backside of the device.


## Step 2



- Insert the plastic opening tool along the seam of the back case.
- Gently slide the plastic opening tool along the entire seam popping the clips free.




## Step 3

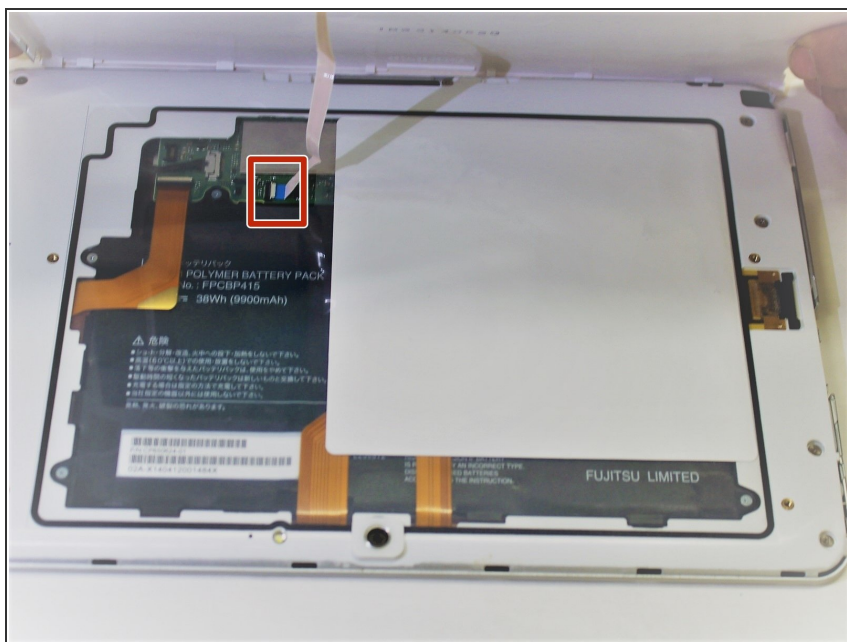


- Carefully lift the back case and remove the smartcard ribbon from the motherboard.

## Step 4 — Inner Back Shield

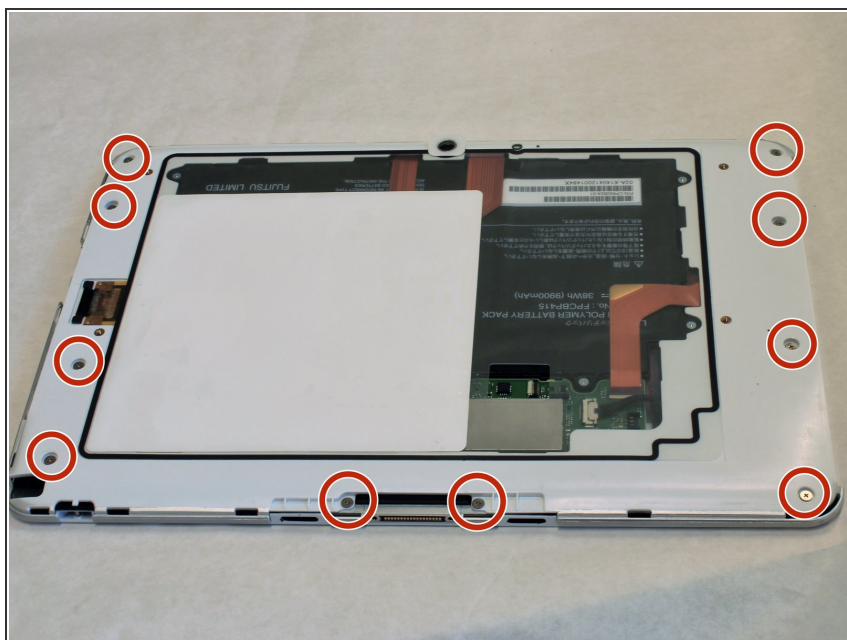


- Remove the ten 3mm screws with a PH00 screwdriver from the shield.

## Step 5

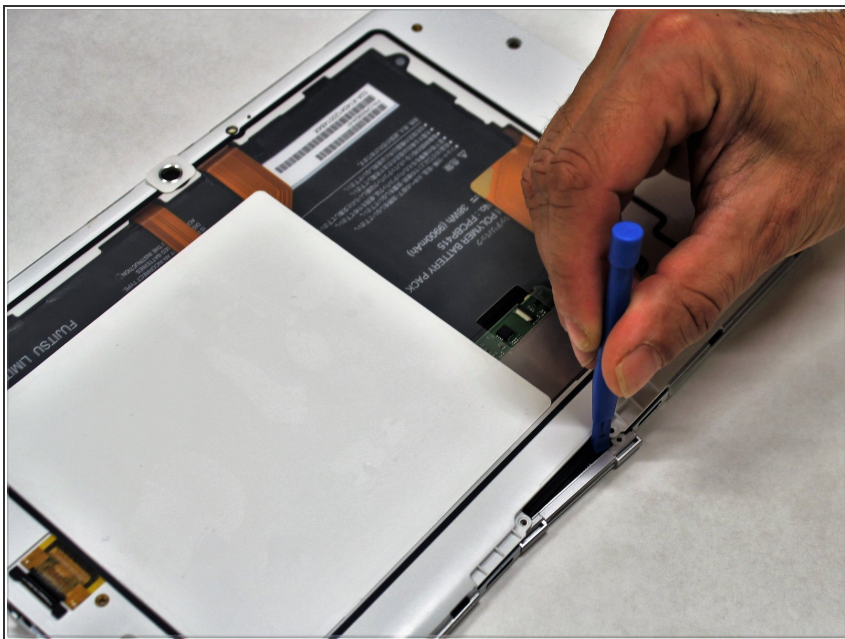

- Remove the grey docking station port cover.

## Step 6

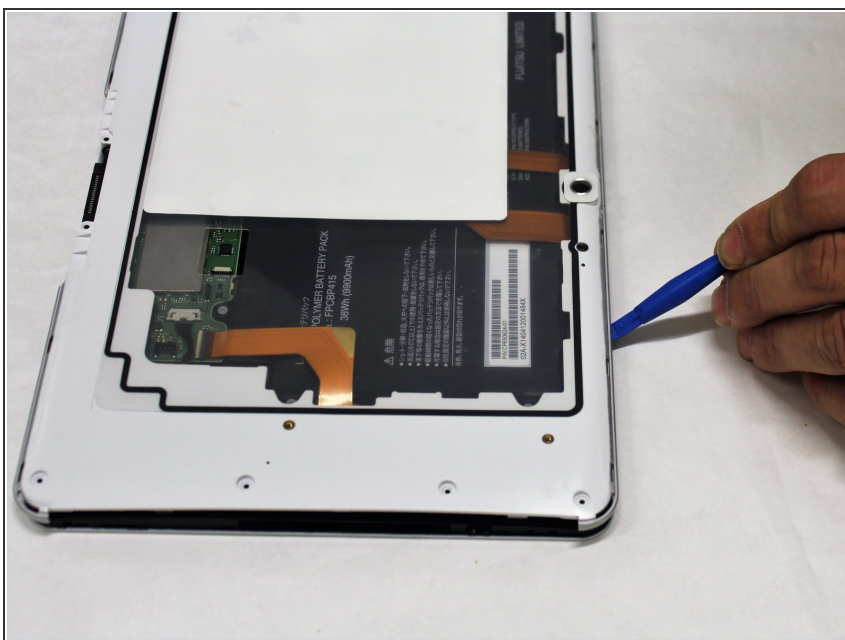


- Gently slide the plastic opening tool along the entire seam popping the clips free.

## Step 7



- Lift the shield away from the device and remove the fingerprint scanner's ribbon from the motherboard.


## Step 8 — Speakers

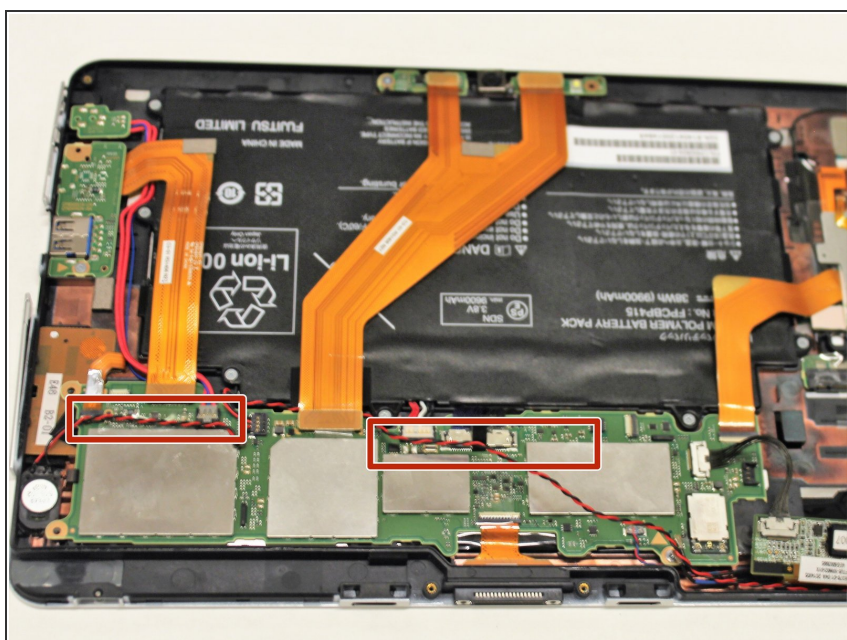

- Pull up the cord that connects the battery to the motherboard




## Step 9

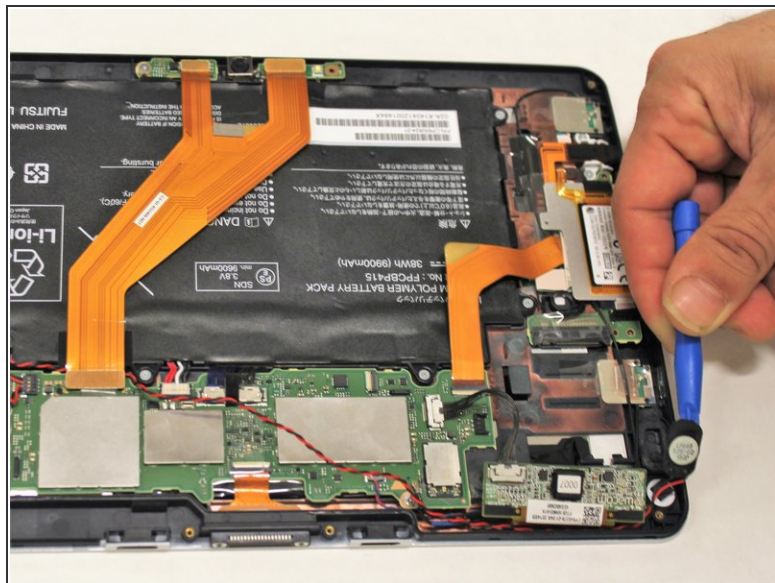

- Use the narrow plastic opening tool to pry the speakers from the casing.

## Step 10

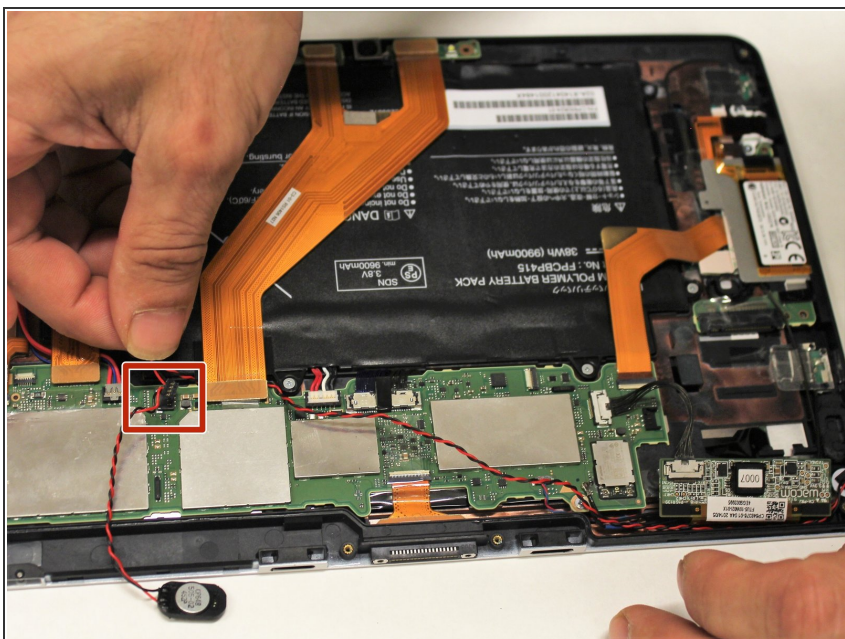

- Unplug the speaker wires from the motherboard.

To reassemble your device, follow these instructions in reverse order.