


Asus Chromebook C300MA-BBCLN12 Key Replacement

Replace a broken or sticky key on your keyboard.

Written By: Lainie Clem

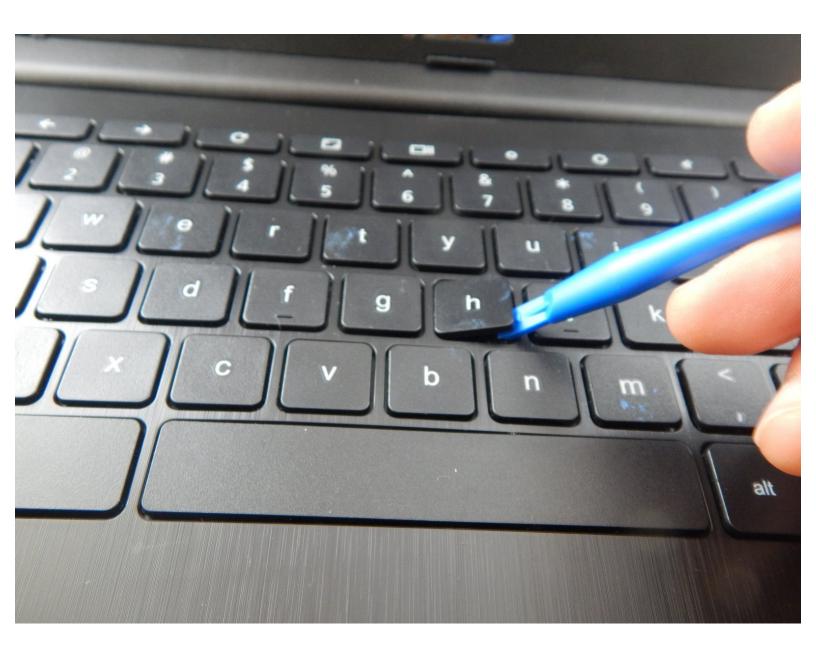

This document was generated on 2020-11-21 02:31:32 PM (MST).

INTRODUCTION


This repair guide provides step-by-step instructions for replacing individual keys of the ASUS Chromebook C300M-BBCLN12 keyboard. The repair may be required if keys are sticking or are not working.



TOOLS:


- Phillips #00 Screwdriver (1)
- Tweezers (1)
- iFixit Opening Tools (1)
- Spudger (1)

Step 1 — Individual Key

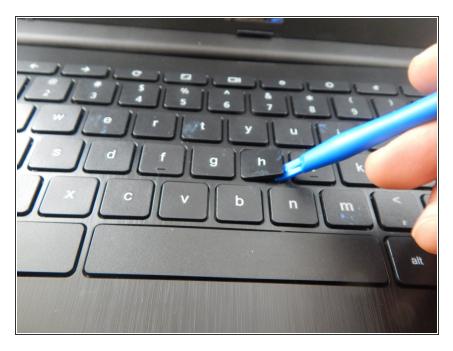

- Wedge the plastic opening tool between the defective key and the keyboard.
- Pivot the plastic opening tool back and forth to loosen the defective key.

Step 2

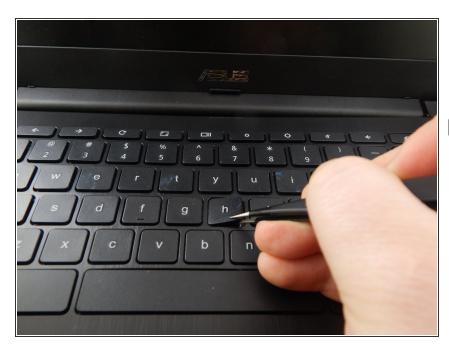

- Grip the edge of the loosened key with the tweezers and pull upward until it separates from the keyboard.
- Individual keys are designed to snap on and off the keyboard. Remove the defective key and press the replacement key firmly in its place. There will be a clicking sound when it is secured.

To reassemble your device, follow these instructions in reverse order.