



Acer Aspire 4810TZ-4120 Screen Replacement

To replace a faulty or a cracked screen, follow these directions.

Written By: Sean Howard



INTRODUCTION

To replace a faulty or a cracked screen, follow these directions.



TOOLS:


- [Fingers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Unlock the battery by pushing and holding the lock button.

Step 2

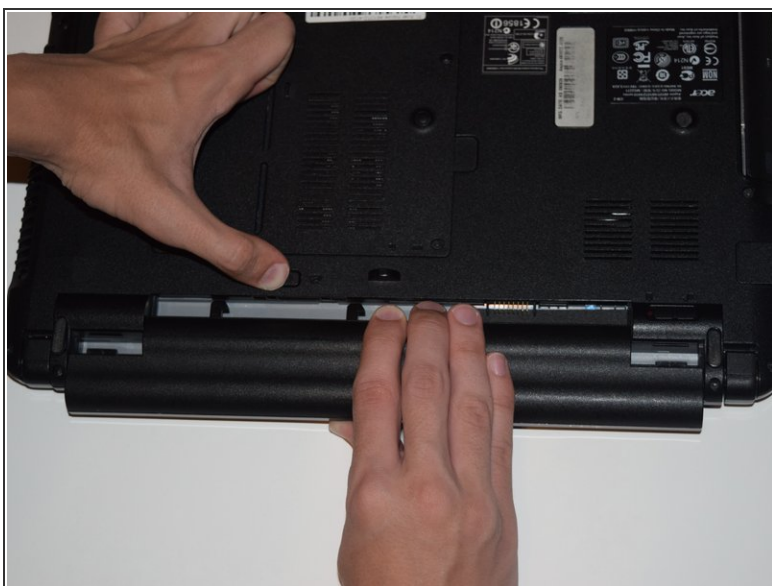

- While holding the lock button, pull out the battery
- The battery is now ready to be replaced with a new one

Step 3 — Screen





- Locate and remove the four (4) pads using Angled Tweezers

Step 4




- Remove the four screws that were under the pads

Step 5

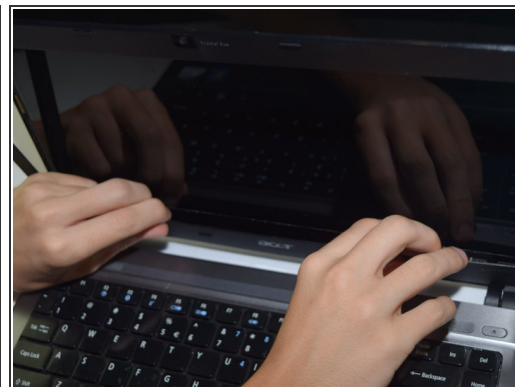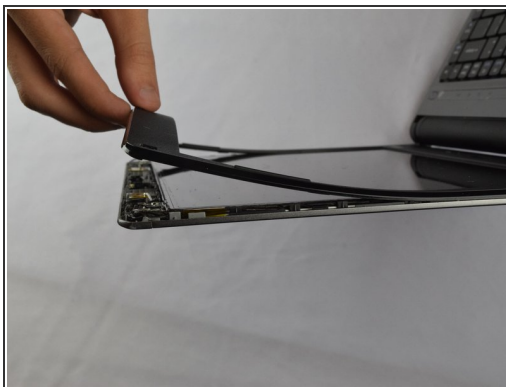

- Carefully pull the bezel (frame) off of the screen

Step 6

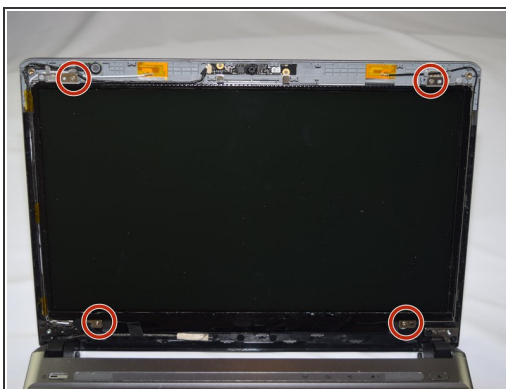


- Locate the four screws that are holding the screen in place
- Remove the screws

Step 7



- Pull the screen out gently
- Lay the screen down on the keyboard

Step 8

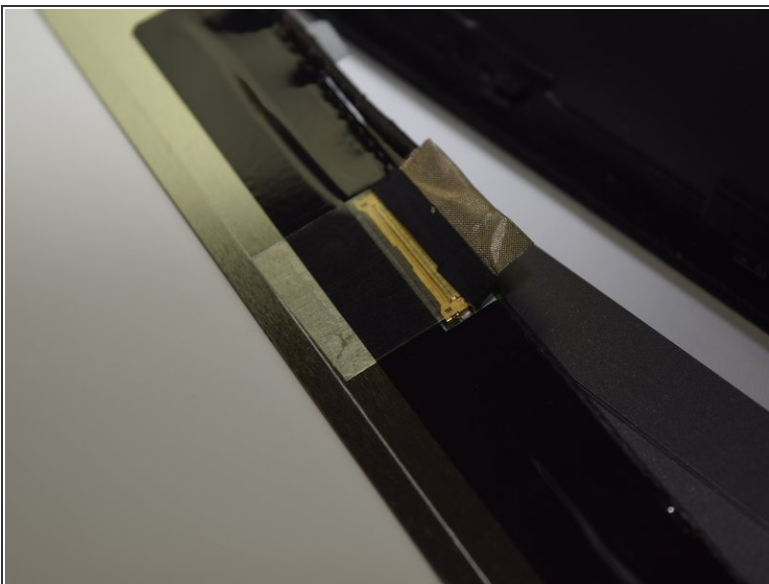

- Locate the connector between the screen and the computer
- Remove any tape

Step 9



- Gently pull the connector off of the screen
- The screen can now be replaced with a new one

To reassemble your device, follow these instructions in reverse order.