




# Acer Aspire E1-532-2616 Hard Drive Replacement

Acer Aspire E1-532-2616 Hard Drive Replacement.

Written By: samuel Ellis

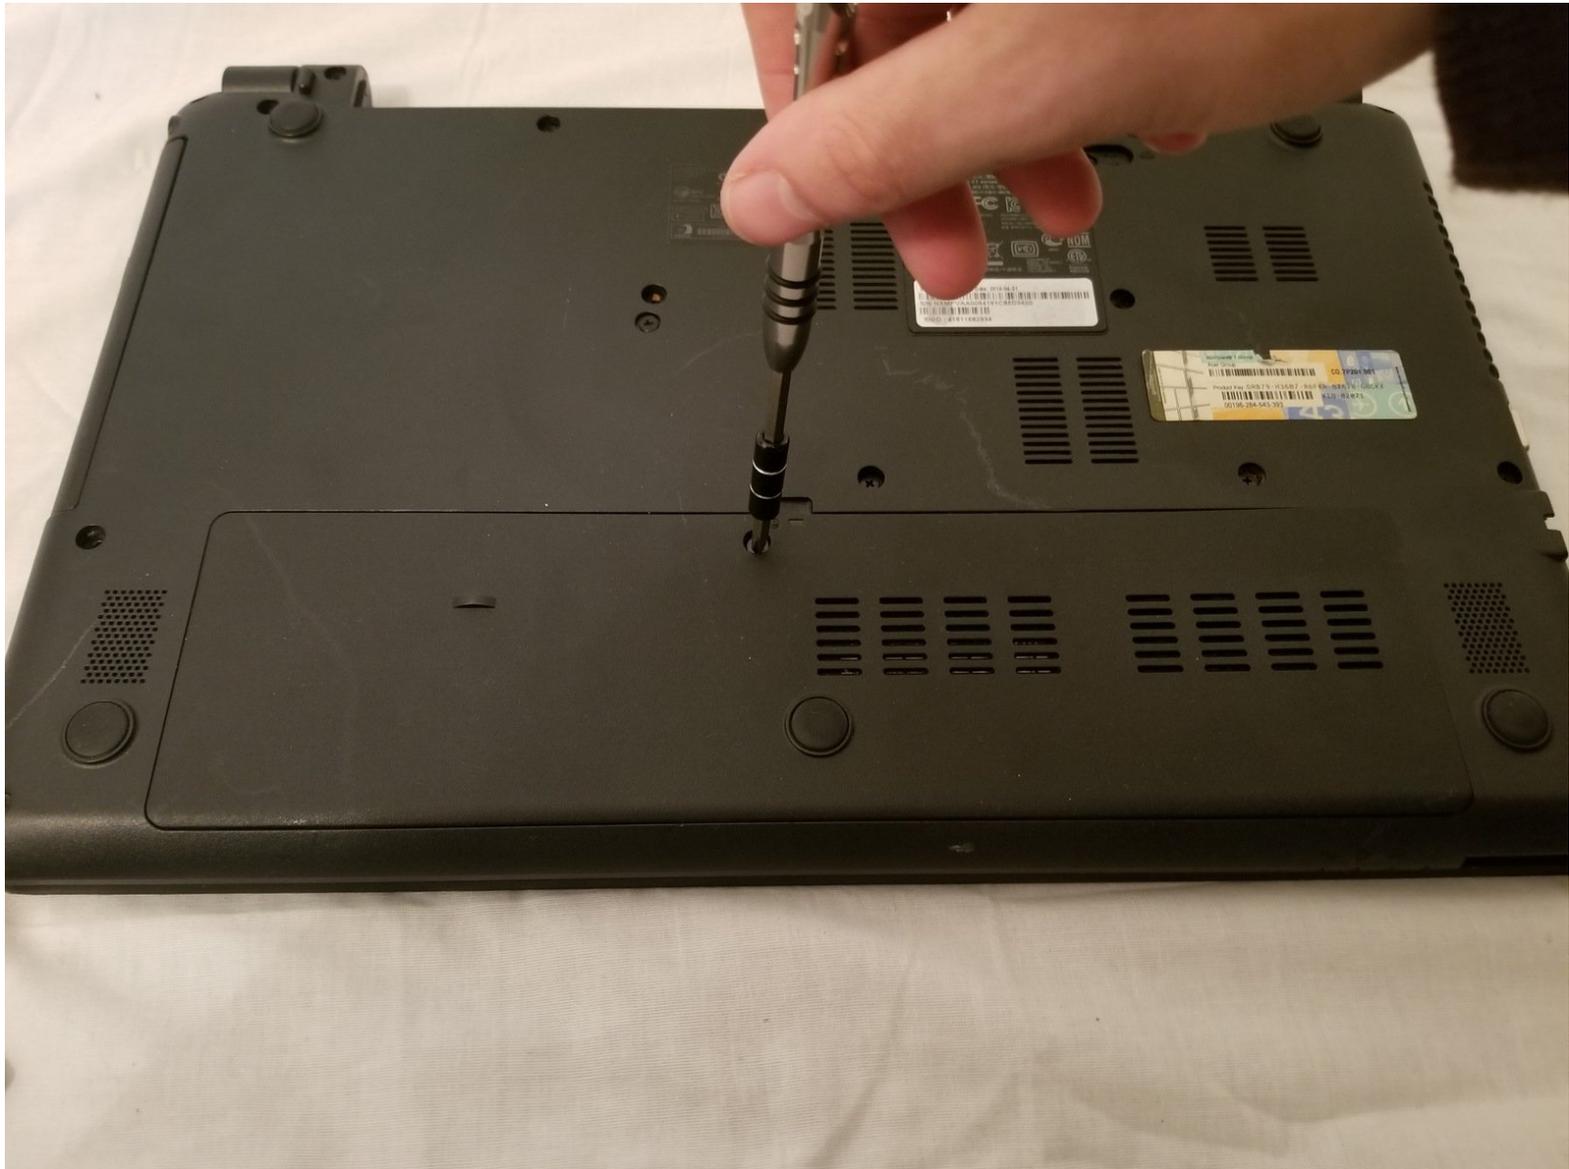

---

## INTRODUCTION


This guide will provide steps to replace the hard drive of a Acer Aspire E1-532-2616.

---

### TOOLS:


- [64 Bit Driver Kit](#) (1)
-

## Step 1 — Hard Drive

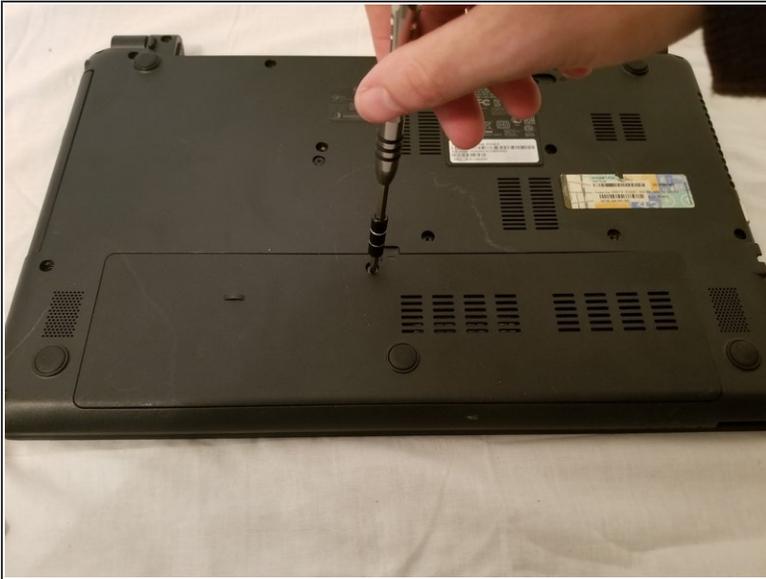



- Use a Phillips screwdriver to remove the CM2.5\*3 screw on the shown cover.
- Lift and remove the cover from the side that had the holding screw.
- ⓘ Lifting the plastic cover will require some pressure.

## Step 2

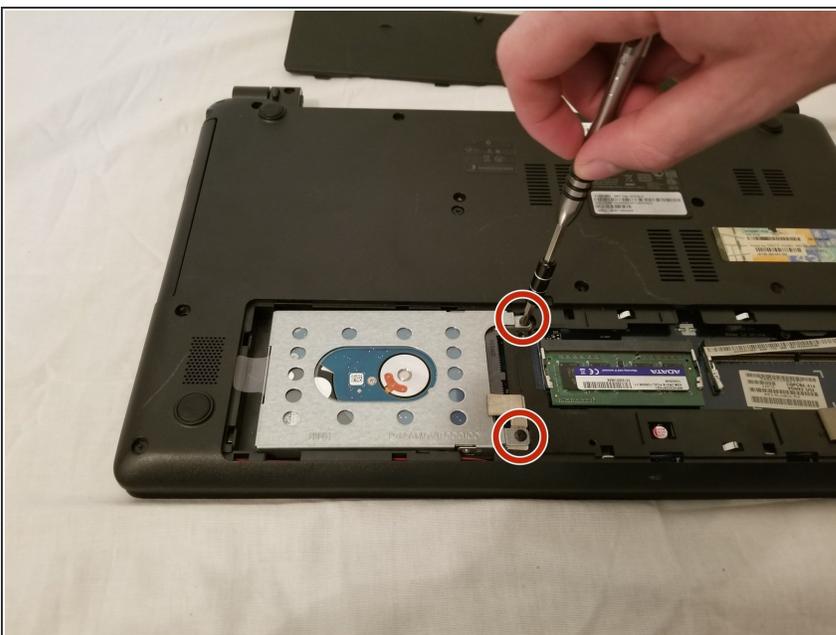

- Unscrew the two CM2\*3-4 screws that attach the hard drive to the Laptop.

### Step 3

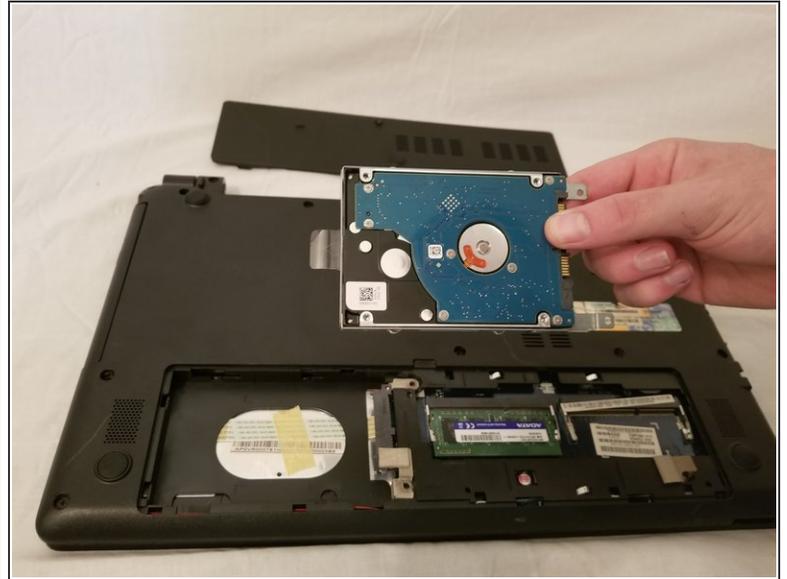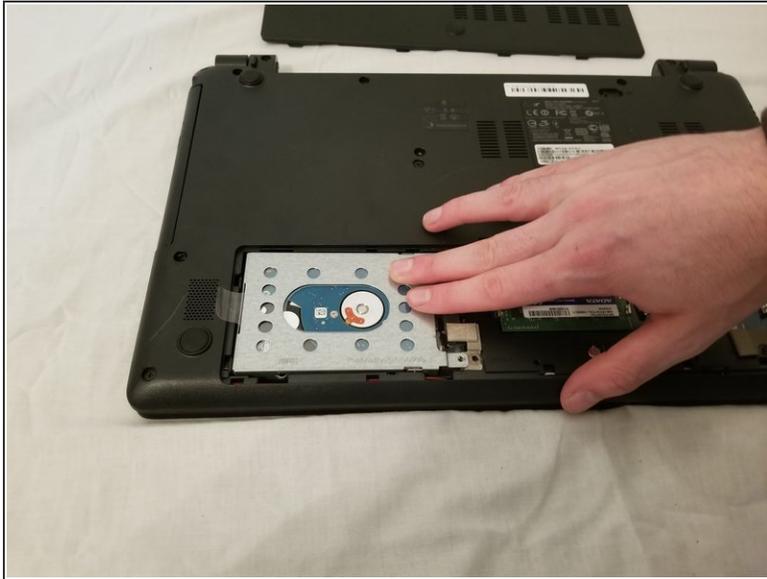

- Push the hard drive away from where the screws were (to the left, if referring to the picture).
- The hard drive will slide to the left, allowing it to be safely removed.

To reassemble your device, follow these instructions in reverse order.