




# HP Envy Touchsmart m6-k125dx Speaker Replacement

replace the speaker

Written By: Danielle Crenshaw

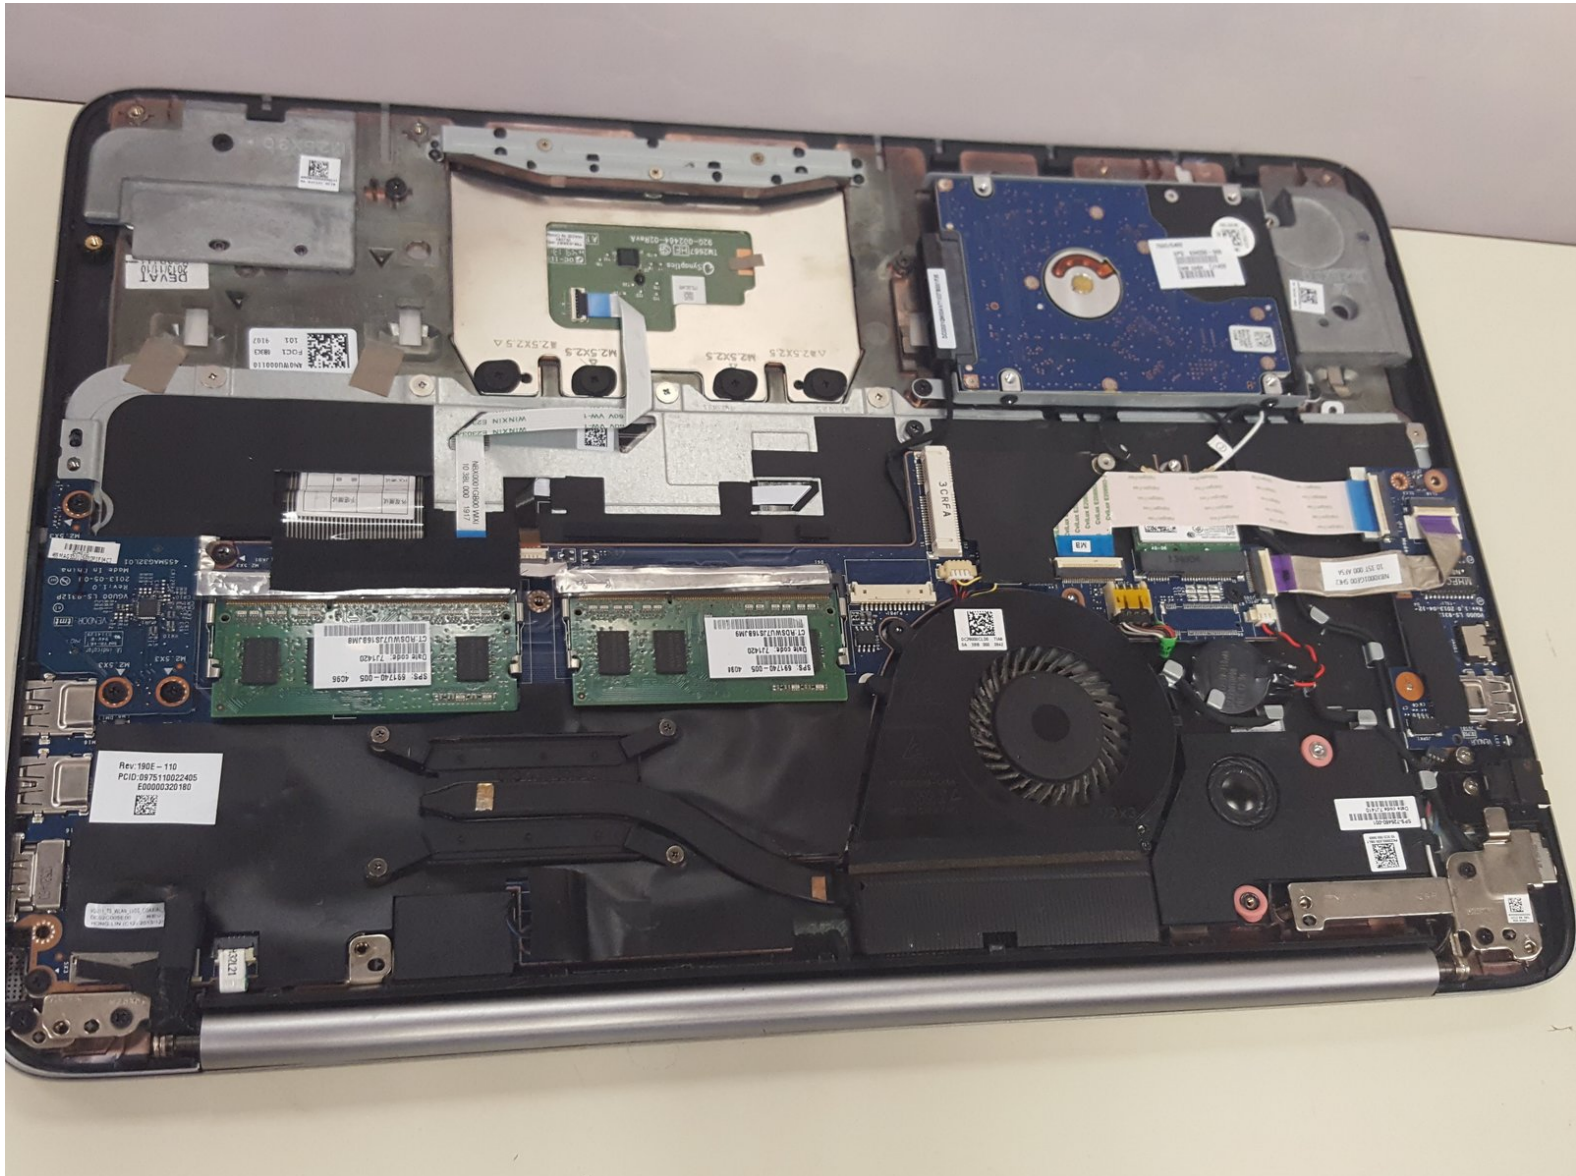

---

## INTRODUCTION

This is a repair guide for the speaker part of the HP Envy Touchsmart m6-k125dx.


---



### TOOLS:


- [JIS #000 Screwdriver](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Back Panel

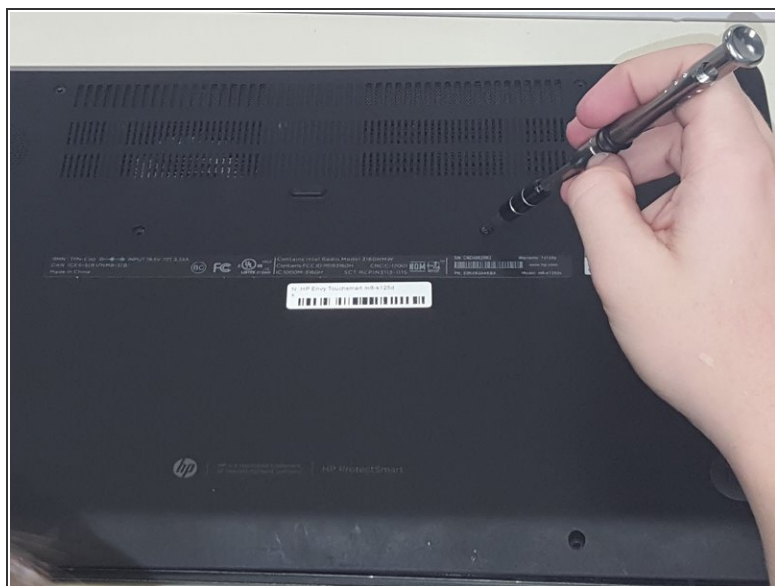

- Turn the laptop over so that the bottom is facing up
- Using the J0 screwdriver, unscrew all 12 M2.5x5.5 screws from the back panel.


## Step 2

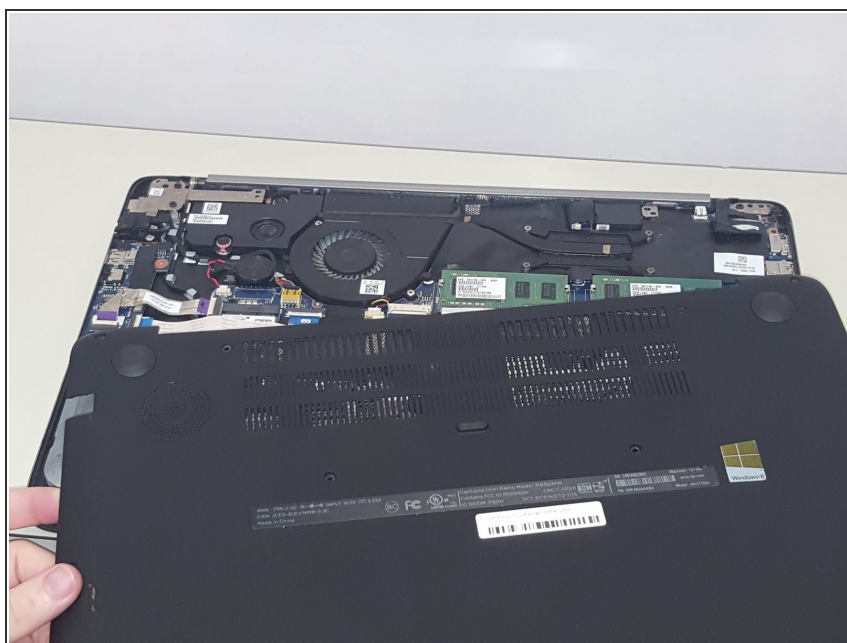

- Carefully remove the back panel to reveal the inner components.





## Step 3 — Speaker

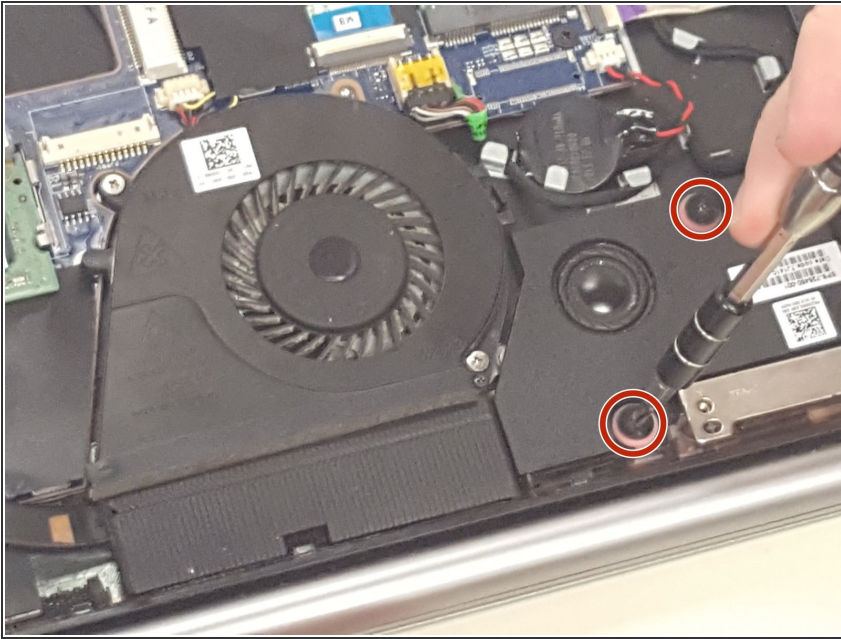

- First, using a Phillips Head screwdriver, unscrew the two Phillips PM 2.5x5.5 screws that are connecting the speaker to the rest of the laptop.

## Step 4

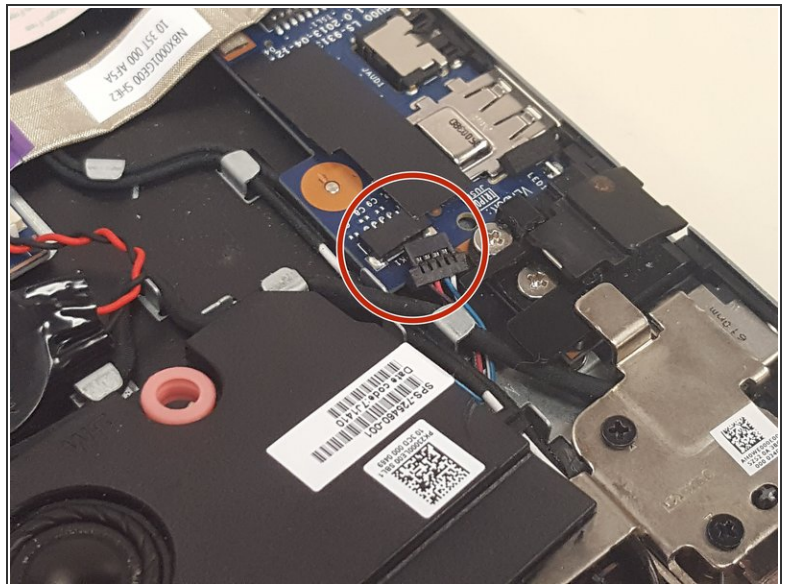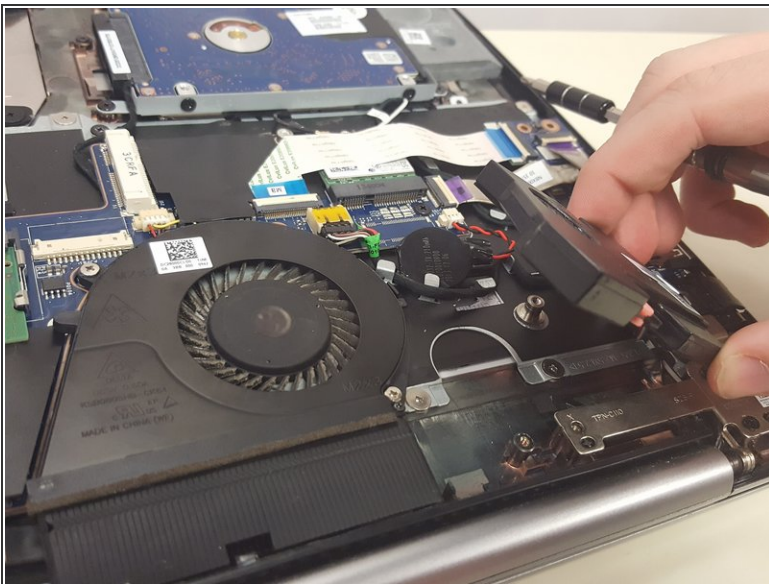

- After unscrewing the screws, remove the speaker and carefully unplug it from the laptop.

To reassemble your device, follow these instructions in reverse order.