


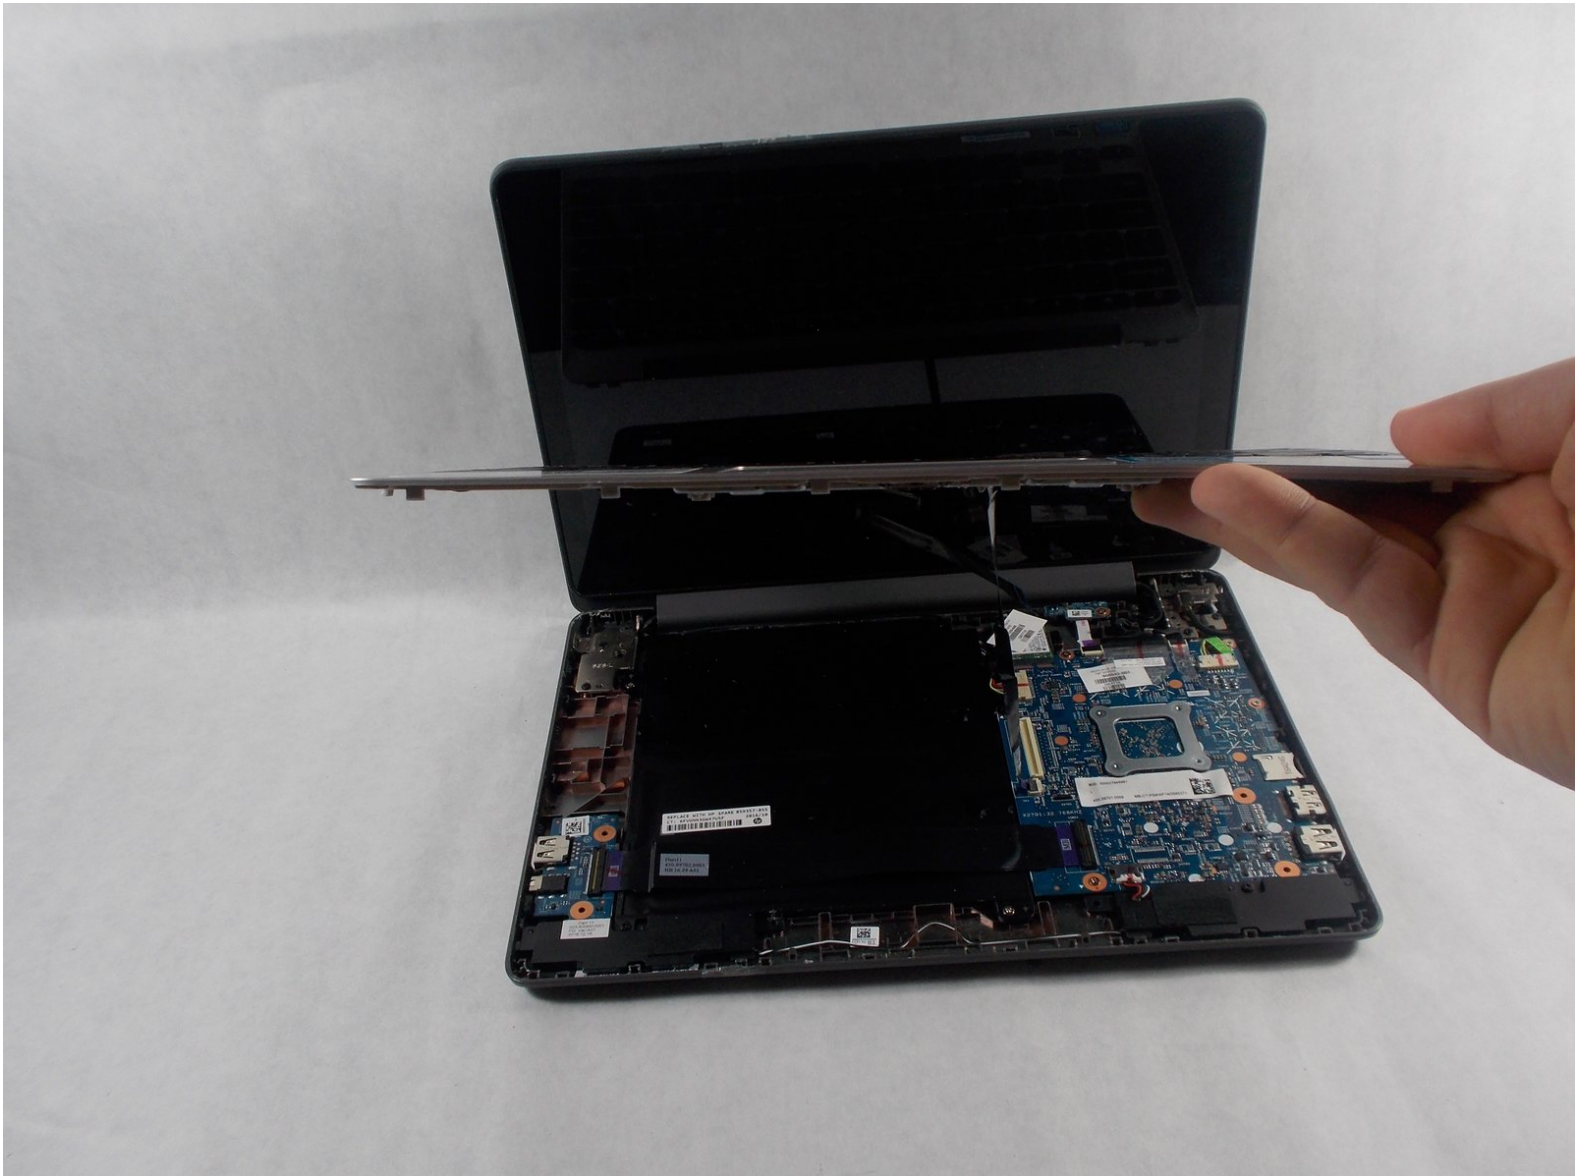

HP Chromebook 11-v011dx Key Board Replacement

This guide will show how to remove the keyboard from the HP Chromebook 11-v011dx.

Written By: Kyle DeMello



INTRODUCTION

The keyboard can become damaged or stop working over time. This guide will show you how to remove the keyboard.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Key Board



- Wedge the spudger between one of the black rubber caps on each of the four corners on the bottom of the HP Chromebook 11-v011dx.
- Lift up the black rubber cap until it is completely removed.
- Repeat this until all four of the black rubber caps are removed.

Step 2




- Locate the two smaller black rubber caps on the top corners of the HP ChromeBook 11-v011dx. Wedge the spudger between one of them.
- Lift up the small black rubber cap until it is completely off.
- Repeat this step one more time to remove the other small black rubber cap on the other side.


Step 3



- Locate the eleven screws on the bottom the HP ChromeBook. Six are located under the larger black rubber caps and the others are in different locations.
- Use a Phillips #0 screwdriver to remove eleven 1.3mm screws.


Step 4

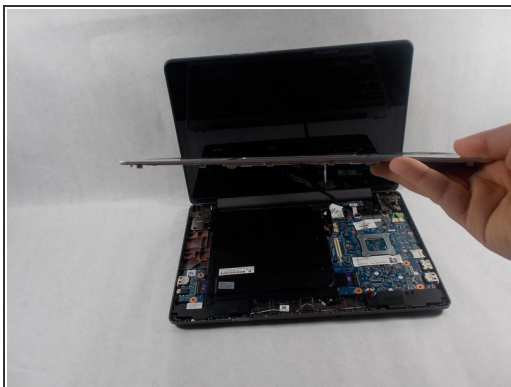

 Make sure to do steps 1-3 or it will be impossible to lift up the key board and you may also do damage to the hardware.

- Wedge the spudger between the key board and the bottom panel, carefully go around the keyboards edges gently.
- Lift the spudger a little in the front of the keyboard until the key board lifts up.
- With your hands, slowly and carefully lift the key board up.

Step 5

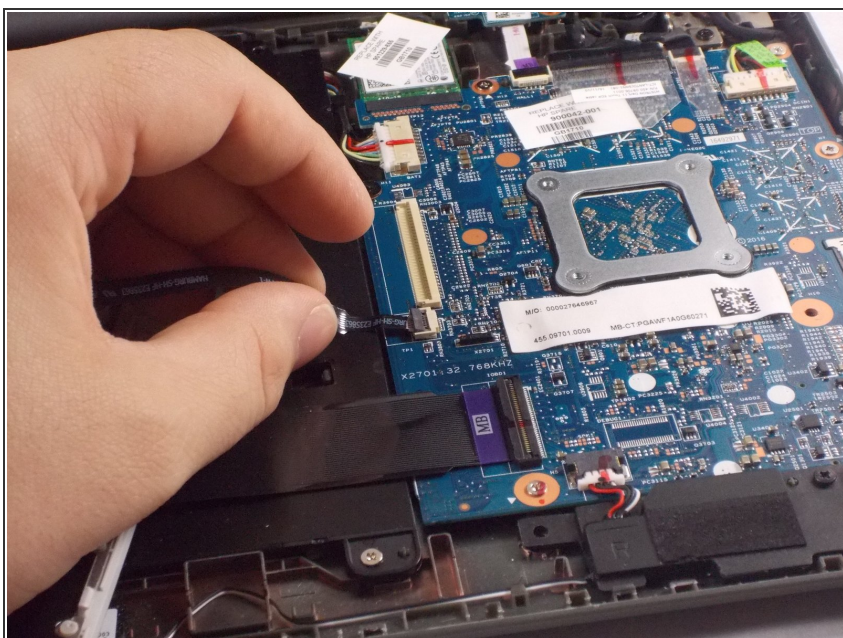

- Locate the black tab that holds a wire in place that keeps the keyboard connected to the mother board.
- Slowly unplug this wire that connects to the key board.

To reassemble your device, follow these instructions in reverse order.