



Craig CMP801 Back Cover Replacement

Use this guide to remove the back cover and replace if needed.

Written By: Duyen



INTRODUCTION

Use the metal or nylon opening tool(s) to remove the back cover.



TOOLS:

 
- [Metal Spudger](#) (1)
-

Step 1 — Back Cover




- Locate the opening line between the cover and the device. Then locate the groove near the charging port.

Step 2

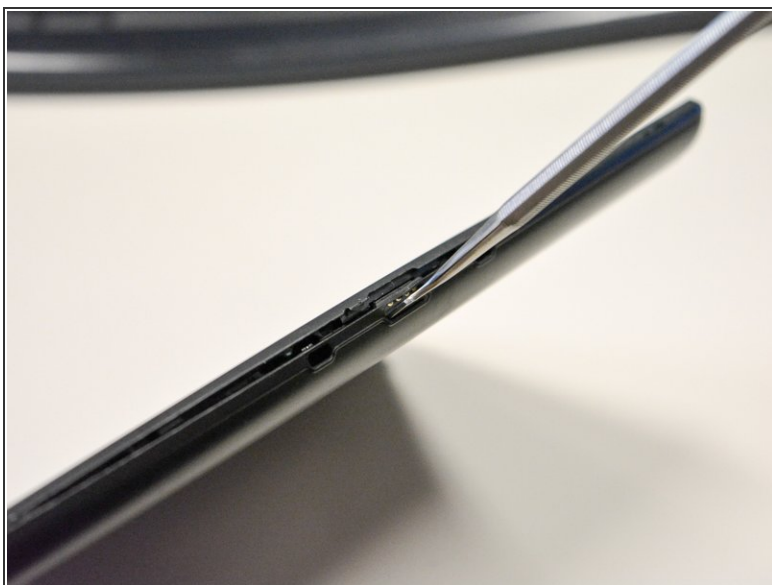

- Use a metal spudger to separate the back cover from the front touch screen.
- To do this, place the metal spudger in between the groove near the charging port of the device to unlatch the first clip.

Step 3

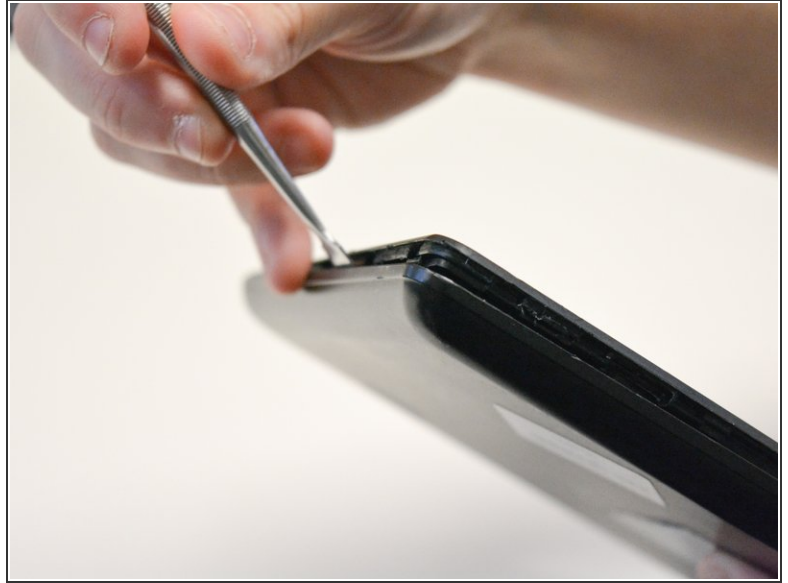

- Continue to separate all of the clips around the device until the back cover comes off completely.

To reassemble your device, follow these instructions in reverse order.