



Samsung NP350V5C-T02US CD Drive Replacement

This guide will help assist in removal of the CD Drive.

Written By: Syed Asad



INTRODUCTION

This guide helps users to replace the CD Drive successfully by following these easy steps.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — ODD/HDD/Memory Cover




- Flip the laptop over so that the bottom is facing toward you.

Step 2

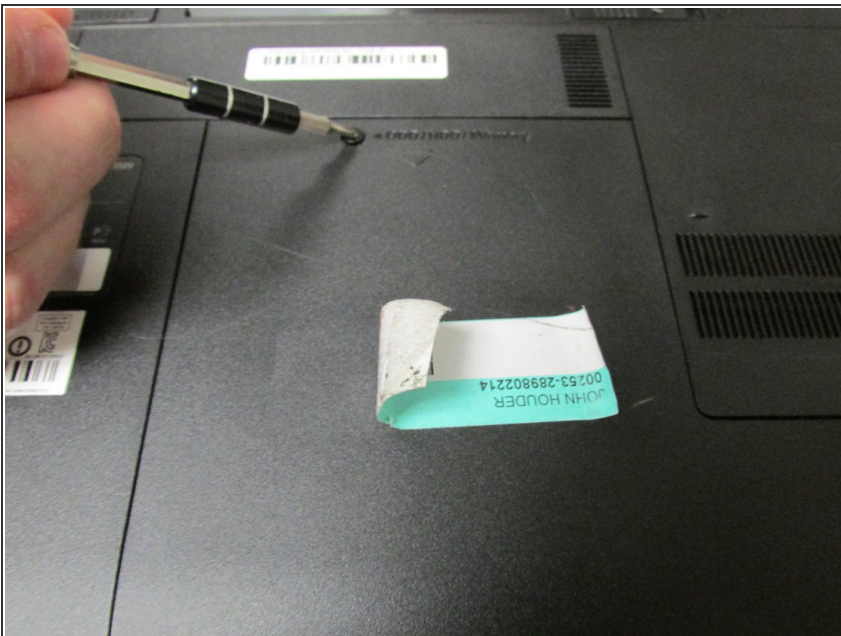

- Using the Phillips #1 screwdriver, remove the M2.5X5 mm screw to take the back cover out.

Step 3

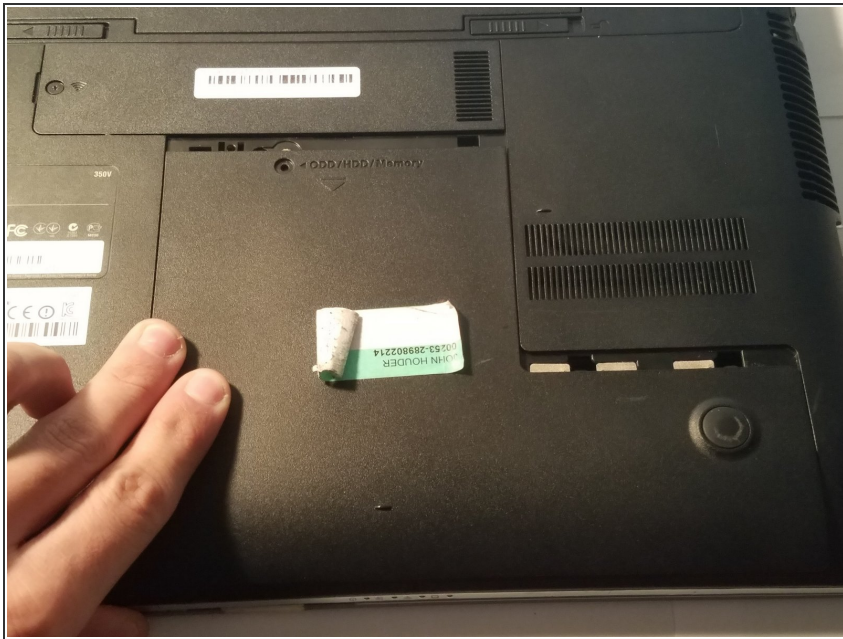

- Using your hand slide the ODD/HDD/Memory panel off in a downward motion.

Step 4 — CD Drive



- Locate and remove the M2.5X5 screw on the left hand side.

Step 5



- Pull out the CD drive and replace with the new one.

To reassemble your device, follow these instructions in reverse order.