



# Dell Inspiron 17R-5737 Battery Replacement

Remove the battery as a precaution in replacing other parts of the device. Or replacing the battery that will not charge.

Written By: David Callahan



## INTRODUCTION

For replacing any part of your device, this will be your first step. If we do not remove the power supply, we may risk accidentally short-circuiting the laptop or even shocking and harming ourselves.

## Step 1 — Battery



 Make sure the laptop is off before attempting to remove the battery.

- Flip over your laptop so that the battery faces you.

## Step 2



- Slide each latch away from the battery to unlock it.

### Step 3



- Lift the battery upwards to remove it.
- ⓘ Continue holding the latches when removing the battery.

To reassemble your device, follow these instructions in reverse order.