



Asus G750JW-BBI7N05 Hard Drive Replacement

This guide will help you replace the hard drive for your Asus G750JW-BBI7N05 laptop.

Written By: Siyuan Yan



INTRODUCTION

This guide will help you replace your laptop's hard drive.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Power off and unplug your laptop, then turn it over.

Step 2




- Slide the battery release latch all the way to the right. This will cause the battery to "pop" out slightly.

Step 3



- Remove the battery from its compartment.

Step 4 — Hard Drive

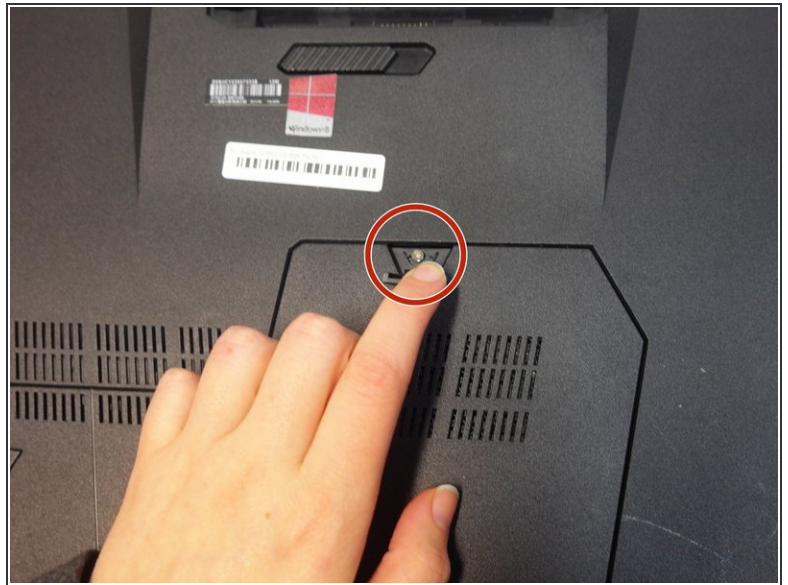


- Lift up the rubber stopper on the backplate to expose one Phillips #00 screw. Unscrew it until it becomes loose.
- ⚠ This screw is permanently connected to the backplate and cannot be removed. Unscrewing it only allows you to remove the lower case from the laptop.
- ℹ The backplate is the plastic plate on the underside of the laptop that covers some of its easily accessible internal components.

Step 5



- Use an opening tool to pry up the backplate along its edges, then remove it.
- ⓘ You may need to apply some force when prying up the backplate.
- ★ Keep in mind: During reassembly, replace the backplate starting from the bottom.



Step 6

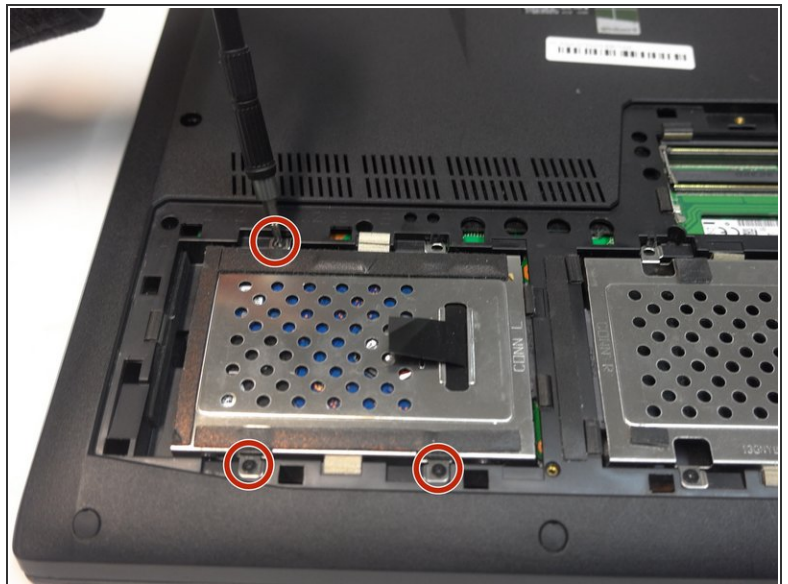

- On the left metal hard drive casing, unscrew and remove the indicated three 4mm Phillips #00 screws.


ⓘ The right hard drive casing is for optional secondary hard drives.

Step 7

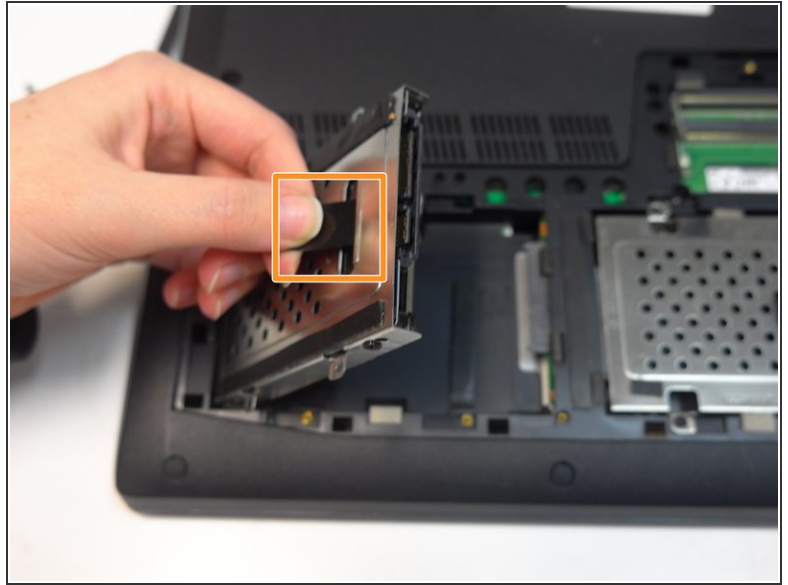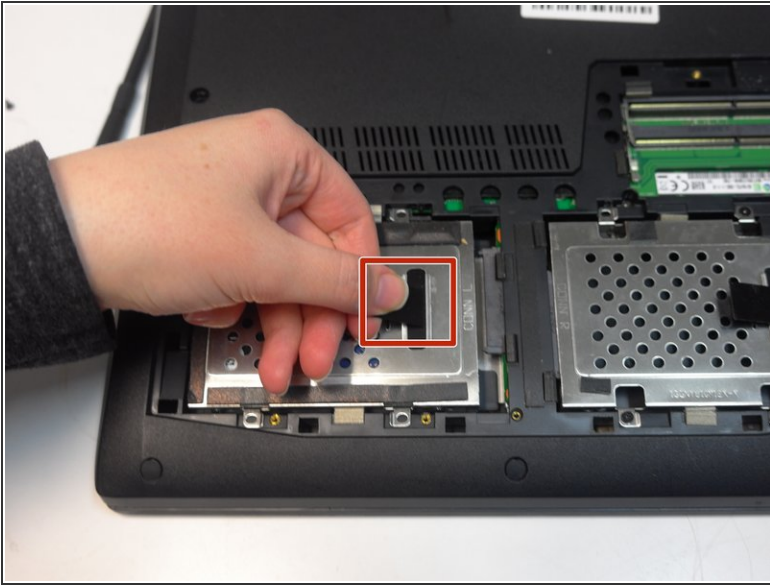

- Use the black tab as leverage to slide the metal hard drive casing all the way to the left.
- Still holding the black tab, pull the hard drive casing up to remove it from the laptop.

Step 8

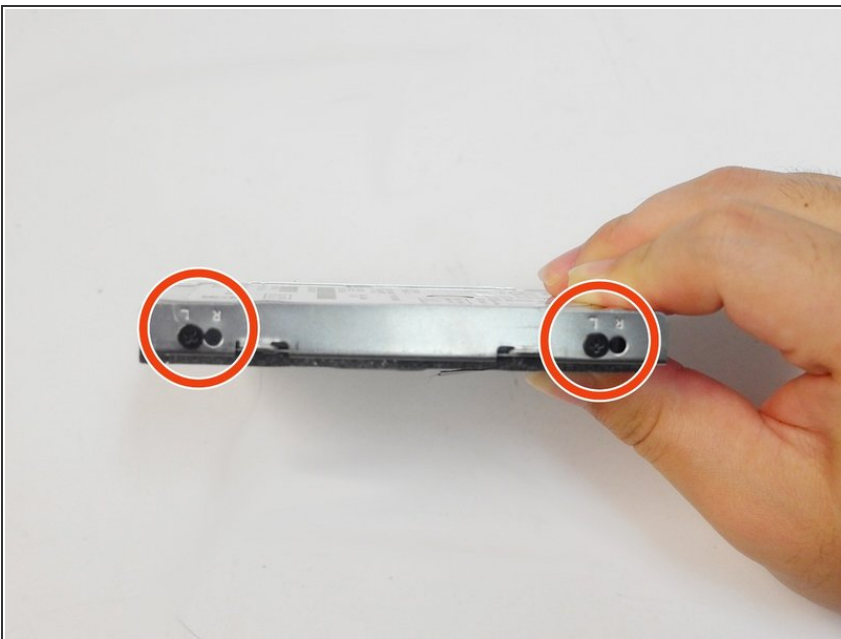

- Unscrew and remove the four 4mm Phillips #00 screws around the metal casing. Each side has two screws.
- Slide the hard drive out of its metal casing.

To reassemble your device, follow these instructions in reverse order.