




Acer E5-571-54FL Battery Replacement

This guide will help you remove or replace the primary battery in the Acer E5-571-54FL.

Written By: Aaron Weissman

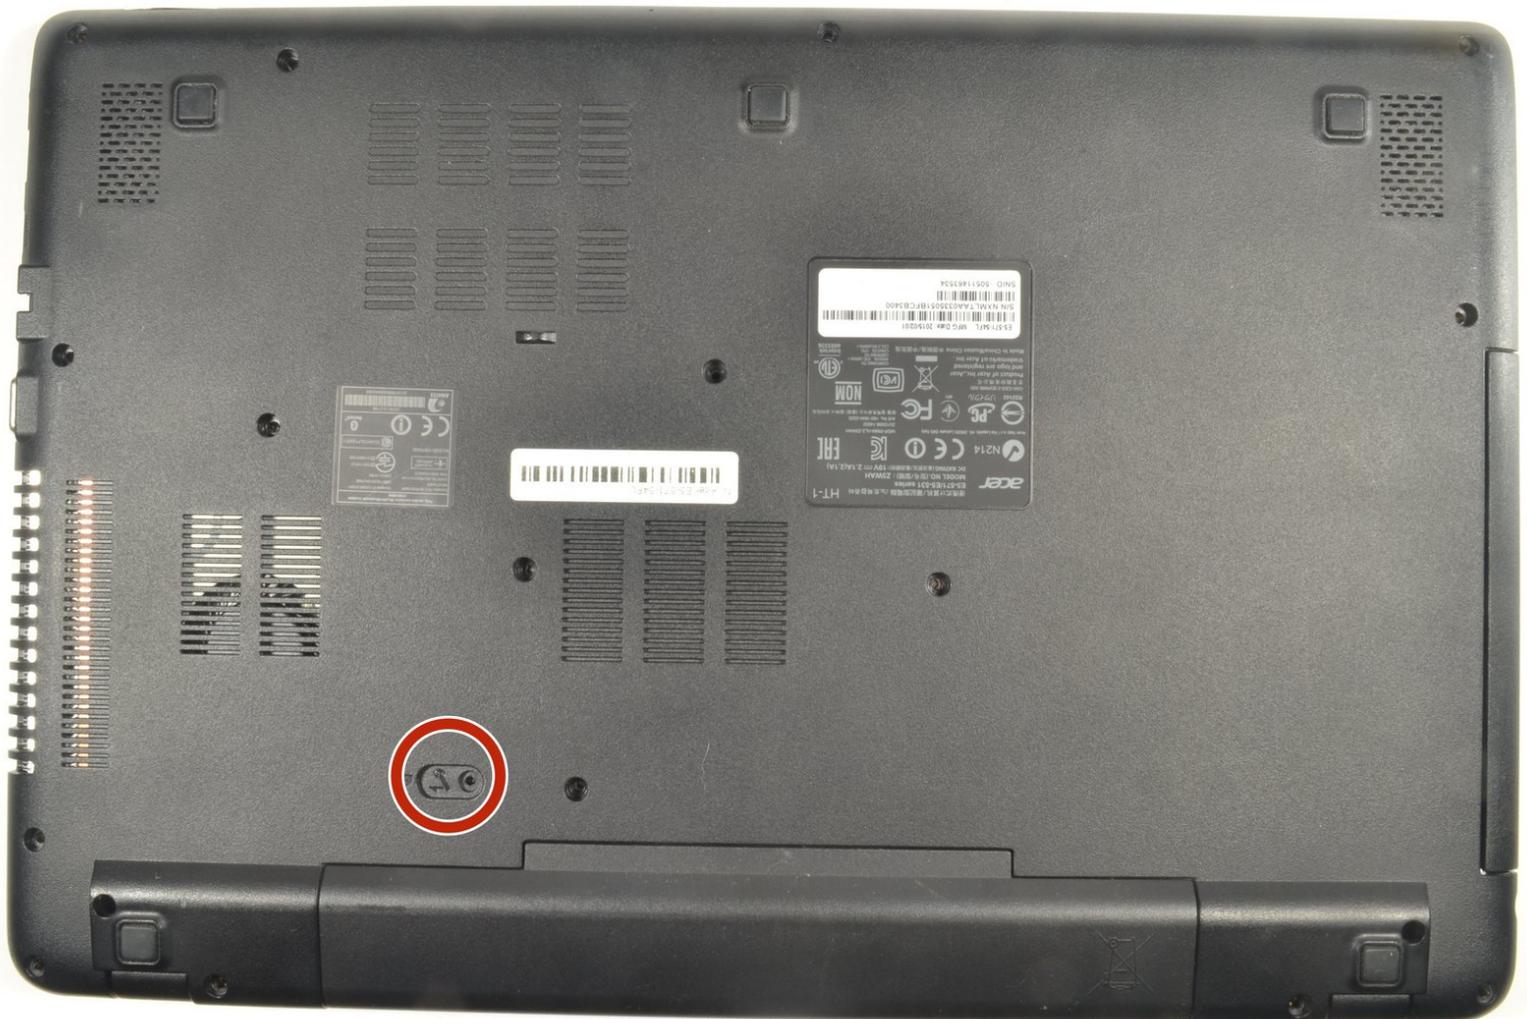

INTRODUCTION

Your Acer Aspire E5-571-54FL Notebook Laptop (part number: NX.MTLAA.033) may require battery removal for several reasons. Replacement due to [battery decline over time](#) is the most common reason.

The Acer battery powers and impacts the laptop's performance. Over time, charge cycles, heat, usage, and lack of use deplete the battery's ability to keep a charge. If your laptop battery is fully charged but experiences power issues, a slow charge, or decreased usage time, [calibrate the battery](#) before following this guide. If problems continue after calibration, replace the battery to revive faster charging and improved laptop performance.

Punctured or swollen batteries can produce fires or hazardous gases. Use extreme caution when handling [damaged batteries](#).

Before replacing the battery, turn off the laptop and disconnect the adapter.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Acer Aspire E5-571 Replacement Battery](#) (1)

Step 1 — Battery

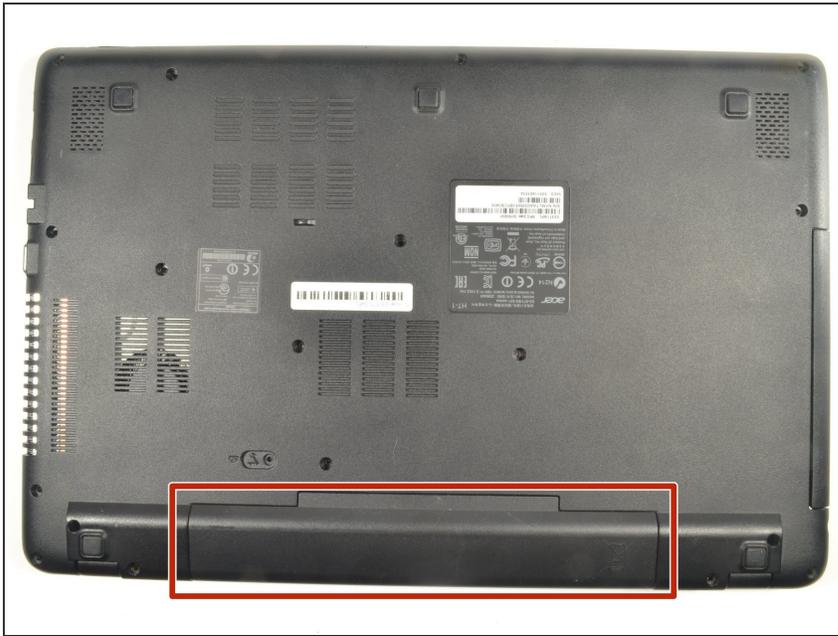

- Power down the laptop prior to beginning.
- Turn the laptop over with the battery closest to your body.

Step 2

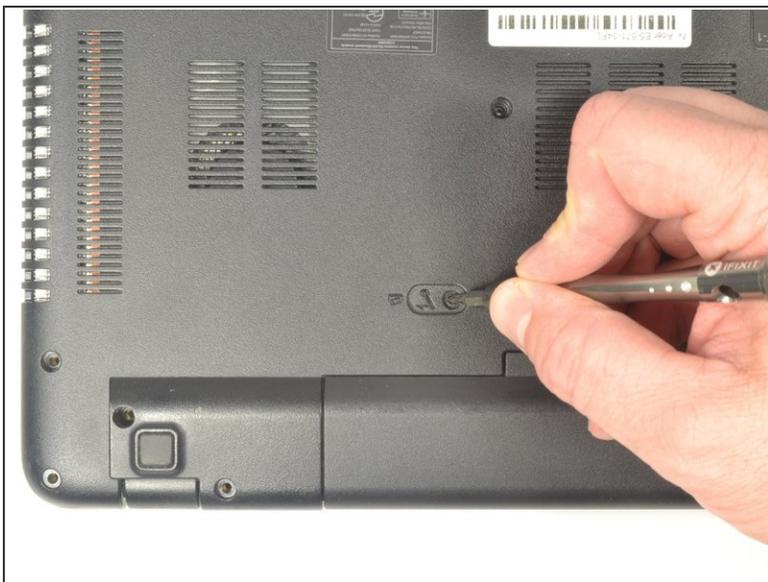

- Insert the pointed end of a spudger into the battery release.
 - Slide the release gently all the way to the left.
- i** You should hear a sound after the slide is all the way left. This lets you know the battery has disengaged.

This document was generated on 2022-05-19 05:20:14 PM (MST).

Step 3



- Place your hands on each end of the battery.
- Pull the battery towards your body to remove it.

To reassemble your device, follow these instructions in reverse order.