



Canon Powershot A3300 IS Back Cover Replacement

How to replace the back cover of a Canon Powershot A3300 IS.

Written By: Phillip Chen



INTRODUCTION

If you have broken the back cover to your camera or it is worn out this guide will show you how to replace it.



TOOLS:

- [JIS #000 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Remove four 2.7 mm screws, two on each side, from the camera with a JIS 000 screwdriver.
 - Remove one 3.5 mm screw on the bottom of the camera with a JIS 000 screwdriver.
- i** When removing the front and back housings, be careful to not break the tabs that hook into the top section of the chassis.

Step 2



- Pull off the back cover.

To reassemble your device, follow these instructions in reverse order.