




# Canon Powershot A3300 IS Front Cover Replacement

How to replace the front cover of the Canon Powershot A3300 IS.

Written By: Phillip Chen

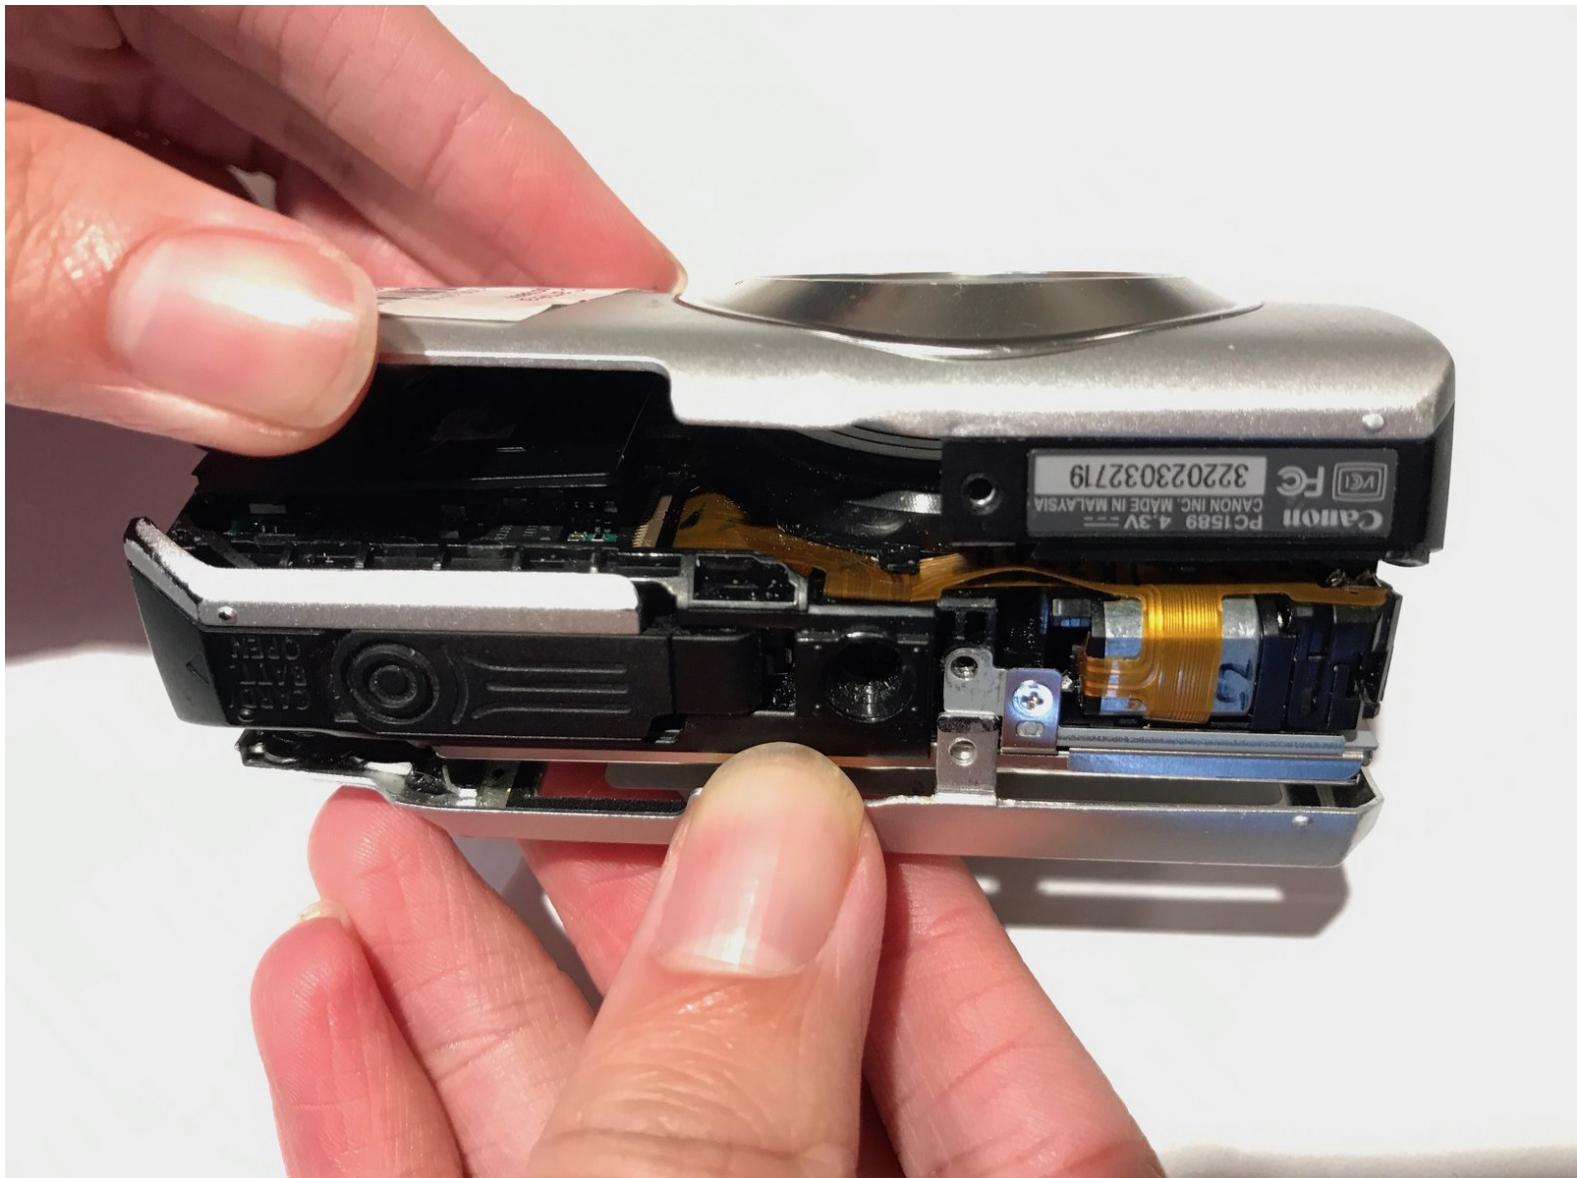

---

# INTRODUCTION

This guide will show you how to replace the front cover of your camera if it is broken or worn.

---



## TOOLS:

- [JIS #000 Screwdriver](#) (1)
-

## Step 1 — Back Cover





- Remove four 2.7 mm screws, two on each side, from the camera with a JIS 000 screwdriver.
  - Remove one 3.5 mm screw on the bottom of the camera with a JIS 000 screwdriver.
- i** When removing the front and back housings, be careful to not break the tabs that hook into the top section of the chassis.

## Step 2



- Pull off the back cover.

## Step 3 — Front Cover

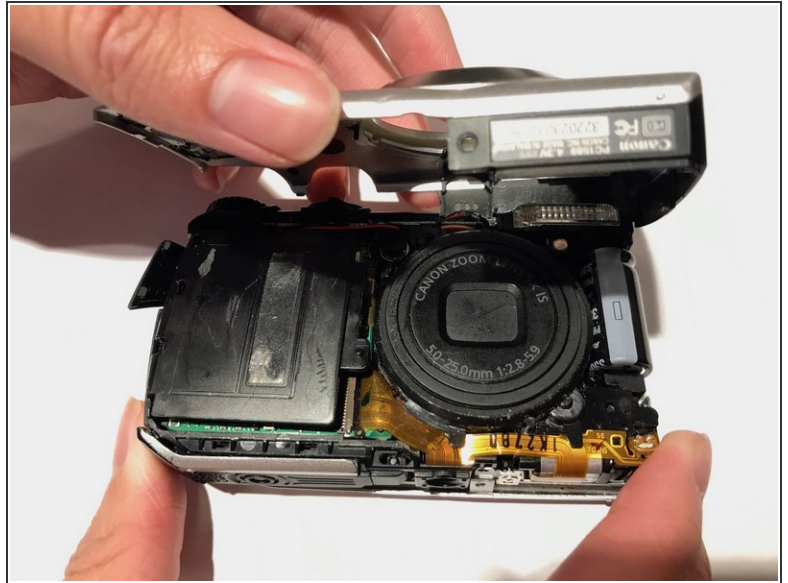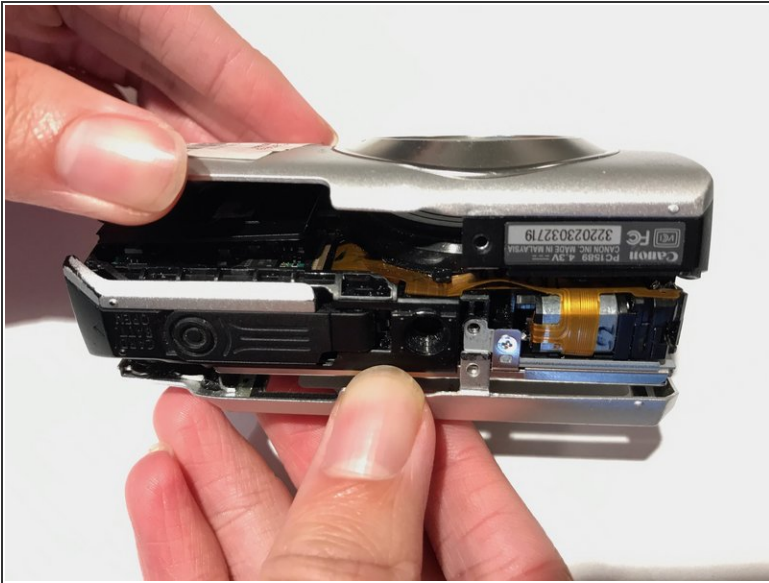

- Pull the front cover off.

To reassemble your device, follow these instructions in reverse order.