



Canon Powershot A3300 IS Battery Replacement

How to replace the battery in the Canon Powershot A3300 IS.

Written By: Phillip Chen



INTRODUCTION

If your battery needs to be replaced or if you forgot how to place it back in this guide will show you how to do so.

Step 1 — Battery



- To open battery cover, slide the cover to the right.
- Ensure there is 1 cm of space between the cover and camera case.
- Lift cover from the right side.

Step 2



- Insert battery to where the arrow is pointing.
- Push down until you hear a click to ensure the battery is correctly inserted.
- Close battery lid and make sure there is a click.
- Power camera on.

To reassemble your device, follow these instructions in reverse order.