



# Acer Aspire 4810TZ-4120 Keyboard Replacement

Explains in details on how to replace keyboard.

Written By: Maria Saavedra



---

## INTRODUCTION

This guide provides detailed steps to replace keyboard for an Acer Aspire 4810TZ-4120


---



### TOOLS:


- [Spudger](#) (1)
-

## Step 1 — Keyboard

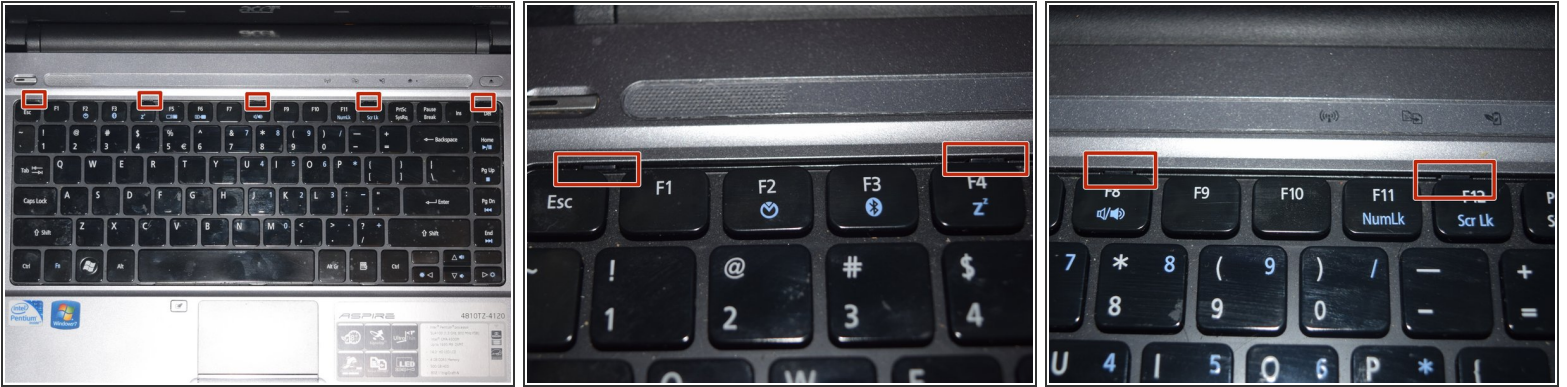

- Locate the five (5) tabs at the top of the keyboard that are holding it in place
- i* The 2nd and 3rd pictures are close ups of the tabs

## Step 2

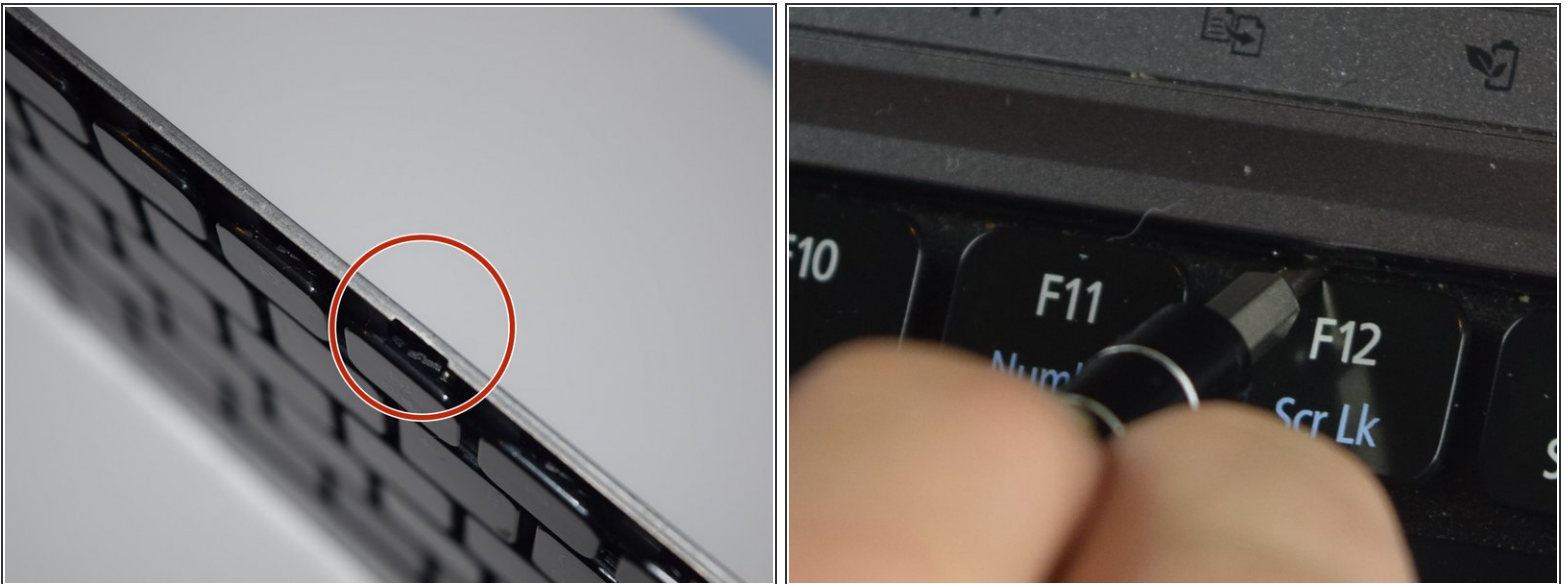

- i* The first picture shows the notches in the keyboard that the tabs to into to hold it in place. You cannot see these until the keyboard is removed
- Insert the flat part of the Spudger tool into one of the holes in front of the tab
- Push the tab back so it is no longer holding the keyboard.
- Repeat this step for all of the tabs



## Step 3



- Lay the keyboard upside down
- Remove any tape that is on the connector with tweezers
- Gently remove the connector that is on the ribbon cable from the back of the keyboard
- Your keyboard is now ready to be replaced with a new one

To reassemble your device, follow these instructions in reverse order.