



# Sky Thunder HD 8500WH Gear Replacement

This guide will show you how to replace a gear in the Sky Thunder HD 8500WH.

Written By: Nicholas Jones






## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Rotor Blade

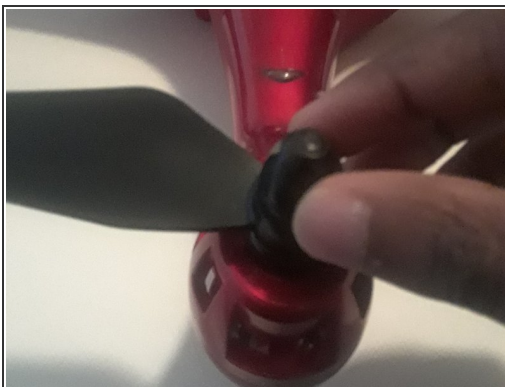

- Place the drone with the top side facing up.
- Remove the blade cover.
- Remove the rotor blade.


## Step 2 — Lockstitch



- Unscrew the 1cm screw holding in the blade lockstitch with the Phillips 0 Screwdriver.
- Remove the blade lockstitch.



### Step 3 — Lower and Upper Body

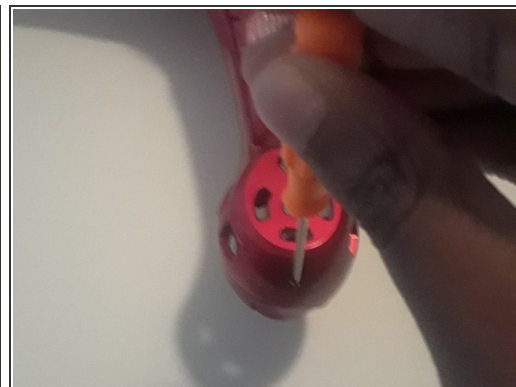

- Lay down the drone so the battery side is facing up.
- Unscrew all 5 .8cm screws on each arm of the drone with the Phillips 0 Screwdriver.
- Repeat previous bullet for each arm (20 screws in total).

### Step 4




- Using a bit of force, gently pull apart the lower and upper bodies.
- Keep going until both parts are completely separated.

## Step 5 — Gear



- Find the gear mechanism at the end of one of the drone arms.
- Unscrew the two front .8cm screws with the Phillips 0 Screwdriver.

## Step 6

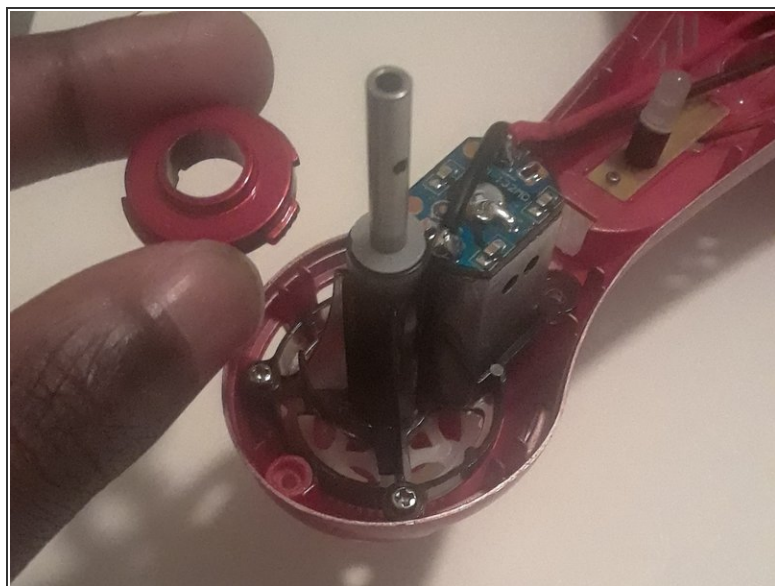

- Remove the white spacer.
- Remove the red spacer.

## Step 7



- Pull the gear out from the bottom of the holding mechanism.

To reassemble your device, follow these instructions in reverse order.