



Asus X501A-RH31 Keyboard Replacement

This guide will demonstrate how to properly...

Written By: Romana Hruby



INTRODUCTION

This guide will demonstrate how to properly replace the Asus X501A-RH31 keyboard. Please note that there are parts connecting the keyboard to the motherboard that could easily break if the steps are not executed correctly.



TOOLS:

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)

[Phillips #00 Screwdriver](#) (1)

Step 1 — Battery




- Turn the laptop over so that the back is facing upwards.

Step 2




- To unlock the left tab, make sure the tab on the left has red showing.

Step 3

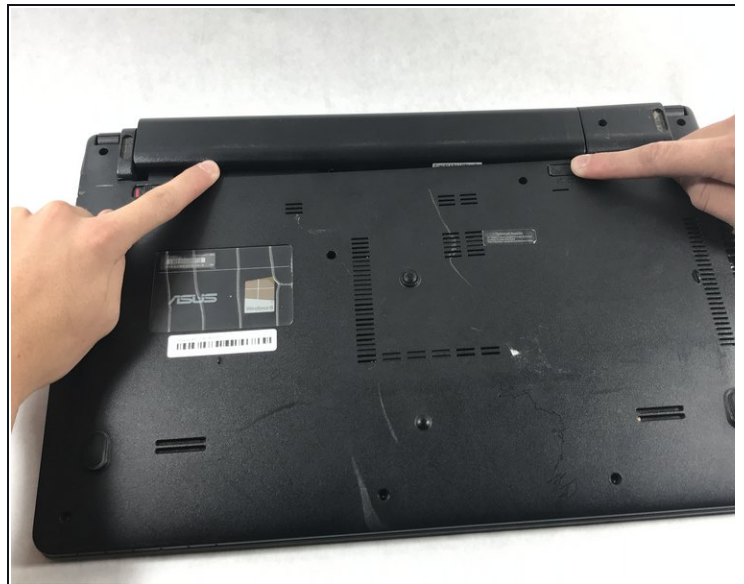

- To unlock the right tab, push the right slider to the left with one hand.
- Push the battery out with the other hand.

Step 4 — Keyboard

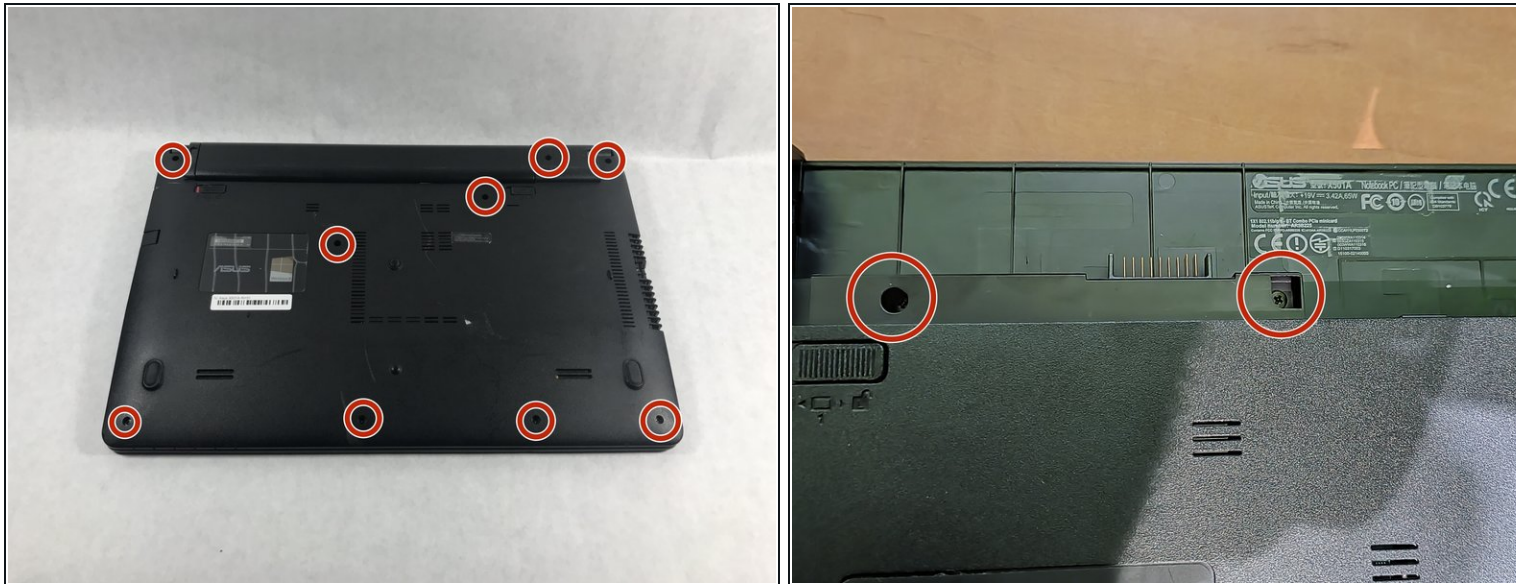



- Using the Phillips #00 screwdriver unscrew all nine screws from the bottom of the laptop, as well as the additional two screws inside the battery compartment.
- ① Nine of the screws are 5 mm long, 4.5 mm in diameter, while two screws closest to the hinges are 7 mm long.

Step 5



- Turn the laptop over and open the top so the keyboard is facing you.

Step 6

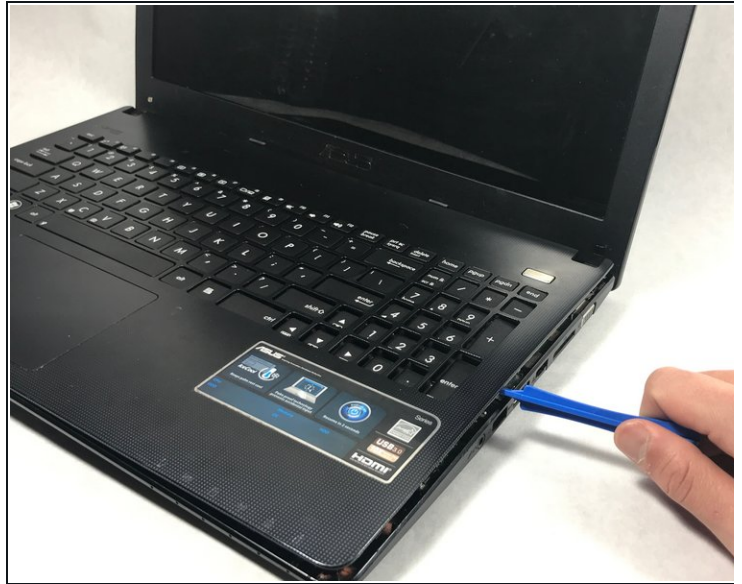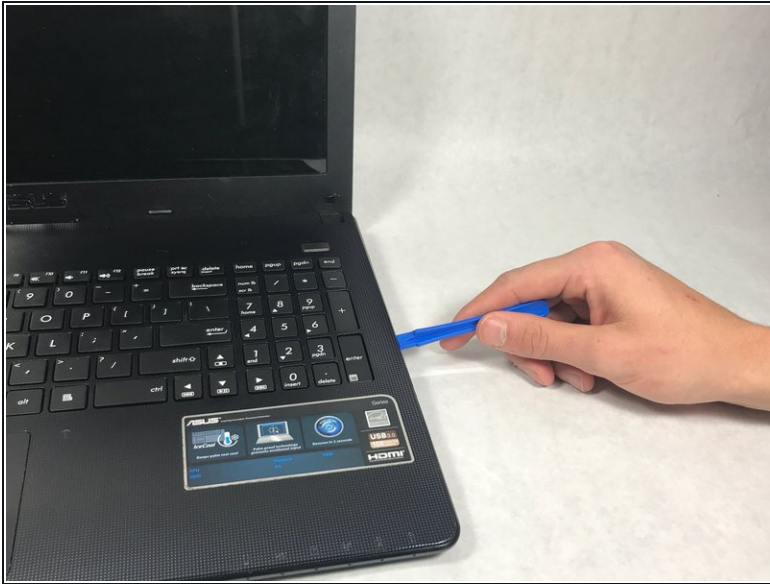

- Pry off the keyboard cover on the edge using the plastic opening tool.
- Start from one side. Once it is loose, carry out the same procedure on the front and other side.

⚠ Only do little sections at a time as the keyboard may break if you attempt to take the whole thing off from a single point.

Step 7



- Slowly lift the keyboard upward, but do not remove completely.
- Remove the two data cables that attach the keyboard to the motherboard.

Step 8



- Use tweezers to pull the white plastic piece up that is attached to the data cable.
- Repeat this process for the big black cable as well.

⚠ Use caution when unlatching the data cables from the motherboard. The cables are extremely delicate and can break.

To reassemble your device, follow these instructions in reverse order.