



# Lenovo IdeaPad Y580-2099 Battery Replacement

This guide will show you how to properly replace the battery.

Written By: Lauren



## Step 1 — Battery



- Slide out both locks for the battery, located on the back of the device.

## Step 2



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.