


Poin2 Chromebook 11 Charging Port Replacement

This guide shows how to replace a defective charging port for a Poin2 Chromebook 11.

Written By: Jesse Johnson

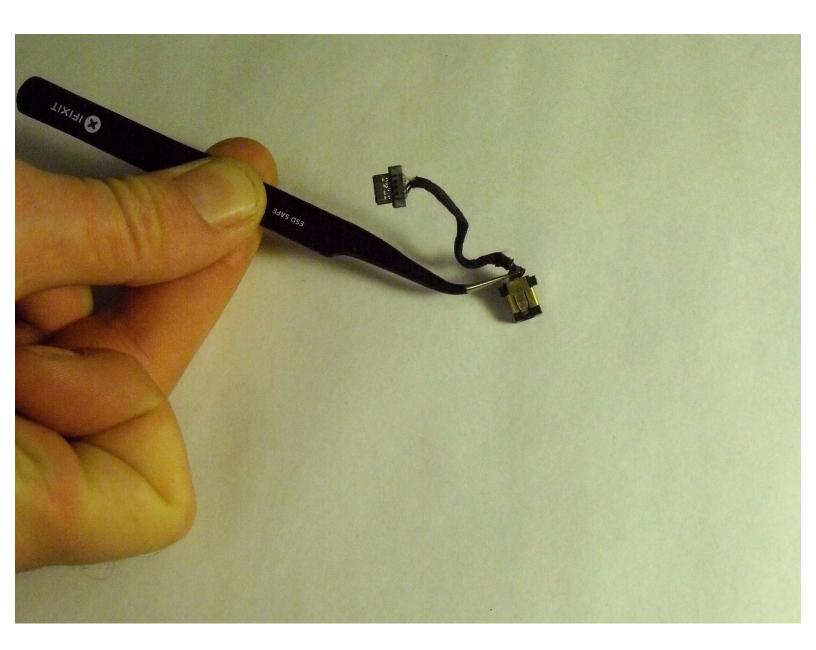

This document was generated on 2020-11-28 06:11:47 AM (MST).

INTRODUCTION

When a Chromebook is plugged into an outlet with a working adapter, but the device will neither charge or power on, this is a sign that the charging port is damaged and needs to be replaced. This guide shows how to replace a defective charging port for a Poin2 Chromebook 11.



TOOLS:

- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)
- Spudger (1)
- Tweezers (1)

Step 1 — Battery





- Power down the Poin2 Chromebook 11 and disconnect the power adapter.
- Close the Chromebook and position it with the base facing up.
- Use a #0 Phillips screwdriver to unscrew the ten 7mm screws that hold the base to the rest of the frame
 - (i) Poin2 Chromebook 11 does not have screws under its rubber feet at the base.







- Insert a 1cm-wide plastic opening tool between the base and top frame.
 - (i) Applying pressure up and down with the tool may be necessary. When you hear a "click," this indicates the separation of the frame.
- Pry (up and down) around the entire border of the Chromebook to separate.
- Use your hands to gently lift the base away from the frame.

Step 3







- Disconnect the white 8-wire battery connector from the motherboard using a spudger to push the two L-shaped clips out of the port.
 - The connector is a tight fit and requires careful pressure for release.



Remove the six 4mm screws using a Phillips #0 screwdriver.

Step 5



Lift the battery from the frame.

Step 6 — Charging Port





- (i) The changing port is located on the upper-right corner of the computer.
- Disconnect the charging port from the motherboard using a spudger to push the 4-wire connector out from the port.


Step 7





Remove silver tape covering hinge.



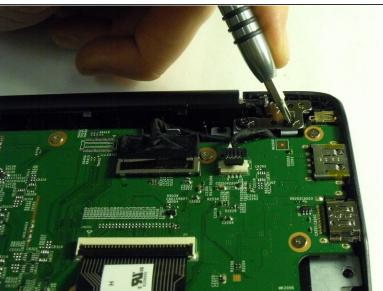


Guide ID: 99848 - Draft: 2019-11-22


- (i) The metal hinge at the top right corner must be lifted to access the charging port.
- Use a Phillips #0 screwdriver and remove the two 7mm screws from the hinge.

Step 9



- Pry the metal hinge up, until it sits perpendicular to the motherboard.
- i The metal hinge is a tight fit and requires careful strength when lifting.

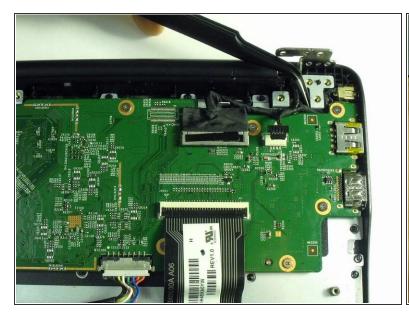

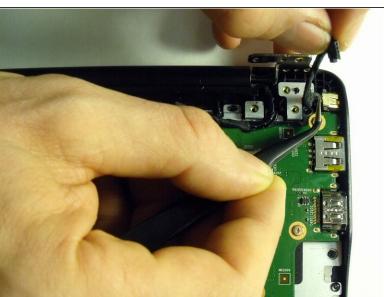

Use tweezers to gently pull the charging port out of the frame.

To reassemble your device, follow these instructions in reverse order.