



# Acer Chromebook C720-2827 Solid State Drive Replacement

How to replace your Acer Chromebook C720-2827 solid state drive.

Written By: Jason Bechtold



---

## INTRODUCTION


This guide explains how to remove the solid state drive. Before removing the solid state drive, the back panel assembly needs to be removed. Once the back panel assembly is removed, the solid state drive can be quickly unscrewed and pulled out.

---

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Panel Assembly

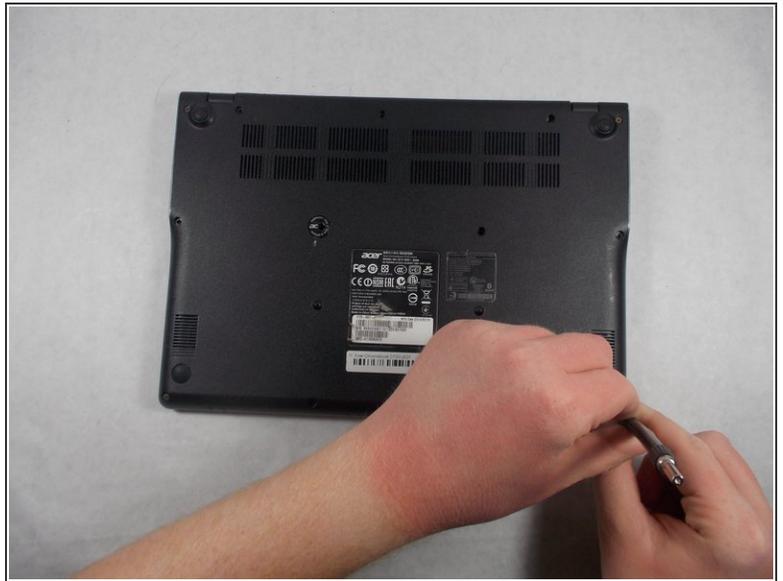


- Remove the thirteen 6.0mm screws on the back panel using your Phillips #1 screwdriver.

## Step 2

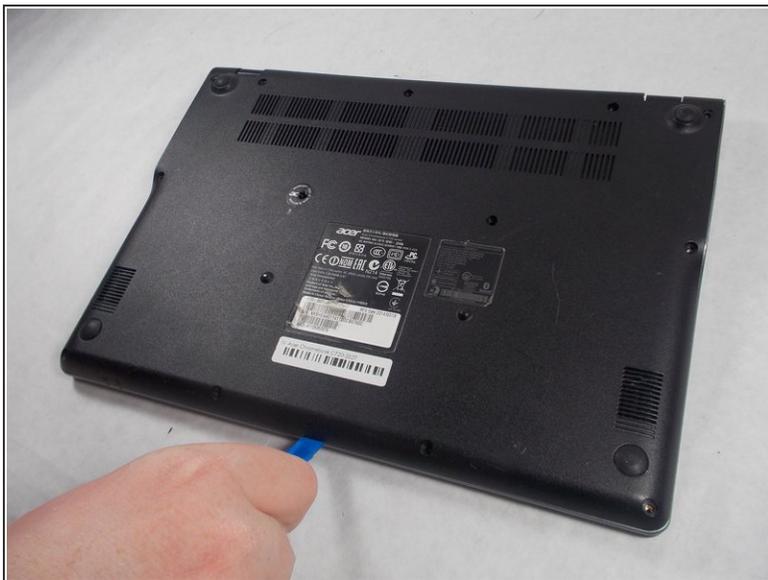



- Pry the back panel open with the plastic opening tool.

### Step 3 — Solid State Drive

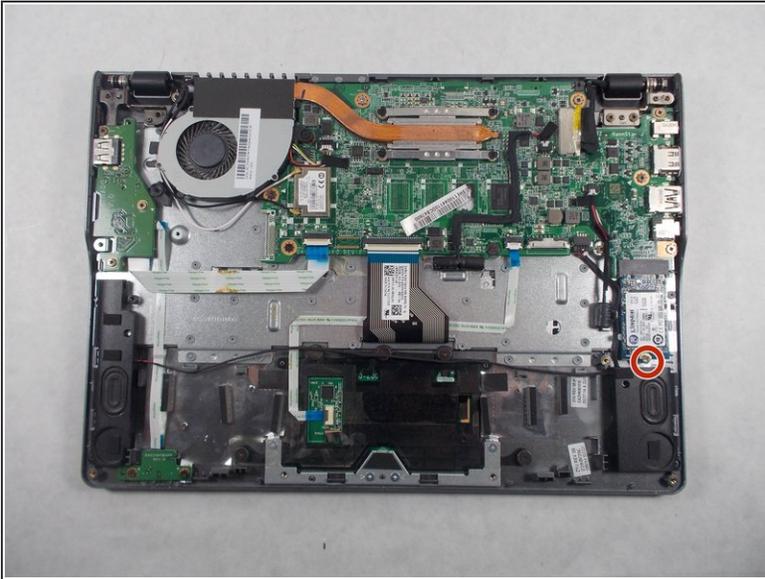

- Remove the single 3.0mm screw securing the solid state drive using a Phillips #1 screwdriver.

### Step 4

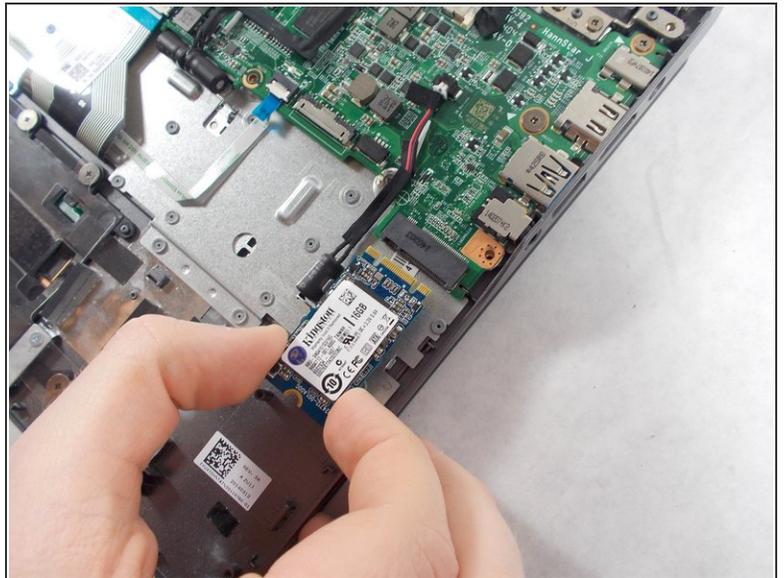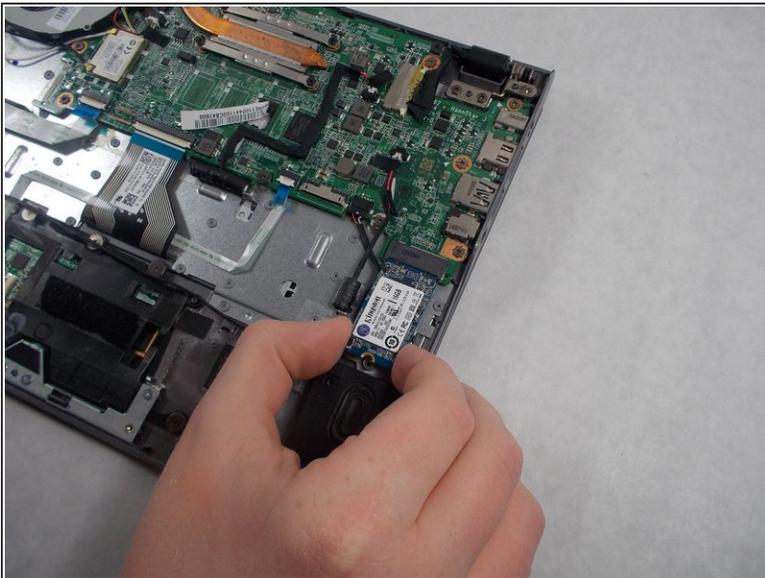

- Carefully pull out the solid state drive using two fingers.

To reassemble your device, follow these instructions in reverse order.