

HP Pavilion 15-ab165us RAM Replacement

This guide will help with the removal of the RAM in the HP Pavilion 15-ab165us laptop.

Written By: Myai Nguyen



INTRODUCTION

This guide will help you remove the RAM in the HP Pavilion 15-ab165us laptop.




TOOLS:

• Spudger (1)


Step 1 — Battery and Back Cover



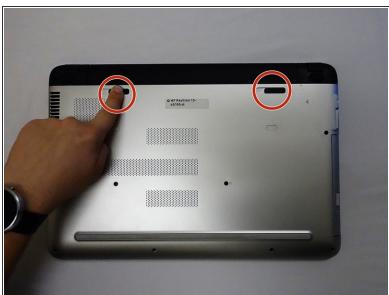

- Flip the computer over so that the bottom cover is facing you.
- Slide the two locks to the "unlock" position and remove the battery.


Step 2

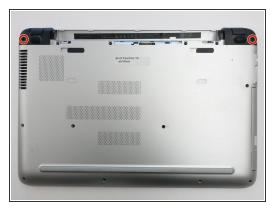






- Remove the two 8mm screws underneath with a Phillips #1 screwdriver.
- Use a plastic opening tool to remove the plastic feet.

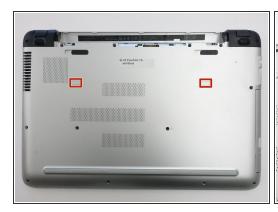




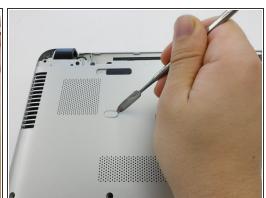


Remove the two plastic tabs with a metal spudger.

Step 4

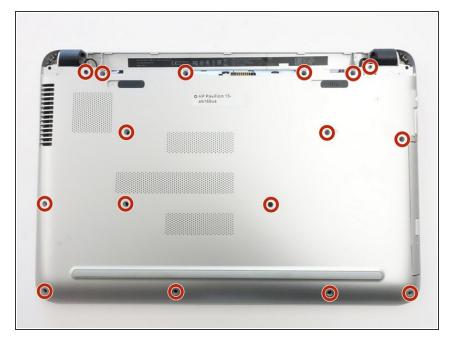

 Remove the sixteen 8mm screws that hold the bottom cover with a Phillips #1 screwdriver.

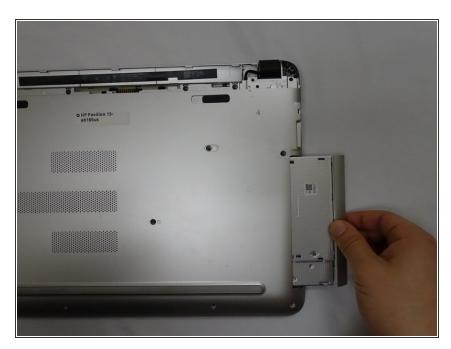

Pull the Optical Drive out.

Step 6



 Remove the 3mm screws that were hidden under the Optical Drive with a Phillips #0 screwdriver.





- Flip the computer back over.
- Use a plastic opening tool to release the clips holding the keyboard section in place.

Step 8



- Close the lid and pull the screen and keyboard section up and away from the disconnected bottom cover.
- ↑ The hard drive is NOT screwed into place on the underside of the keyboard section.

Step 9 — RAM




Locate RAM.

Step 10




 Pull the tension arms away from both sides the RAM.

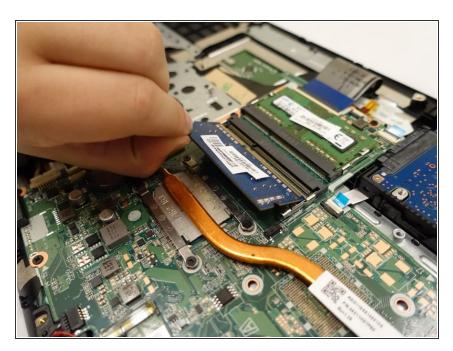

Pull RAM away from the RAM slot.

Step 12

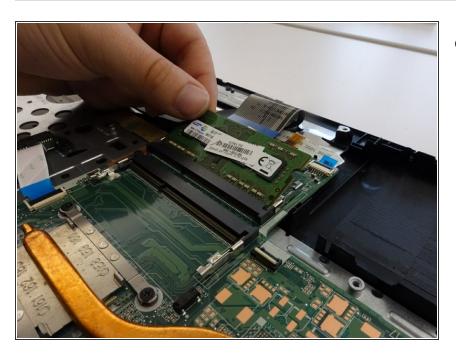

 Repeat this process for the next stick of RAM.

To reassemble your device, follow these instructions in reverse order.