



HP 15-ay103dx Back Panel Replacement

Removal the back panel of an HP15-ay103dx in order to access the inside parts.

Written By: Morgan Churchill



INTRODUCTION

This guide entails removing screws and hinge covers to remove the back panel.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Slide the two battery lock latches on the back of the device to the “unlock” position.

Step 2



- Lift the battery upward to remove it from the device.


Step 3 — Back Panel

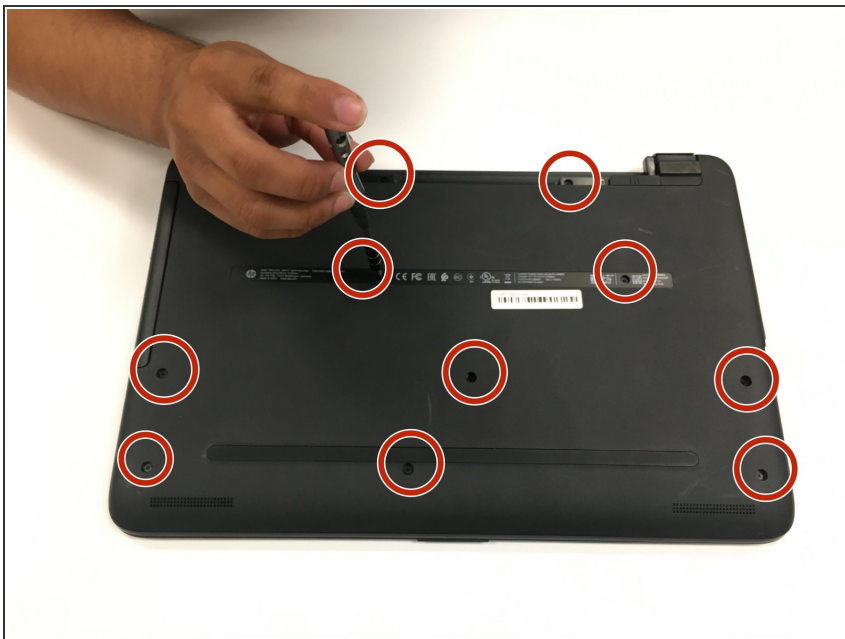

- Using the PH1 Phillips-head screwdriver, remove all the 5/16 in. screws from the back of the device.


⚠ There should be 10 in total, be sure to keep them together!

Step 4

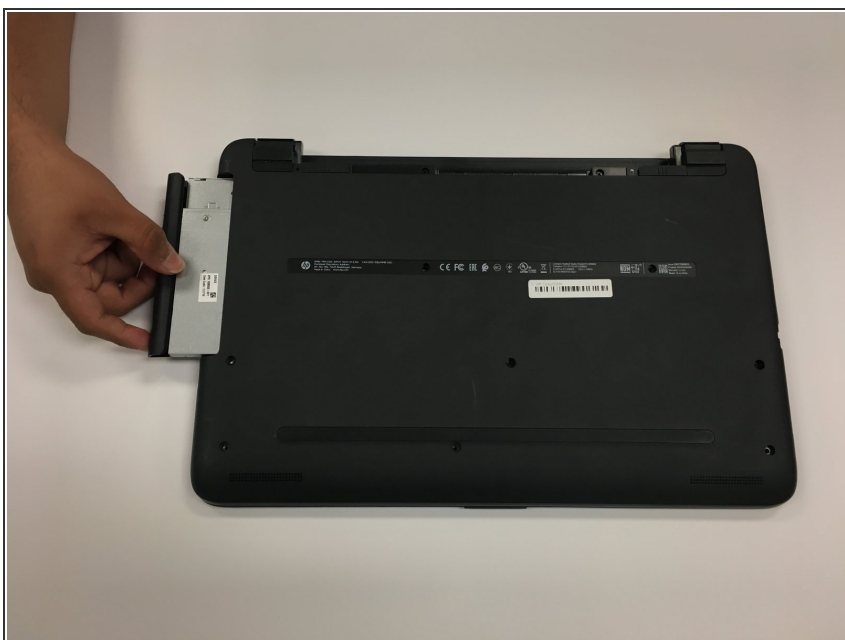

- Locate the optical disc drive and remove it from the device by sliding it straight out of the device.

Step 5

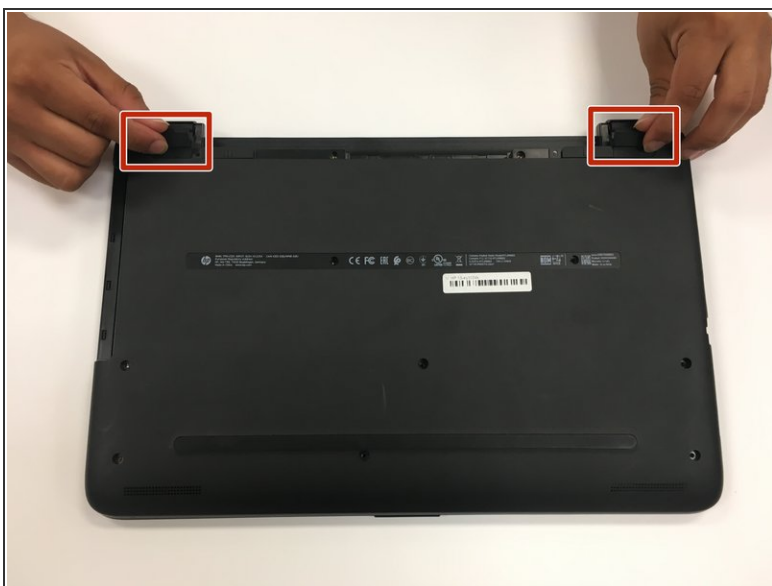

- Covering the hinges of the device are rubber bumpers secured to the device using adhesive. Remove them carefully.
- ⓘ Place the adhesive side up as you will need to place them back after your replacement is complete.

Step 6



- In the same spot you've just removed the bumpers from, you will find two 5/16 in. screws. Using the same Phillips-head screwdriver used in step 2, remove the screws

⚠ Be sure to keep the screws together!

Step 7



- Carefully remove the back panel from the device.
- ⓘ If you are unable to do this with your hands, you can use a thin prying tool of your choice to make it easier!

To reassemble your device, follow these instructions in reverse order.