



Kodak EasyShare C142 LCD Replacement

This is a fairly simple guide to replacing the LCD of a Kodak EasyShare C142. A small screwdriver and LCD replacement part are required for this guide.

Written By: oldturkey03



INTRODUCTION

In order to complete the replacement, you will need a Phillips #00 Screwdriver as well as a replacement LCD for the camera already.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Replacement LCD](#) (1)

Step 1 — LCD



- Remove the batteries and memory card from the camera.
- Remove a total of four screws on either side of the camera.

Step 2



- Remove the two (2) screws from the bottom of the camera.
- Split the case from the battery compartment carefully until the rear case is separated from the rest of the camera, as shown in the third image.

Step 3



- Carefully slide the LCD out of its holder until the connector is visible. Open the clip on the connector by pulling it with your fingernail to the right of the screen.
- Remove the damaged LCD and insert the replacement.
- After clipping the connector again, reassemble the camera using the six (6) previously removed screws.

To reassemble your device, follow these instructions in reverse order.