



# HP 15-ay103dx Display Screen Hinges Replacement

This guide will be used to replace the display screen hinges on your HP 15-ay103dx.

Written By: Kody Franklin



---

 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery




- Slide the two battery lock latches on the back of the device to the “unlock” position.

## Step 2




- Lift the battery upward to remove it from the device.

### Step 3 — Back Panel

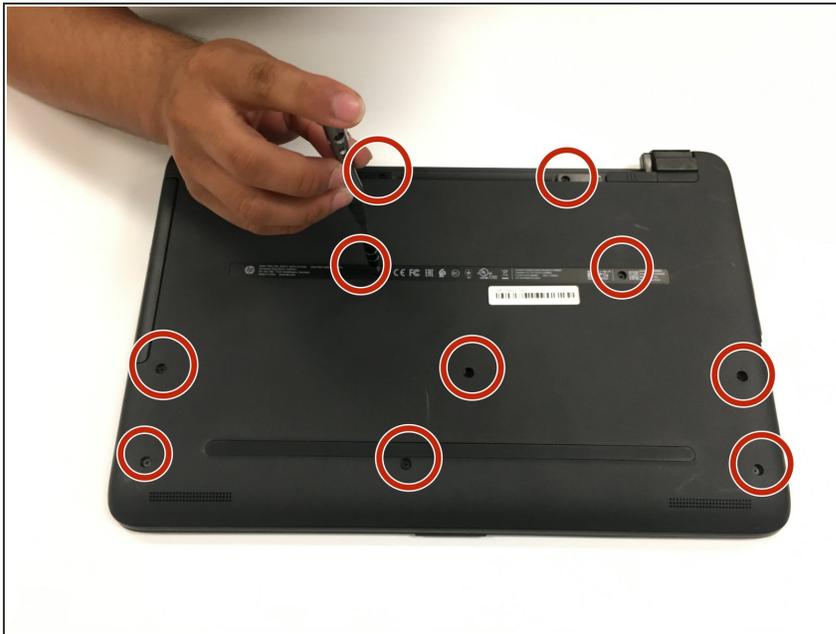

- Using the PH1 Phillips-head screwdriver, remove all the 5/16 in. screws from the back of the device.
- ⚠ There should be 10 in total, be sure to keep them together!

### Step 4

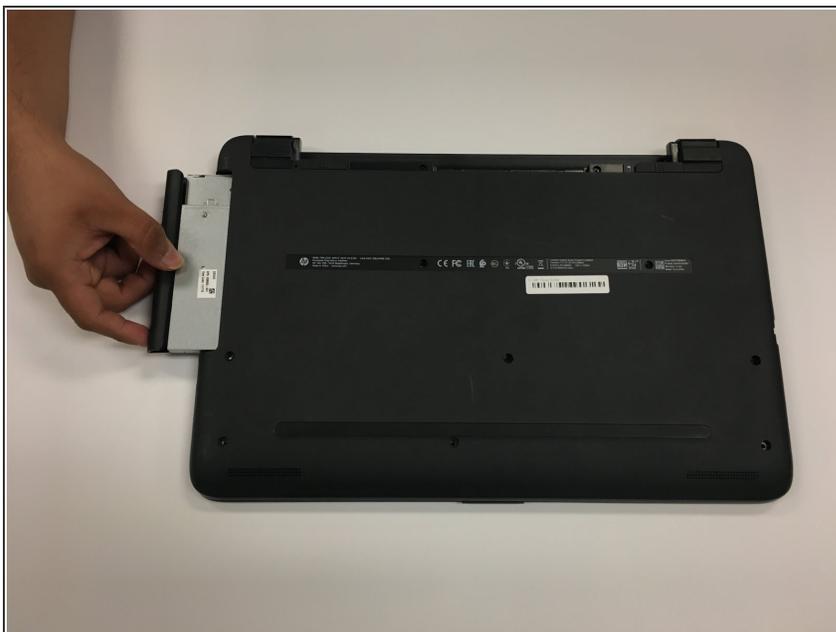

- Locate the optical disc drive and remove it from the device by sliding it straight out of the device.

## Step 5



- Covering the hinges of the device are rubber bumpers secured to the device using adhesive. Remove them carefully.
- ⓘ Place the adhesive side up as you will need to place them back after your replacement is complete.

## Step 6



- In the same spot you've just removed the bumpers from, you will find two 5/16 in. screws. Using the same Phillips-head screwdriver used in step 2, remove the screws


⚠ Be sure to keep the screws together!

## Step 7



- Carefully remove the back panel from the device.
- ⓘ If you are unable to do this with your hands, you can use a thin prying tool of your choice to make it easier!

## Step 8 — Display Screen Hinges

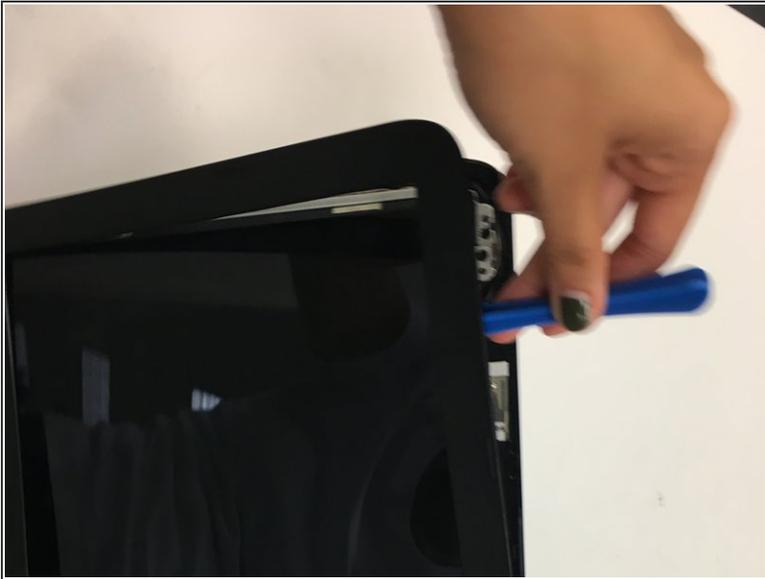


- Use a spudger to carefully remove the border around the display screen.
- ⓘ As long as you are slow and delicate, the border will eventually come off.

## Step 9




- Remove the two 5/16 screws in the top corners and the four in the bottom corners.

## Step 10

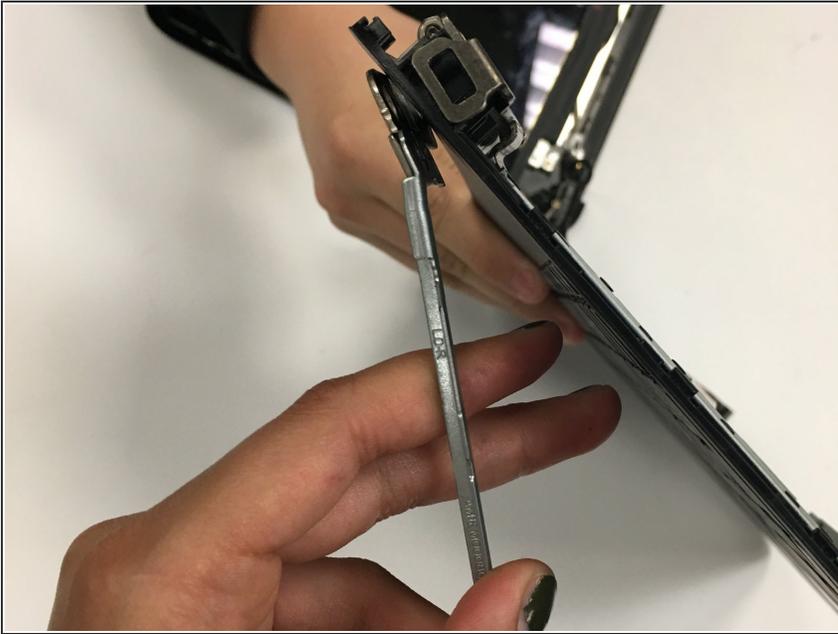

- Carefully pull the screen from the hinges and lower it on to the table.
  - There will be wires running from the screen to the motherboard. You do not need to unplug these.
- ⚠ The hinges are made of malleable metal and are easily bent.

## Step 11

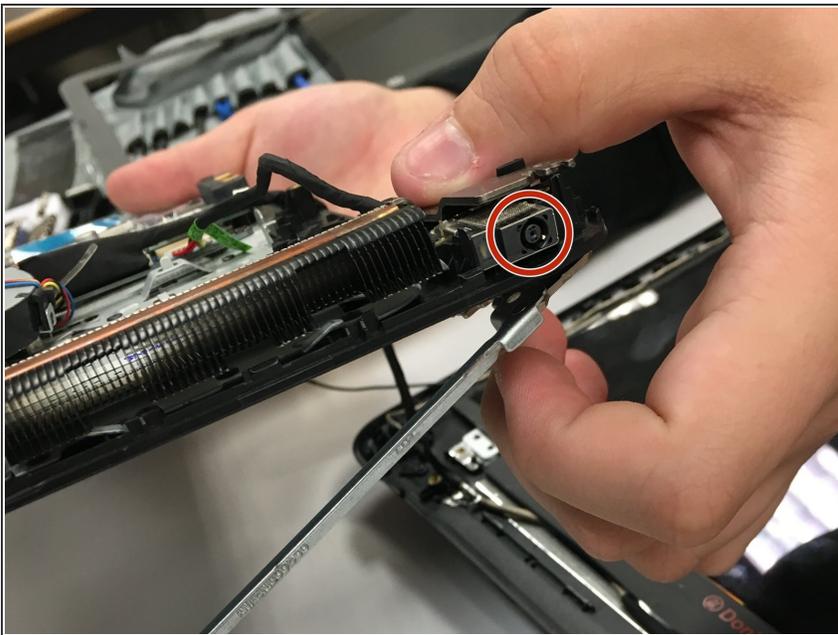

- Remove the 5/16 screws securing the hinges to the computer.

To reassemble your device, follow these instructions in reverse order.