




Teenage Engineering OP-Z Volume Potentiometer Replacement

Use this guide to replace the volume...

Written By: Tobias Isakeit

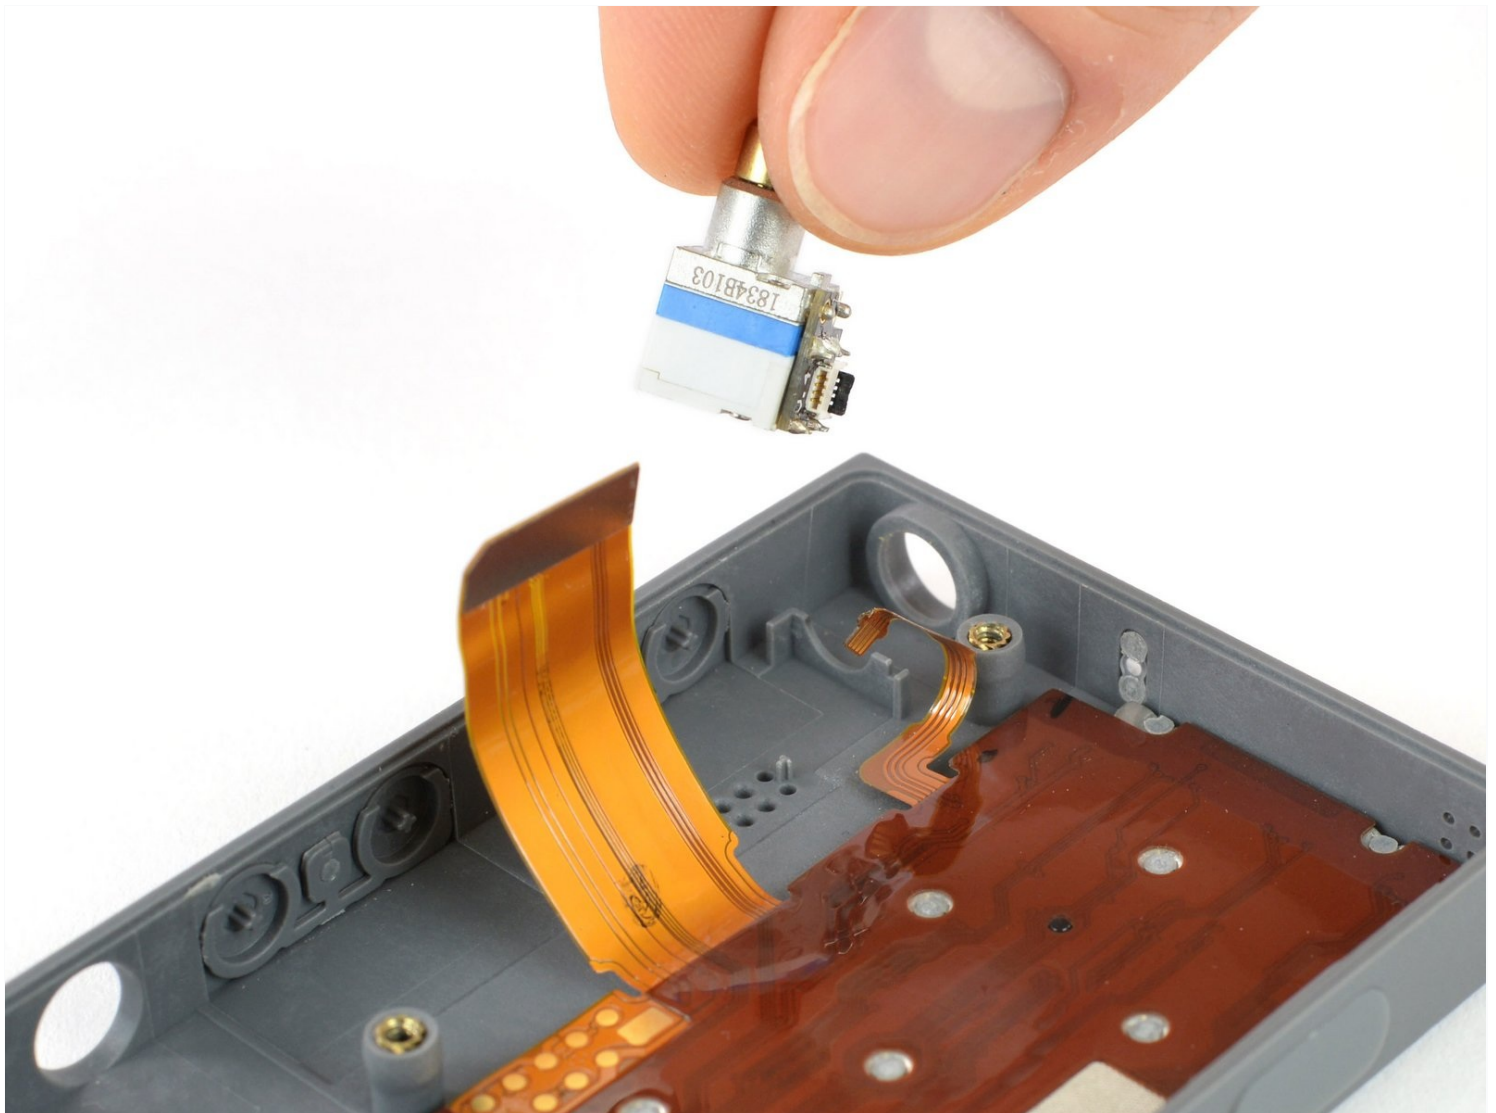

INTRODUCTION

Use this guide to replace the volume potentiometer of your OP-Z.
In case the defect was caused by a drop then the volume knob was probably damaged too.
This guide will also show how to replace the knob which can be purchased separately.


TOOLS:

Spudger (1)
T4 Torx Screwdriver (1)
Precision Tweezers Set (1)

PARTS:

OP-Z Volume Pot (1)

Step 1 — Back Cover

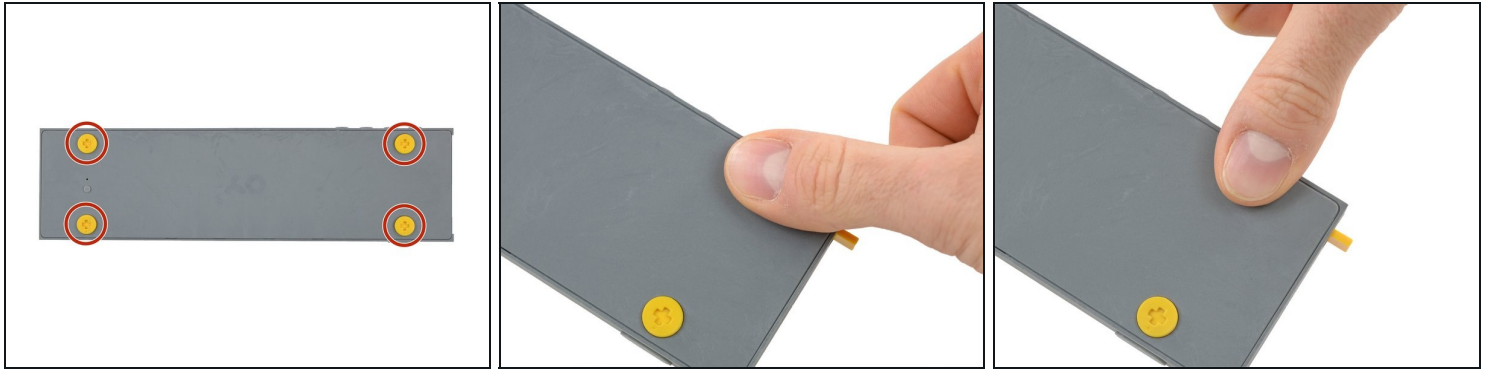

- Unlock the four rubber feet by turning them 90° counterclockwise using your thumb or finger tip.
- ⓘ There is a tiny mark on every foot facing the bottom edge of the OP-Z. After turning them they should face towards the short edge where the on/off switch is.

Step 2



- When turning the OP-Z over again the bottom plate should come off by itself (thanks gravity).
 - ① If the bottom plate won't come off you might want to make sure every foot is rotated correctly and gently tug on one of them.

Step 3



- Remove the bottom plate including the rubber feet.

Step 4 — Battery



- Use your fingernail or a spudger to lift the battery on the right side where the notch is.

Step 5




- Remove the battery.
 - ☑ When installing the new battery make sure you put it in contact side first.

Step 6 — Expansion Module



- Use your finger or a spudger to push up on the small tab on the bottom of the module.
- Lift the module up and out of its recess bottom first.

Step 7

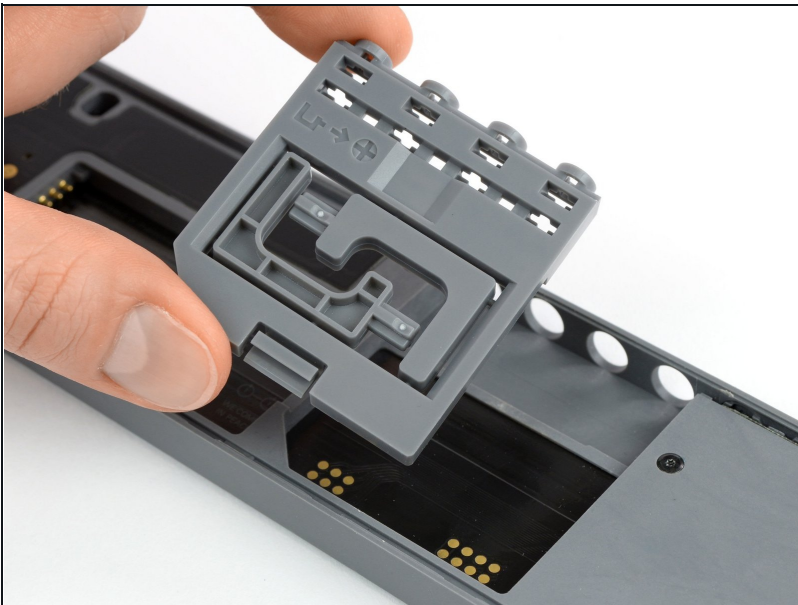


- Remove the module.
- ☑ When inserting another module make sure you put it in outputs first. Then push down the bottom part for the tab to engage.

Step 8 — Midframe



- Remove the five Torx T4 screws.

Step 9

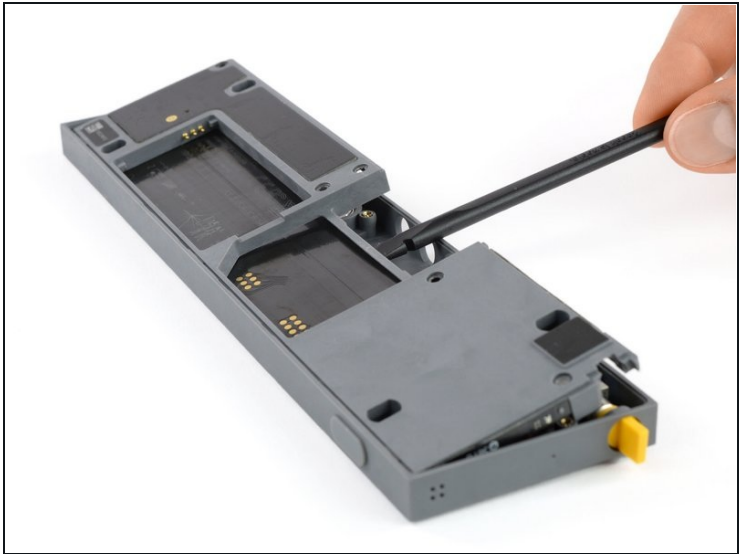

- Place a spudger in the cutout of the extension module to lift the midframe.

⚠ Be careful not to damage the highway flex cable underneath.


⚠ Don't remove the midframe yet. It is still connected to the rest of the OP-Z.

Step 10




- Flip the midframe over to gain access to the flex cable connector underneath.

Step 11

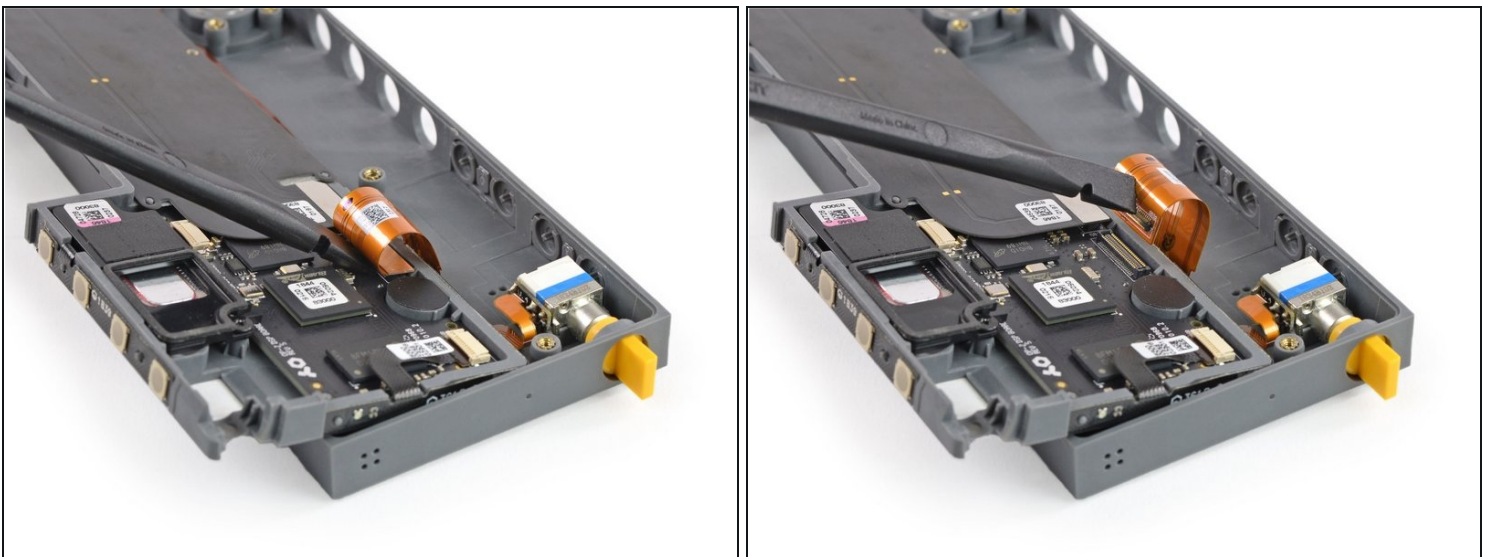


- Use the flat end of a spudger to disconnect the flex cable from the front panel assembly.

Step 12 — Highway Flex Cable

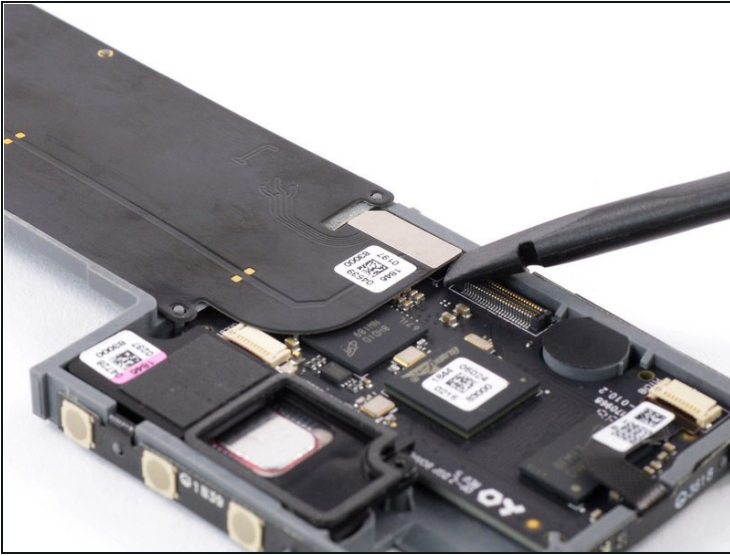

- Use a spudger to disconnect the highway flex cable from the DSP board.

Step 13

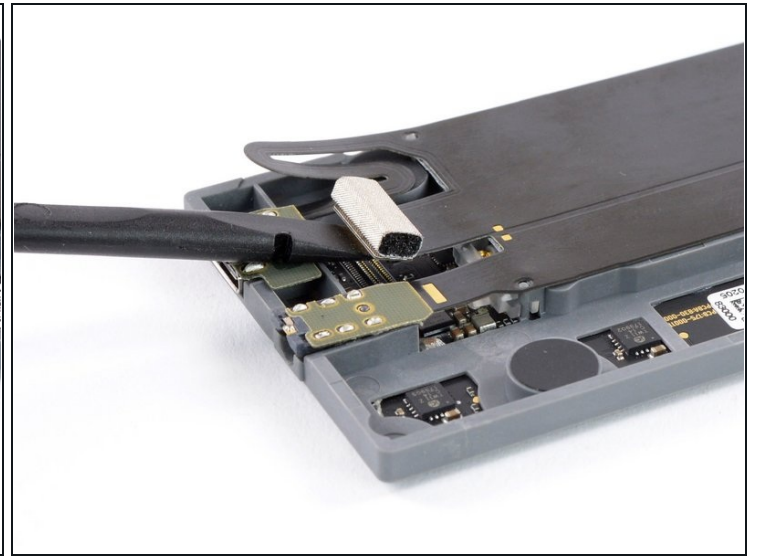

- Use the spudger to disconnect the flex cable from the encoder board.

Step 14



- Slowly pry the USB-C connector out of its recess. Use the flat end of a spudger on the small nib on the USB-C board.
 - ⓘ The connector is slightly glued down.

Step 15




- Insert the pointy end of the spudger into the line-out jack and lever it up carefully.
 - ⓘ The jack connector might sit tight and is slightly glued down.

Step 16





- The highway flex cable is slightly adhered to the midframe. To remove it, gently push it out from underneath.
 - ① A small transparent part may pop out. This is the light guide for the bluetooth indicator. Just hinge it back onto the midframe as [seen here](#).

Step 17

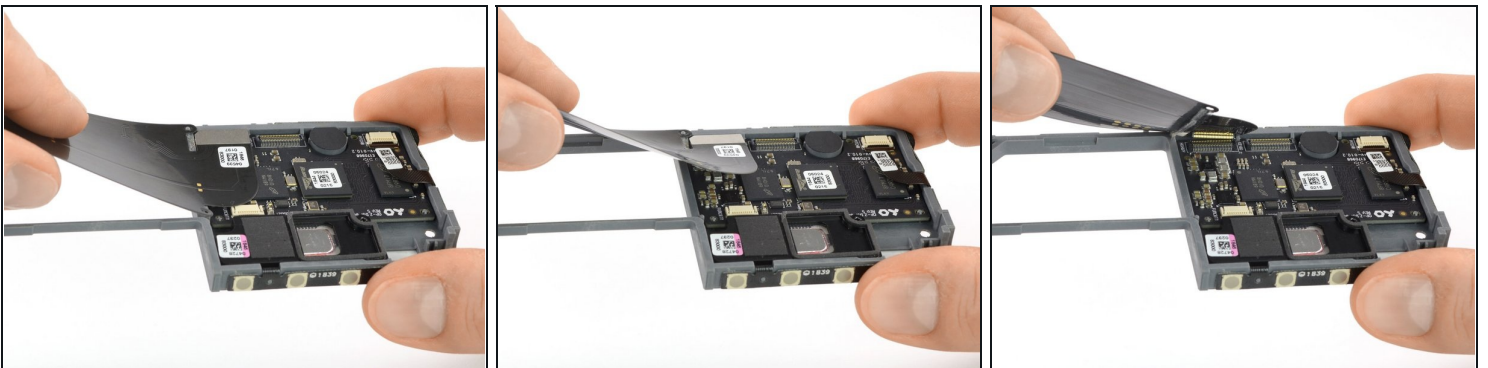



- Peel the highway flex cable off the midframe and remove it.

Step 18 — Volume Pot

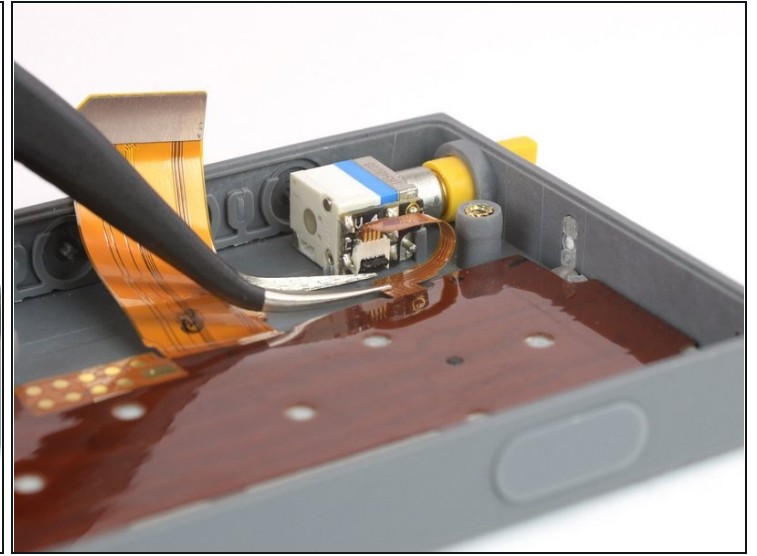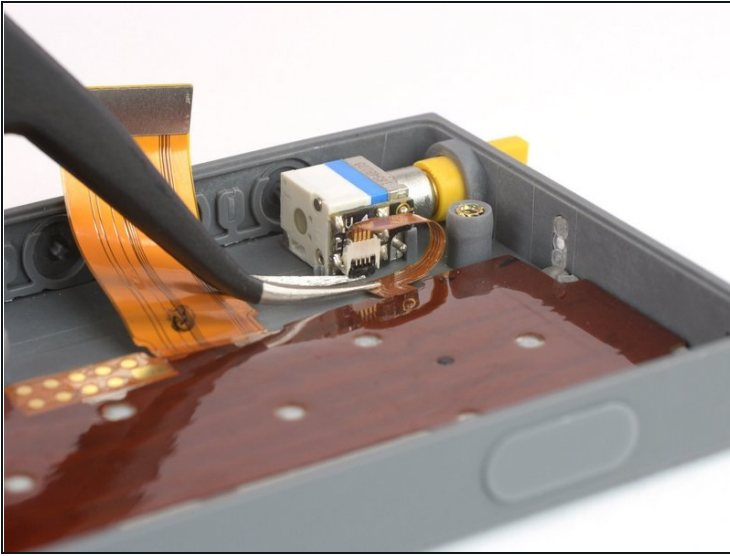


- Use one arm of a tweezer to lift the small black flap of the ZIF connector.

Step 19

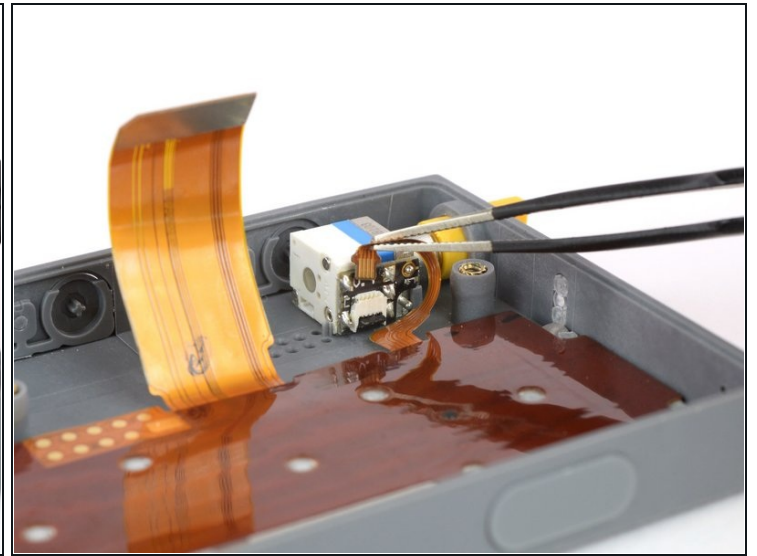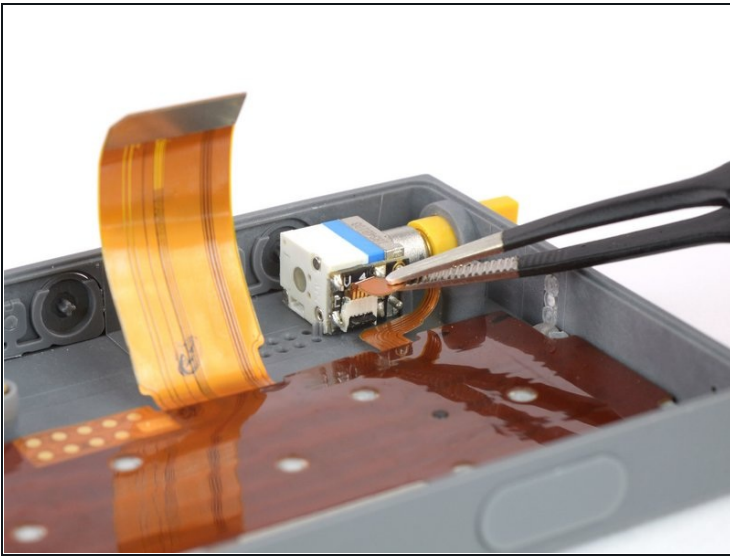


- Use a pair of flat nose [tweezers](#) to pull the small flex cable up and out out the ZIF connector.
- ☑ When reassembling make sure to insert the flex cable all the way.

Step 20

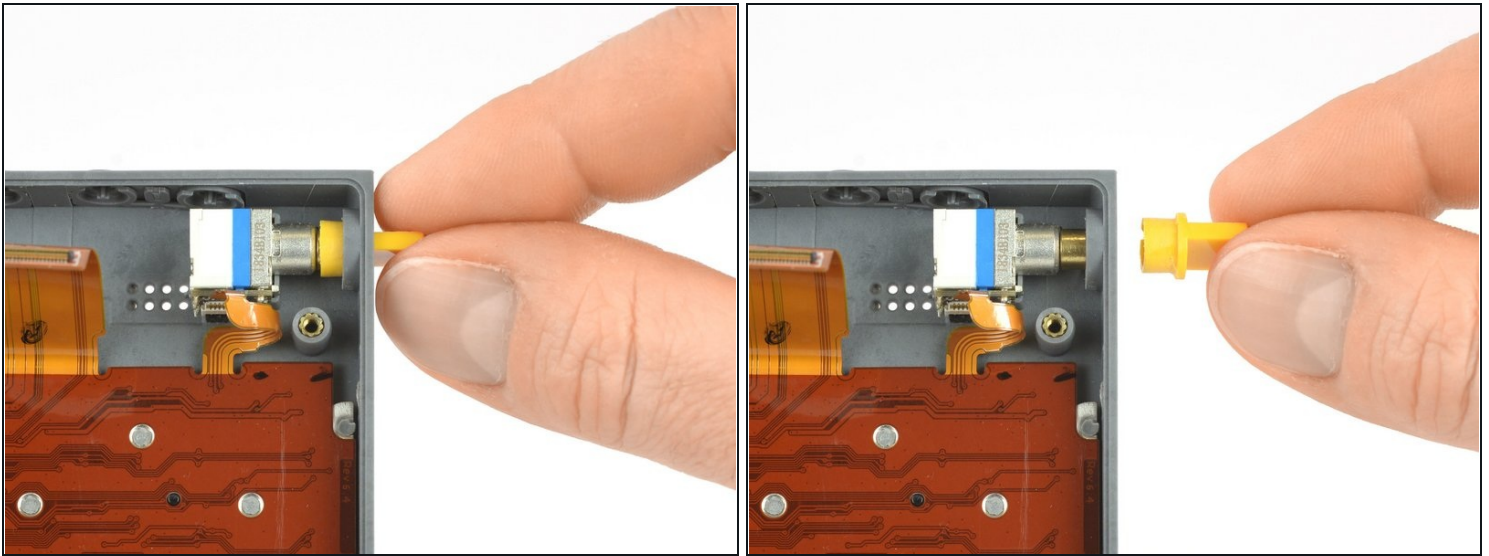


- Grab the volume knob with your fingers or a pair of pliers and pull it off its axle.

Step 21

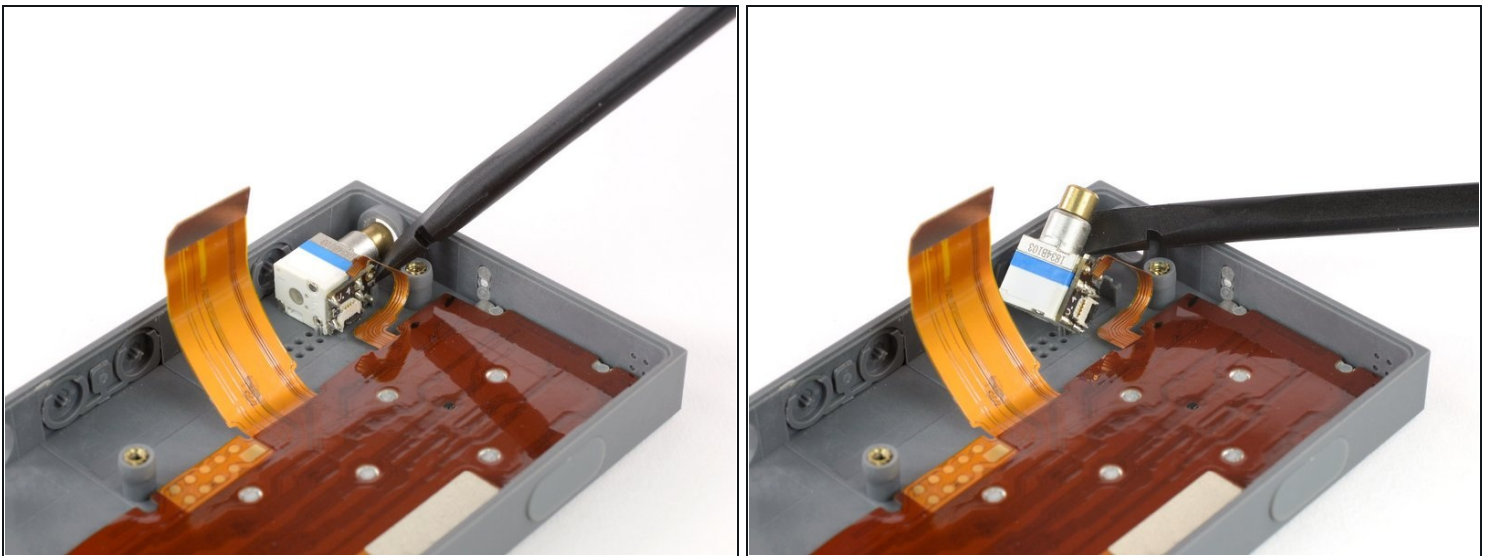

- Use a spudger to lever up the axle of the volume potentiometer. This way it will clear the frame's cutout.
 - ① The volume pot is slightly glued down.

Step 22

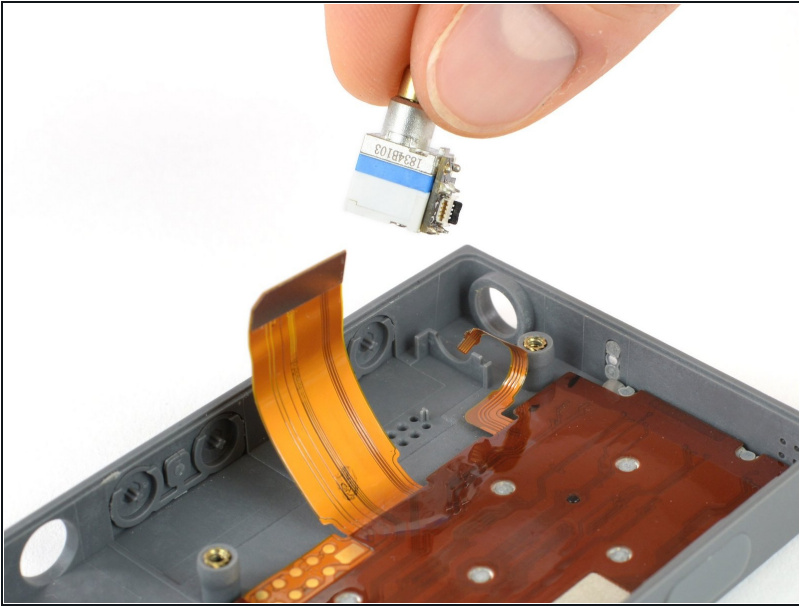

- Remove the volume potentiometer.

To reassemble your device, follow these instructions in reverse order.