



# DualShock 4 (CUH-ZCT1U) Buttons Replacement

Follow this guide to replace the buttons in...

Written By: Clay Eickemeyer



# INTRODUCTION

Follow this guide to replace the buttons in your DualShock 4 model CUH-ZCT1U controller.

## TOOLS:

Microfiber Cleaning Cloths (1)  
Phillips #00 Screwdriver (1)  
1 x Opening Picks (1)  
Spudger (1)  
Tweezers (1)

## PARTS:

DualShock 4 Controller D-Pad Button Cover (1)  
DualShock 4 Controller Action Button Covers (1)  
DualShock 4 Controller Home Button Cover (1)

## Step 1 — Check your controller model



- Check the model number on the back of your controller. This guide was written using model **CUH-ZCT1U**. If you have another model, the guide procedure and replacement parts may differ slightly.

- ① If you have the second generation DualShock 4, model **CUH-ZCT2U**, [use these guides](#).

## Step 2 — Unfasten the rear case



- ❗ If you need to stabilize your controller during this repair, lay it on a soft surface such as a [microfiber cloth](#).
- Use a Phillips screwdriver to remove the four 6.4 mm-long screws securing the rear case.

## Step 3 — Remove the L1 button



- Use an opening pick to pry each corner of the L1 button from the front case.
  - ❗ Cover the button to prevent it from ejecting out of your workspace.
- Remove the button.

## Step 4 — Remove the R1 button



- Use your opening pick to pry and remove the R1 button, just as you did for the L1 button.

## Step 5 — Unclip the rear case



① Six plastic clips secure the rear case to the front case. The next four steps demonstrate how to release these clips before you can open the controller.

- Insert your opening pick at a downward angle between the front case and rear case, halfway between the handle and the action buttons.
- Slide your pick toward the handle and pry up to release the first clip.
- Repeat this procedure on the other side of the controller to release the second clip.



## Step 6



- Two more clips secure the rear case near the extension port and the headphone jack.
- Insert your opening pick between the front case and rear case at either side of the ports.
- Twist your pick to unclip this section of the rear case from the front case.
  - ⓘ If the rear case feels stuck, insert and twist your pick from different angles.

⚠ Don't open the controller yet, as it's still held together by two very delicate clips near the triggers.

## Step 7



- ⓘ The final two clips are very delicate, and must be disengaged from inside the controller. If you break them, don't worry—it won't affect this repair or your controllers functionality.
- Locate the clips by looking through the gap above the R2 or L2 buttons.

## Step 8



- Insert the point of a spudger through the gap above the R2 button and push the retaining clip outward.
- While pushing the clip outward, slowly pull the rear case away from the front case until you feel them separate.  
**⚠ Don't fully open the controller until each of the R2 and L2 clips have been disengaged.**
- Repeat this procedure for the clip near the L2 button.

## Step 9 — Remove the rear case





- Press the R2 button and slide the rear case over it.

## Step 10



- Press the L2 button and slide the rear case over it.

## Step 11

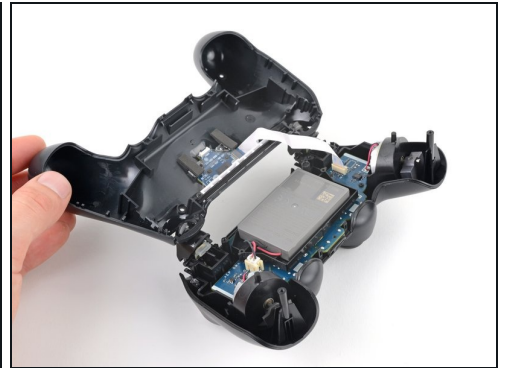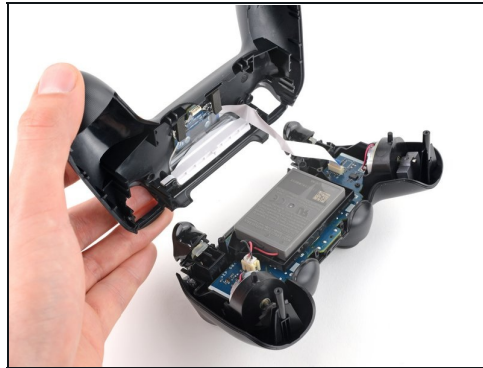

- Flip the rear case over the top of the controller and lay it down, being careful not to strain the interconnect cable.




## Step 12 — Disconnect the interconnect cable



- Use [tweezers](#) or your fingers to remove the interconnect cable by pulling its blue pull tab straight out of the socket.
- ☑ During reassembly, reconnect the cable with its blue pull tab facing the outside of the controller.

## Step 13 — Disconnect the battery

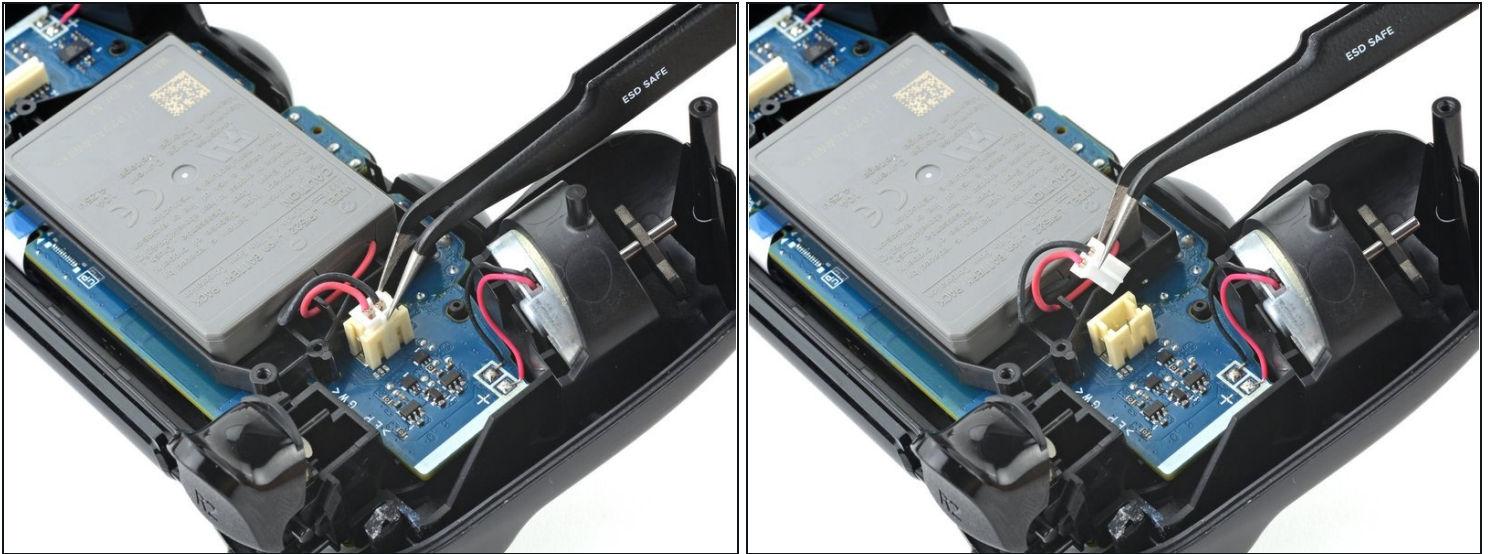

- Use [tweezers](#) or your fingers to grab and disconnect the head of the battery cable from the motherboard.
- ⚠ Only pull on the head of the connector—don't pull on the cable itself.





## Step 14 — Remove the battery




- Remove the battery.

## Step 15 — Remove the reset button extension

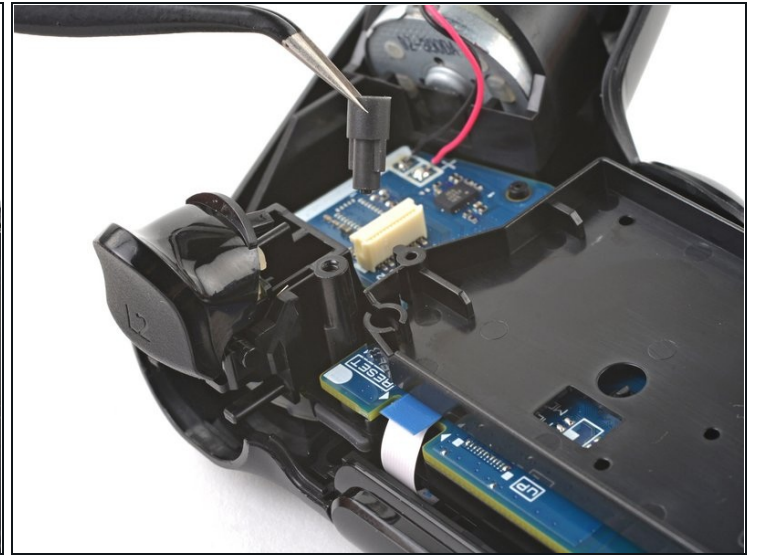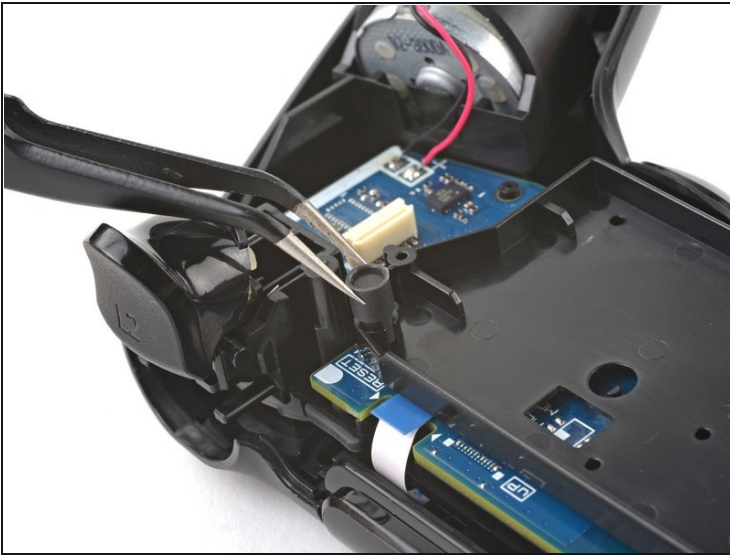


- Grab and remove the reset button extension from its recess in the battery bracket.

## Step 16 — Remove the battery bracket

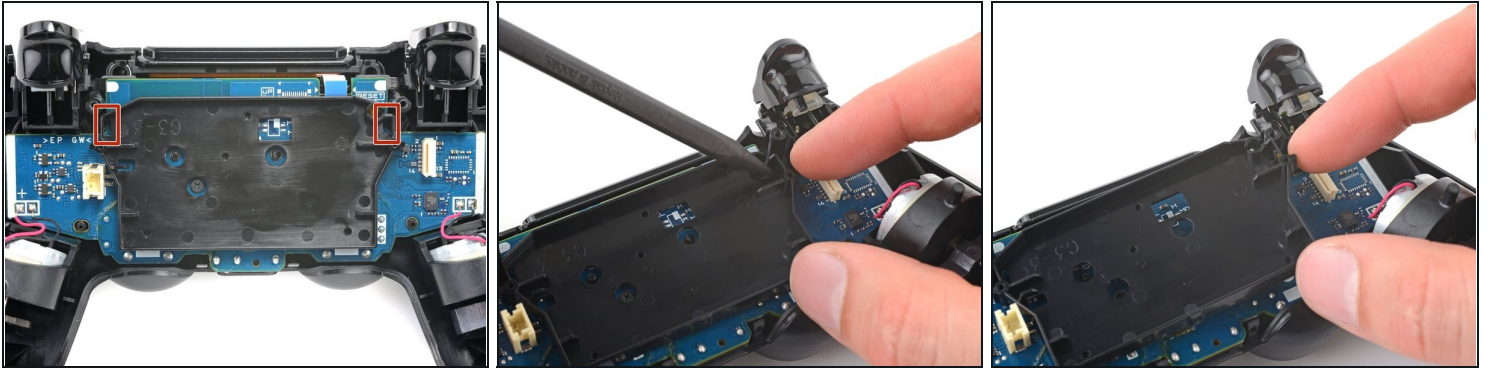


- Locate the two clips securing the battery bracket to the motherboard.
- Insert the point of your spudger into the opening behind the right bracket clip.
- Depress the clip to disengage it from the motherboard.
- Lift up the right edge of the battery bracket.

## Step 17

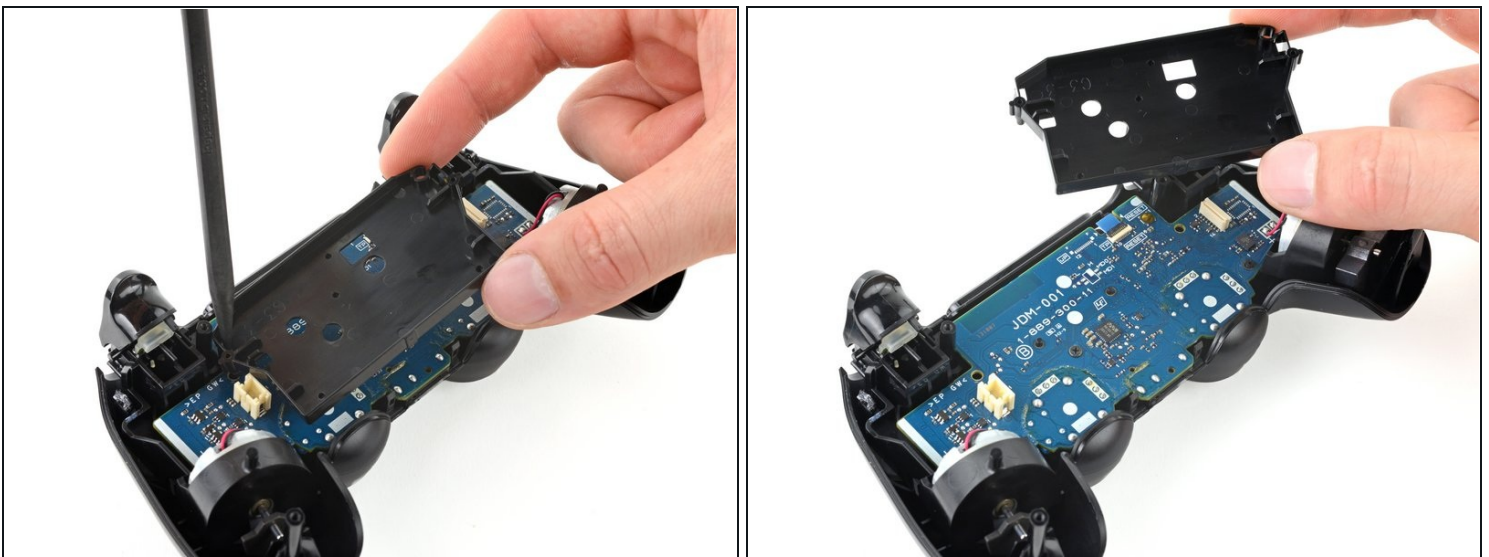


- Insert the point of your spudger in the opening behind the left bracket clip.
- Depress the clip to disengage it from the motherboard.
- Remove the battery bracket.

## Step 18 — Disconnect the touch pad

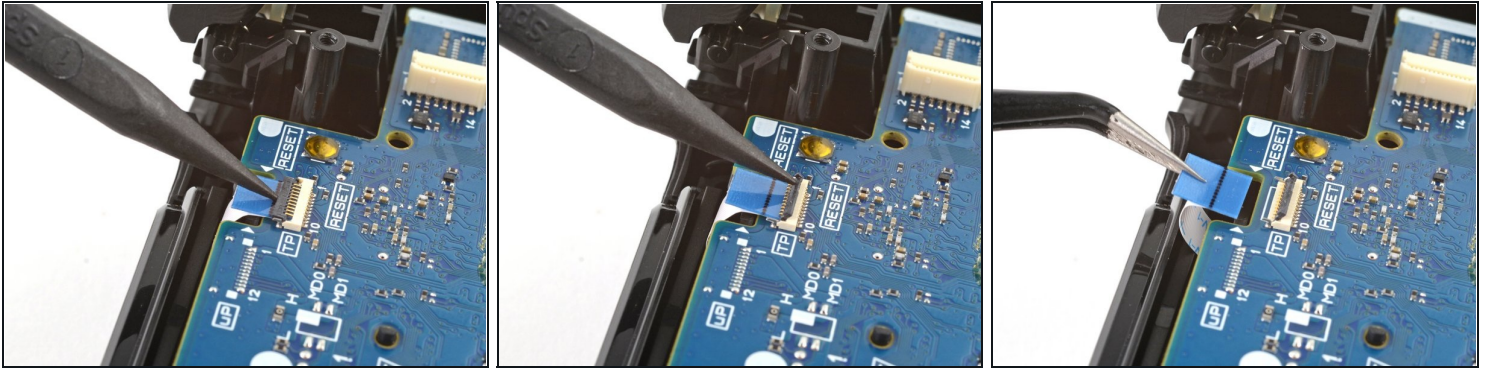

- Use the point of your spudger to flip up the locking flap securing the touch pad cable [ZIF connector](#).
- Use [tweezers](#) or your fingers to disconnect the cable using its blue pull tab.

## Step 19 — Unfasten the motherboard

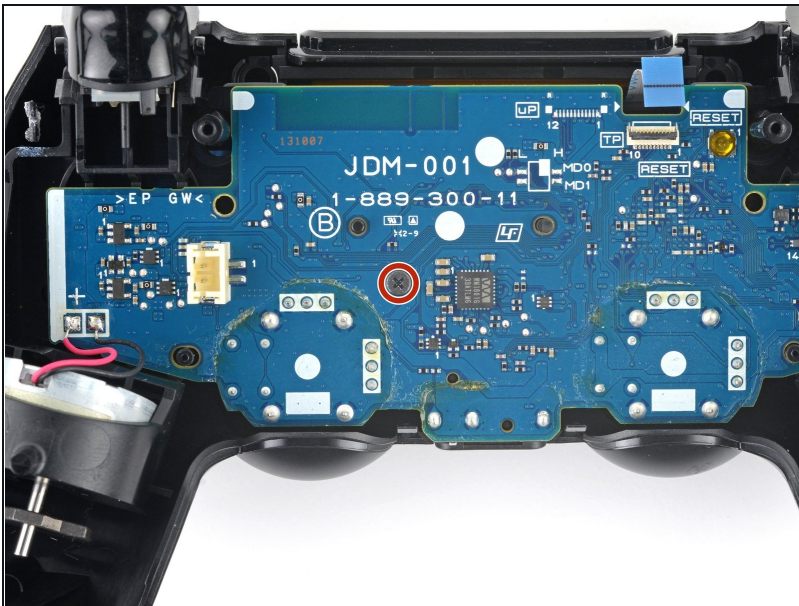

- Use your Phillips screwdriver to remove the 6.4 mm screw securing the motherboard.
- ★ During reassembly, hold the motherboard tight to the front case before fastening it. Test each button to ensure the silicone button pads are properly aligned. If each button presses as expected, fasten the motherboard.



## Step 20 — Remove the midframe



- Grab the midframe by its plastic protrusions or the vibration motors and remove it.
  - ⓘ Be careful not to separate the motherboard from the midframe, as they're only connected to each other by the vibration motor cables.
- ☑ During reassembly, take your time positioning the midframe. Use the alignment posts to help guide it into place, and make sure the touch pad cable doesn't become trapped underneath.

## Step 21 — Remove the Share and Options buttons



- Remove the Share and Options buttons from the front case.
- ☑ During reassembly, there's only one way for each button to insert. If one doesn't fit, flip it and try the other recess.



## Step 22 — Remove the silicone button pads



- Remove the three silicone button pads from their buttons in the front case:
  - The squared off pad for the directional pad
  - The rounded pad for the action buttons
  - The small pad for the home button
- If you wish to remove the silicone button pads for the touch pad, Share, and Options buttons, [follow this step](#). Otherwise, continue for the standard set of buttons.
- ☑ During reassembly, align the pads over their cutouts in the front case and apply pressure to secure them. The directional pad and action button pad can be rotated in any direction. Orient the home button pad with the opening of the U-shaped cutout facing the touch pad.

## Step 23 — Remove the remaining buttons



- Remove the directional pad, action buttons, and home button from the front case.
- ★ During reassembly, use the alignment tabs to orient each button into its recess. Each one is keyed specifically for its recess and proper orientation.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before installing.

**To reassemble your device, follow these instructions in reverse order.**

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.