

# Makita GA4030K Armature Replacement

The armature is the spinning component of the electric motor.

Written By: Laura Ann Jagels



## **INTRODUCTION**

This is a guide detailing the steps to replace the armature.



# **TOOLS:**

- Wrench size 10 (1)
- Metal Spudger (1)
- Phillips #2 Screwdriver (1)

## Step 1 — Disk Cover



 Check for the provided lock nut wrench. This is used for loosening the piece that keeps the disk and cover attached.

## Step 2



 Unscrew the handle unit until it is removed completely.





- Hold the black switch located on the front casing.
- Still holding the switch, use the lock nut wrench to loosen the silver disk holding everything in place.
  - Once loose, remove the silver disk and/or your grinding disk.






- Use a Phillips #02 screwdriver to remove the 15 mm pan head screw that holds the cover in place.
- Remove the cover by lining up the knob on the cover with the notch in face plate.

## Step 5 — Back Cover






• Unscrew the 20 mm tapping screw using a Philips #02 screwdriver.

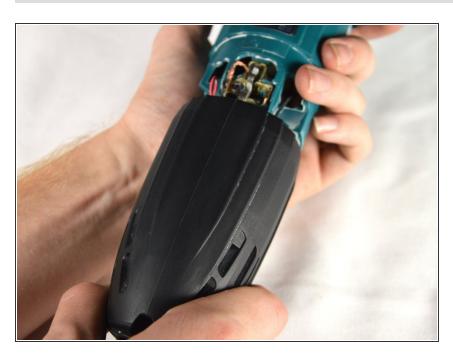

 Slide the back cover down the power cable.

#### Step 7 — Armature

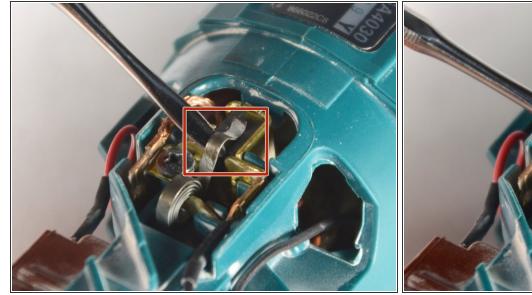



- Use a spudger to gently move the brush holder coil to the side.
  - (i) There are two brushes that are secured by two separate brush holders, one on each side.



Using a metal spudger, remove both carbon brushes (one on each side) by their copper cabling.

## Step 9







- Use a Phillips #2 screwdriver to remove the four 20 mm tapping screws that hold the armature assembly in place.
- Remove the armature assembly





- Unscrew the four 10 mm tapping screws holding the faceplate using a Phillips #02 screwdriver.
- Remove the faceplate.

## Step 11





- Hold the highlighted nut with a size 10 wrench. Unscrew by turning the armature and holding the nut in place.
  - (i) The nut may be difficult to remove.

This document was generated on 2020-11-14 06:15:21 PM (MST).



Remove the armature.

To reassemble your device, follow these instructions in reverse order.