

iPhone 4S SIM Card Replacement

Replace the SIM card in your iPhone 4S.

Written By: Walter Galan



INTRODUCTION

Replacing the SIM card in your iPhone 4S is easy. All you will need is an SIM card eject tool or a small paper clip. Follow this guide to replace or remove your SIM card.



TOOLS:


SIM Card Eject Tool (1)

Step 1 — SIM Card



- Use a SIM card eject tool or a paperclip to eject the SIM card and its holder.
- This may require a significant amount of force.
- Remove the SIM Card tray assembly from the iPhone.

Step 2

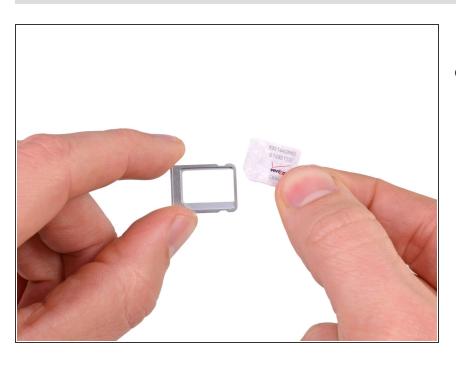

 Remove the SIM card from its recess in the SIM card tray.

This document was generated on 2020-11-13 05:27:45 PM (MST).

To reassemble your device, follow these instructions in reverse order.