



# Installing PowerBook G4 Aluminum 12" 1-1.5 GHz EMI Finger


## Tools used in this guide

- [Coin](#)
- [Phillips #00 Screwdriver](#)



## Step 1 - Battery

- Use a coin to turn the battery locking screw 90 degrees to the right.
- Lift the battery out of the computer.

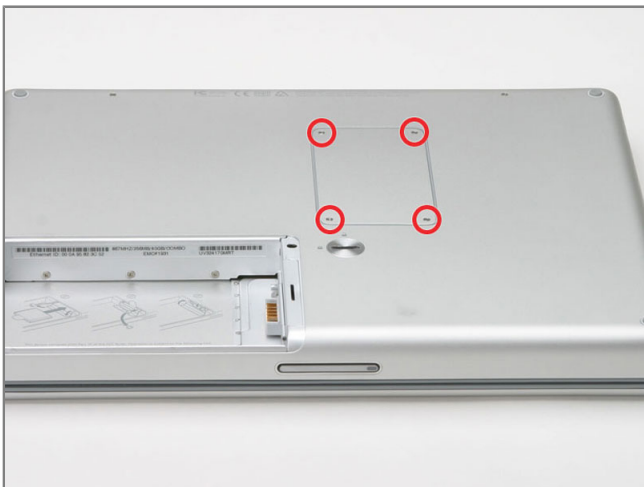

## Step 2 - EMI Finger

- Remove the four Phillips screws from the memory door.
- Slide the memory door away from the memory compartment.



### Step 3

- Remove the long black Phillips screw next to the memory card.
- Remove the small EMI finger beneath the black screw.