



Installing PowerBook G4 Aluminum 12" 1-1.5 GHz EMI Finger

Tools used in this guide


- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Small metal finger located beneath the memory door.



Step 1 - Battery

- Use a coin to turn the battery locking screw 90 degrees to the right.
- Lift the battery out of the computer.

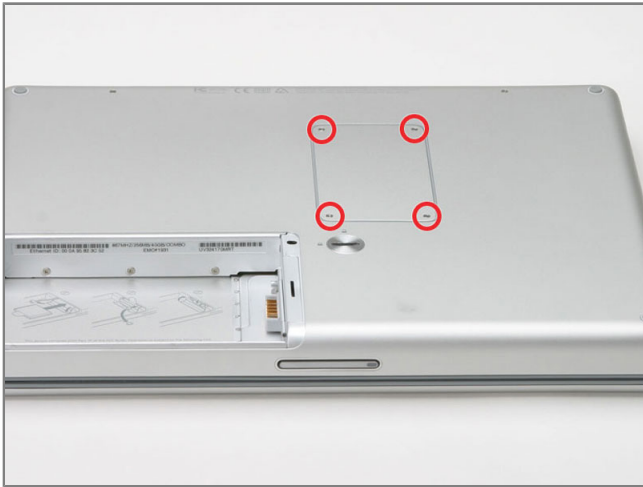

Step 2 - EMI Finger

- Remove the four Phillips screws from the memory door.
- Slide the memory door away from the memory compartment.



Step 3

- Remove the long black Phillips screw next to the memory card.
- Remove the small EMI finger beneath the black screw.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 14, 2010.