




Installing PowerBook G4 Titanium Mercury Keyboard

Parts relevant to this guide

- [G4 Titanium Mercury Keyboard](#)

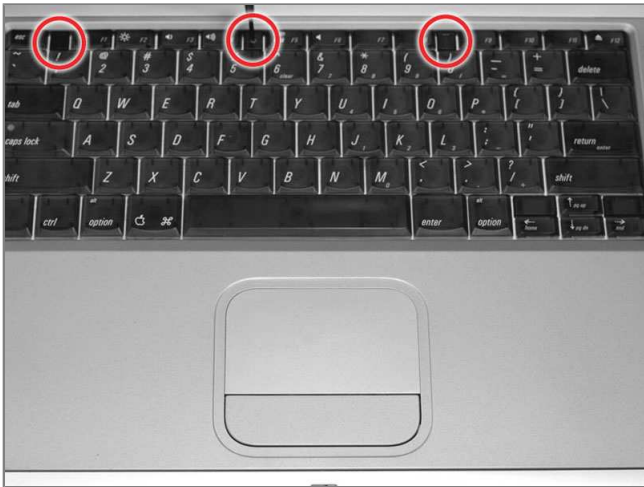

Step 1 - Keyboard

- Remove the battery.
- Turn the keyboard locking screw so that it is parallel to the space bar.
- Pull the keyboard release tabs toward you and lift up on the keyboard until it pops free.



Step 2

- Rest the keyboard face down on the trackpad area.
- Disconnect the keyboard connector from the logic board.



Step 3

- Your laptop should look approximately like this.

G4 Ti Mercury Screw Guide

