



# Installing PowerBook G3 Lombard Keyboard

Author: iRobot

## Parts relevant to this guide


- [G3 Lombard Keyboard](#) (1)

Replacing this keyboard is easy. It requires no tools, and takes only a few minutes.



## Step 1 — Keyboard

- Turn the computer so that the ports are facing you.
- If the keyboard is locked, open the port cover and turn the keyboard locking screw until the keyboard is unlocked.

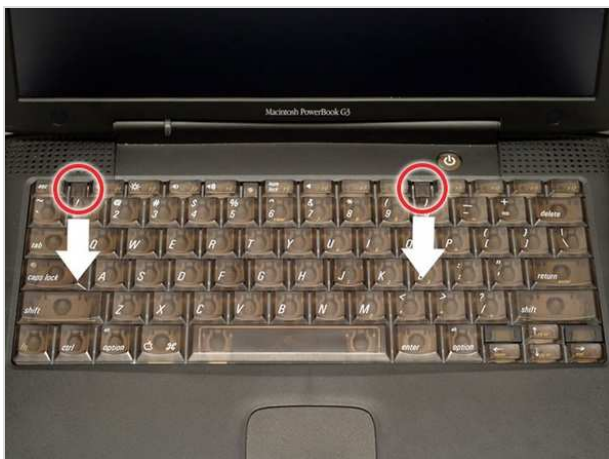

## Step 2

- Pull the keyboard release tabs toward you and lift up on the keyboard until it pops free.
- Make sure you have removed the laptop battery and CD/DVD module from the expansion bays before proceeding.





## Step 3

- Lift the keyboard out by pulling it up and away from you. Rest the keyboard, face down, on top of the trackpad.
- In order to replace the keyboard, you must first remove the modem.




To reassemble your device, follow these instructions in reverse order.


This document was last generated on Feb 23, 2012.


# G3 Lombard Screw Guide





↓


  
Heat Shield  
3 Phillips


  
Modem  
2 Phillips

  
HD Replacement  
4 T8 Torx

  
Display  
4 T8 Torx

  
Upper Case (top)  
5 T8 Torx

  
Upper Case (top)  
2 T8 Torx

  
Upper Case (bottom)  
5 T8 Torx

↙ ↘





To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.


If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.


Due to model variations, the screws you remove may differ slightly from this guide.


↓


  
Upper Case (bottom)  
2 T8 Torx


  
Upper Case (top)  
4 T8 Torx

  
Power Card  
2 T8 Torx

  
Framework  
2 T8 Torx

  
Framework  
1 5mm Standoff

  
PC Card Cage  
2 Phillips

  
PC Card Cage  
2 Phillips

↓