





# Installing MacBook Air Models A1237 and A1304 Hard Drive

Author: Walter Galan

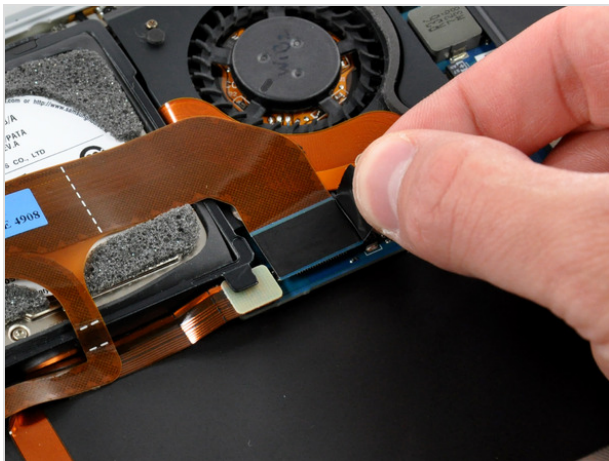


## Step 1 — Hard Drive

- Disconnect the port hatch ribbon cable from the logic board by pulling it straight up by its black pull tab.
- Pull the audio out ribbon cable off the adhesive securing it to the upper case.
- Use a spudger to pry the audio out ribbon cable connector board off the hard drive bracket.

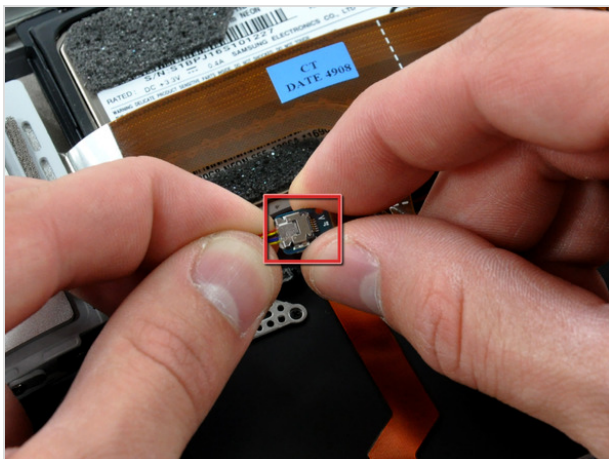

## Step 2

- Disconnect the audio out cable from its socket on the port hatch ribbon cable.

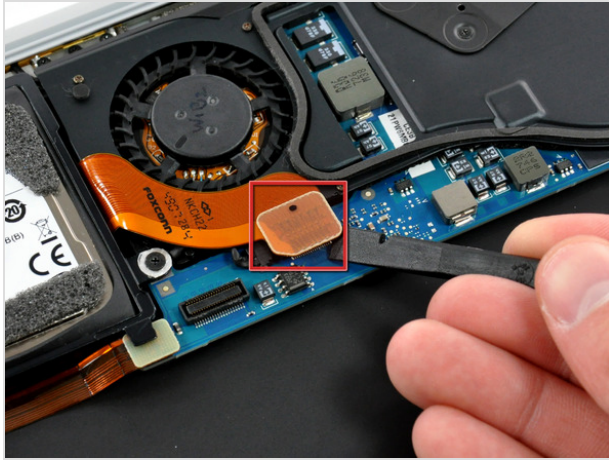

### Step 3

- Use a spudger to pry the hard drive cable connector up off the logic board.



### Step 4

- Use the sharp end of a spudger to de-route the microphone cable from the hard drive bracket.
- Remove the cosmetic screw cover from the adhesive securing it to the hard drive bracket.



### Step 5

- Remove the four Phillips screws securing the hard drive assembly to the upper case.



## Step 6

- Lift the hard drive assembly out of the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Feb 27, 2012.